






尺寸：66*90mm 风琴折，单黑印刷

<div></div> <div>OneDer S3 Headphone & Loud Speaker</div> <div>USER'S MANUAL</div>	<div>尊敬的顾客： 您好!感谢您购买OneDer S3蓝牙耳机音响， 为了让您更好地使用本产品，请在操作前认真阅读使用说明书。</div> <div>产品主机及附件 蓝牙耳机音响X1 音频线X1 充电线X1 说明书X1</div> <div>蓝牙连接： 长按5s—断开蓝牙(当重新配对新的设备时)；</div> <div>蓝牙断开： 短按回联设备；</div>	<div>技术参数 输出功率： 音响模式3W*2(CLASS D) 耳机模式： 500mW2(CLASS AB) 信噪比： 音响模式>90dB 耳机模式： > 95dB 失真度： 音响模式<3% 耳机模式： <1% 播放时间： 耳机模式约14小时,音响模式约6.5小时,播放时间取决于音量。 喇叭规格： 40, 3w, Φ40mm 电池规格： 600mAh 蓝牙版本： 5.0 蓝牙距离： >10M FM频段： 87.5-108MHz 频率响应： 20Hz-18KHz 充电参数： DC 5V (> 300mA) 充电时间： 4小时</div>	<div>蓝牙连接 1.出厂设置开机后进入全自动蓝牙配对模式,白色指示灯快闪。 2.打开手机、iPad、PC或其他蓝牙设备，开启蓝牙功能并搜索"OneDer S3"型号进行配对。 3.连接成功后， 白灯快闪2s后,开始播放音乐。 自动关机 当本机在待机状态时10分钟后会自动关机。 (自动关机后本机无功耗) 充电 “请勿使用未取得安全认证,标称电压不是5V的充电器(请按照本机充电电压规格进行充电，否则本机会自动开启电路保护终止充电) 1.开机状态,如本机语音提示电量低， 请尽快插电。 2.充电时红灯亮。红灯熄灭， 绿灯亮时表示已充满电。 多种音效 使用时在耳机模式下,短按EQ键,听到音效提示音表示已切换到另一种音效模式 (共3种音效模式): 1.正常模式(高中低音均衡); 2.高解析度模式(人声清晰)</div>	<div>3. 重低音模式(浑厚、澎湃) 注:本机自带记忆功能,再次开机将使用上次音效模式;音响模式无EQ切换功能。 复位 复位按键位于AUX插孔内,当耳机于某种情况下出现内部程序控制错乱时,需重启系统激活,可使用细小针状物伸入AUX插孔内按复位键,再重新开机即可。(如电量已耗尽须先充电) 常见问题解答 1. 问:如何连接蓝牙? 答:S3开机后,白灯闪表示已启动蓝牙模式,使用设备搜索型号“OneDer S3”进行配对,连接成功后,白灯会快闪2s。 2. 问:可以连接电脑/平板/PS4吗? 答:只要该设备有蓝牙和音频输出功能,即可连接使用。 3. 问:可以使用耳机讲电话吗? 答:可以,S3蓝牙耳机音响有内置麦克风,可支持通话。</div> <div>ONE-YEAR WARRANTY</div>
---	--	--	--	---

<div>Product overview</div> <div></div> <div>Headphone Mode When earmuffs are twisted inward direction, the headphone is activated.</div> <div>Speaker Mode When earmuffs are twisted outward direction, speaker mode is activated.</div> <div>Foldable design The earmuffs can be folded inward to be compact and easy to carry.</div> <div>Buttons And Functions ① Power on/off: long press for 3 seconds to turn on/off. Short press to shift modes. ② EQ: playing tracks under Headphone Mode. Short press to shift EQ. ③ Indicator: it is on white when the headphone is on; it is on red while charging and turns to green where the headphone is fully charged. ④ Type C port-DC 5V in. ⑤ Aux in port: built-in reset button. ⑥ Short press— volume up; long press for 3 seconds—previous track: ⑦ Play/Pause;</div>	<div>In Bluetooth mode: Connected one device to connect with a new device, long press for 5 seconds to disconnect the connected device; No device connected: short press to connect the last connected device; When the phone calls: short press to answer; long press for 3 seconds to reject; During the call: short press to cancel. Reject the call: short press to hang off; long press for 3 seconds to choose the call hearing and talking via cell-phone or this headphone. ⑧In FM mode: Long press for 3 seconds to scan and save FM channels (Short press to stop scanning). ⑧Short press —volume down; long press for 3 seconds—next track.</div>	<div>Bluetooth Connection 1. S3 can automatically connect to phone when turn on and the white indicator light will flash. 2. Turn on your phone, iPad, PC or other devices then turn on Bluetooth function and search the model number “OneDer S3”. 3. After connecting successfully, the white light will flash twice at an interval of 2 seconds then you can play music.</div> <div>Power off Automatically It will power off automatically while there is no operation in 10 minutes.</div> <div>Charging *Do not use a charger which is no 5V and without safety certification, otherwise it will stop charging(it has charging protection circuit). 1. When it is power on, if there is a voice indicates the power is low. Please charge the machine as soon as possible. 2. The indicator light is always red while charging and it will turn to green when full of power.</div>	<div>Sound Effects In headphone mode, short press EQ button to hear the sound prompt. There are 3 different sound effects. 1. Normal sound effect (equal treble, middle and bass) 2. Bass sound effect (super bass) 3. High definition sound effect (clear voice) Note: this headphone will remember the sound effect you choose last time when you power on again.</div> <div>Reset The Reset button is in the AUX port. If the headphone is disordered you can use a small needle to reach into it to press the Reset button inside. Then restart the machine. (if the battery is out of power, please charge first)</div> <div>FAQ Q1: How to pair the Bluetooth? A: Power on the S3 headphone speaker, the white indicator will flash then turn on the Bluetooth of your device, search and select "OneDer S3". The white light will flash twice at an interval of 2s when pair successfully.</div>	<div>Q2: Can it be connected with laptop, iPad, or PS4? A: The headphone can be compatible with all the devices with Bluetooth function. Q3: Can I make phone calls via headphone? A: Yes, S3 is with built-in mic and supports hands-free function.</div> <div>Safety Instructions 1. Please fully charge this headphone before first time to use. 2. Please, charge this headphone at least once every 3 months to keep battery in good condition. 3. To protect your ear, please do not use this headphone long time with high volume. 4. Do not use the machine in high temperature, damp, dusty environment. 5. Do not drop the machine or collide with hard objects. It will damage this headphone. 6. The machine cannot touch liquid.</div>	<div>IF THERE IS ANY QUESTION PLEASE FILL IN THE FEEDBACK</div> <div>FEEDBACK ONLINE WWW.ONEDER.HK/FEEDBACK</div> <div>QR</div> <div>SCAN THE QR ODE</div> <div></div>
--	--	--	--	---	---

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.