



**ILLUSTRATED INSTRUCTIONS**

- Turn power switch ON with LIGHTS ONLY or ON with LIGHTS and SOUND.
- Use the forward/reverse and left/right buttons on remote to control the vehicle.

**FORWARD** **REVERSE**

**PERFORM ACROBATIC TUMBLE**

- Use forward/reverse and left/right joysticks for vehicle control.
- Use sound button on remote to change the music or make the sounds.
- When finished turn the car OFF.

**FORWARD & FRONT WHEEL (ROTATING CLOCKWISE)**

**FORWARD & FRONT WHEEL (ROTATING COUNTER-CLOCKWISE)**

**WARNING**

- This toy is intended for use by children ages 5 and up. Please review this manual with your child. Adult supervision suggested.
- Do not operate on streets or roads.
- Keep away from water.
- Avoid use on carpet, sand and dust.
- Avoid bumping the vehicle into people, animals or objects.

**CHANGING THE BATTERY**

- Make sure the power switch is OFF.
- Unscrew and remove the battery door.
- Replace batteries as shown and replace the door.
- When car slows or lights become dim, replace the batteries again.

**OPERATION**

- Turn power switch ON.
- Use forward/reverse and left/right joysticks for vehicle control.
- Use sound button on remote to change the music or make the sounds.
- When finished turn the car OFF.

**CAR** On with Lights & Sound OFF with Lights Only

**REMOTE** On with Lights & Sound OFF with Lights Only

Vehicle uses 4 AA (not included) batteries (not included).  
Controller uses 2 AA (not included) batteries (not included).

**WARNING:**  
CHOKING HAZARD - SMALL PARTS NOT FOR CHILDREN UNDER 3 YEARS

**MADE IN CHINA**

**ILLUSTRATED INSTRUCTIONS**

- Turn power switch ON with LIGHTS ONLY or ON with LIGHTS and SOUND.
- Use the forward/reverse and left/right buttons on remote to control the vehicle.

**FORWARD** **REVERSE**

**PERFORM ACROBATIC TUMBLE**

- Use forward/reverse and left/right joysticks for vehicle control.
- Use sound button on remote to change the music or make the sounds.
- When finished turn the car OFF.

**FORWARD & FRONT WHEEL (ROTATING CLOCKWISE)**

**FORWARD & FRONT WHEEL (ROTATING COUNTER-CLOCKWISE)**

**WARNING**

- This toy is intended for use by children ages 5 and up. Please review this manual with your child. Adult supervision suggested.
- Do not operate on streets or roads.
- Keep away from water.
- Avoid use on carpet, sand and dust.
- Avoid bumping the vehicle into people, animals or objects.

**CHANGING THE BATTERY**

- Make sure the power switch is OFF.
- Unscrew and remove the battery door.
- Replace batteries as shown and replace the door.
- When car slows or lights become dim, replace the batteries again.

**OPERATION**

- Turn power switch ON.
- Use forward/reverse and left/right joysticks for vehicle control.
- Use sound button on remote to change the music or make the sounds.
- When finished turn the car OFF.

**CAR** On with Lights & Sound OFF with Lights Only

**REMOTE** On with Lights & Sound OFF with Lights Only

Vehicle uses 4 AA (not included) batteries (not included).  
Controller uses 2 AA (not included) batteries (not included).

**WARNING:**  
CHOKING HAZARD - SMALL PARTS NOT FOR CHILDREN UNDER 3 YEARS

**MADE IN CHINA**

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.