

PMS7458

PMS457


WHITE

PMS5523

PMS 193

PMS 288

INSIDE TRAY
PMS7458

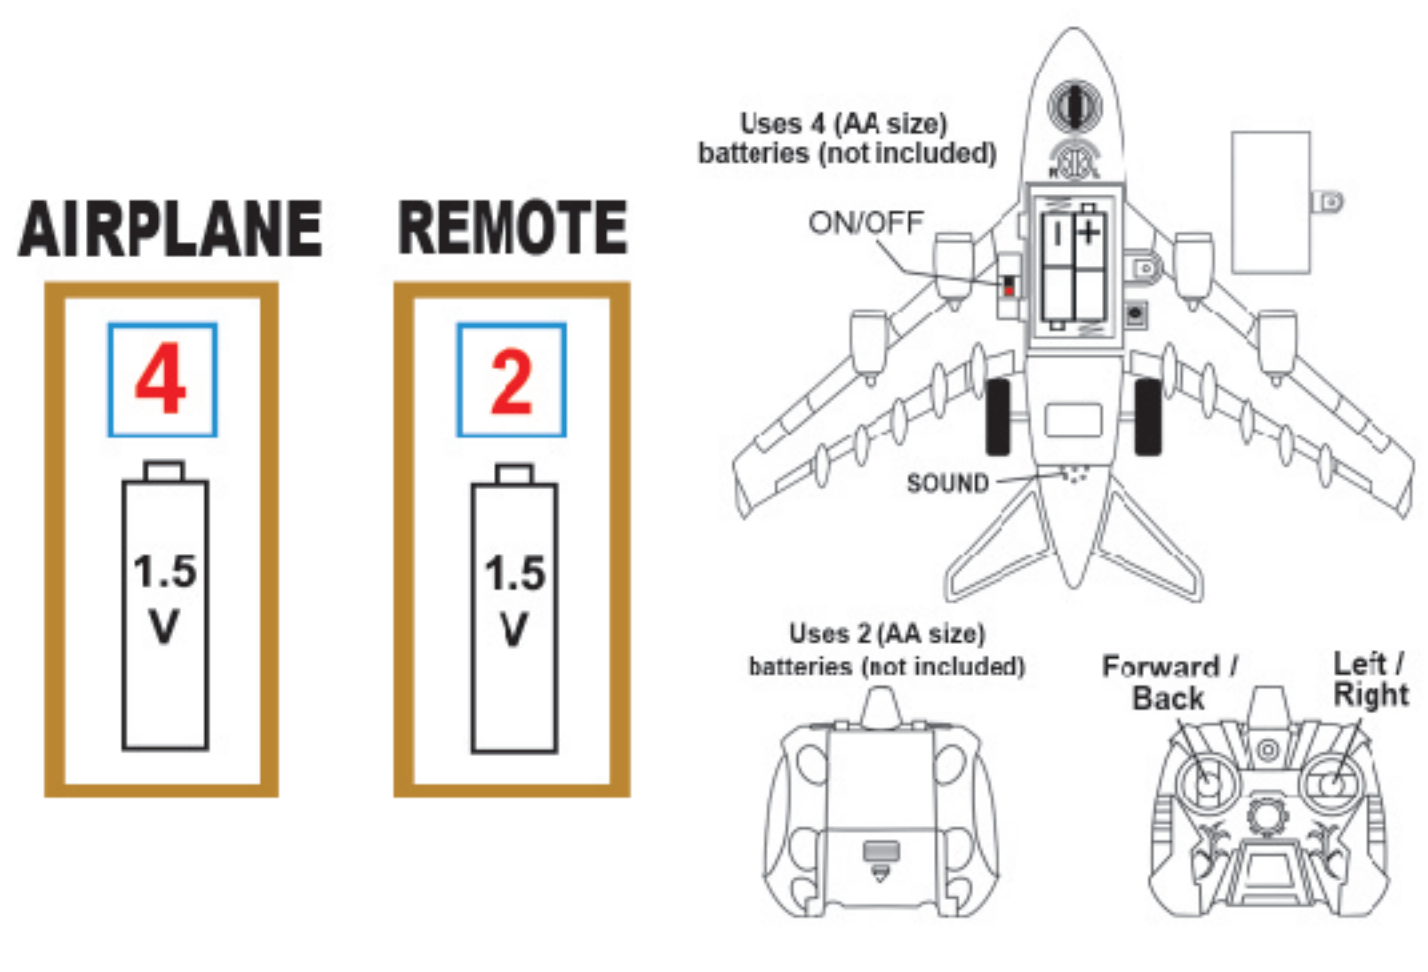

AIRPLANE BATTERY INSTALLATION
 1. Make sure the ON/OFF power button on plane bottom is in the off position, then remove the battery door.
 2. Match positive / negative indicators to install batteries.
 3. Install battery, cover battery door.
 4. When the plane speed decreases, repeat the procedure with new batteries.

REMOTE CONTROL BATTERY INSTALLATION
 1. Take out the battery door.
 2. Match positive / negative polar indicators to install batteries.
 3. Replace the cover.
 4. When light indicator becomes dim, replace with new batteries.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.