



ON SEMICONDUCTOR SPS-UHF RFID READER/HUB





ON SEMICONDUCTOR  
SPS-UHF RFID READER/HUB







SPSDEV1-8

SPS UHF READER / HUB

ANT-1 ANT-2 ANT-3 ANT-4 ANT-5 ANT-6 ANT-7 ANT-8

ERROR  
ACTIVE 15V

ON/OFF

DCIN  
7V - 41V