

 
## Prime-A1

English Version



 Easyfone

Prime A1 User manual	-----P.0 - P.65
Schnellstartanleitung	-----P.66 - P.69
Manuel de démarrage rapide	-----P.70 - P.73
Manual de inicio rápido	-----P.74 - P.77
Manuale di avvio rapido	-----P.78 - P.81

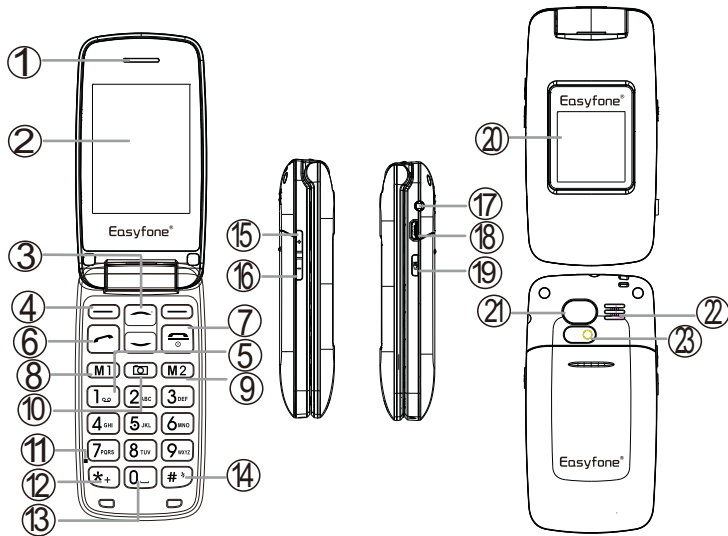

1	Earpiece/Receiver	2	Display
3	Arrow Buttons	4	Left Selection Button
5	Voicemail	6	Call button
7	End call/Power on/off	8	M1 shortcut
9	M2 shortcut	10	OK / Pause / Play/Take photo
11	Microphone	12	International prefix/Symbols
13	Blank Button	14	Silent/Input method
15	Volume control+	16	Volume control-
17	Headset socket	18	Charging socket
19	Torch shortcut	20	External display
21	Assistance button	22	Loudspeaker

The items supplied with your phone might vary depending on the software and accessories available in your region or offered by your service provider. You can obtain additional accessories from your local Easyfone dealer. The supplied accessories provide the best performance with your phone.

## Contents

Congratulations on your purchase	06
Get started	06
Insert SIM card, memory card and battery	06
Charge the phone	08
Get to know your phone	10
User level settings	10
Beginner mode	10
Advanced mode	10
Turn the phone on and off	11
Start-up wizard	11
Navigate the phone	12
External display	13
Enter text	14
Hearing aid compatible	15
Phone settings (Time/Date/Language)	16
Calls	18
Make a call	18
Call from the contacts	18
Receive a call	19
Volume control	19
Call options	20
SOS calls	21
Call log	21
Call settings (Advanced mode)	22
Contacts	25
Add contact	26
Manage phonebook contacts	26
Others	28

ICE (In Case of Emergency) ♥	29
Assistance button ♥	30
Make an assistance call	30
SOS Button Active	32
SOS Number list	32
Speed Dial	33
Emergency SMS	33
Messages	34
Create and send text message (SMS)	34
Create and send picture message (MMS)	34
Create and send e-mail	35
Voice mail service(Advanced mode)	38
Message settings(SMS,MMS,Email)	39
Camera	44
Camera (take photos)	44
Camera settings	45
Image viewer	46
Connectivity	47
Bluetooth®	47
Network account (Advanced mode)	48
GPRS Service and Data connection setting	49
Network selection(Advanced mode)	50
File manager(My Files)	50
Connect the phone to a computer	51
Sound & Display	52
Audio setup	52
Ringtone setup	53
Ringtone volume	53
Silent	54
Alert type	54

Extra tone	54
Main menu	55
Wallpaper	55
Idle display	55
LCD backlight	55
Brightness	55
Additional functions	56
FM radio	56
Torch	58
Calculator	58
Games	59
Alarm	59
Calendar	60
Reset settings	61
Troubleshooting	61
Phone cannot be switched on	61
Failure to charge the battery	62
Standby time decreases	62
Failure to place or receive calls	62
PIN code not accepted	62
SIM card error	63
Failure to connect to network	63
Weak signal	63
Echo or noise	63
Failure to add a contact	63
Failure to set a function	63
SIM card cannot be inserted	64

Accidentally press the SOS Button	-----64
Failure to set voice mail service	-----64
Unable to send or receive Picture message/MMS with sim card	----64
Failure to set Voice mail service	-----64
Failure to send or download MMS	-----65
Safety instructions	-----65



## Congratulations on your purchase

Easily call, send text messages and take and share pictures thanks to widely separated, high contrast keys and a surprisingly large screen for a phone this size. Also has Assistance button and Hearing Aid Compatibility.

 
## Get started

Tip: It is recommended to remove the protective plastic film from the display to enhance the visibility.

### Insert SIM card, memory card and battery

Remove the battery cover

Note! Since the SIM card holder and the memory card holder are located beneath the battery you need to turn off the phone to insert or remove the cards.

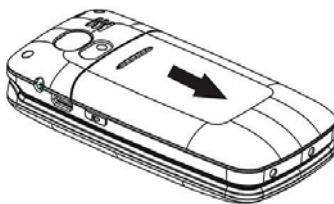


### Insert the SIM card (required) and the memory card (optional)

- Remove the battery if it is already installed.
- Locate the SIM card holder and gently slide the card in the holder.

See the label right next to the holder for guidance on how to insert the card. If you have problem to remove/replace the SIM card, use adhesive tape on the exposed part of the SIM card to pull it out.

- Locate the SD card holder and gently slide the card in the holder.

 
Note! The device works with or without a SD card installed.

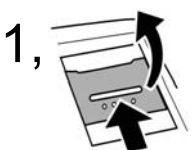

1, Locate the SIM card holder. Press the card holder's lid towards the flashlight button until it "clicks"



 2, Lift the lid to an upright position. Place the card in the compartment. Make sure the contacts are facing downwards and the cut-off corner is placed as shown on the drawing. Hold the card in the correct position and close the lid.

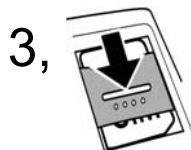

3, Carefully press down and slide the lid away from the flashlight button until it "clicks" in-to place.

Tip: Take care not to scratch or bend the contacts on the memory card or on the SIM card when inserting them into the card holders.

#### **IMPORTANT!**

This device accepts Micro SIM or 3FF SIM card. Use of incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card.

#### **IMPORTANT!**

 
Use only compatible memory cards with this device. Compatible card type: microSD, microSDHC.

Incompatible cards may damage the card itself, the device and corrupt any data stored on the card. Depending on the market some phones may have a pre-installed memory card.

insert the battery and replace the battery cover  
Insert the battery by sliding it into the battery compartment with the contacts facing up- wards to the left. Replace the battery cover.

**Note**

The battery may be covered with an insulating film. Remove it before turning on the phone or charger.

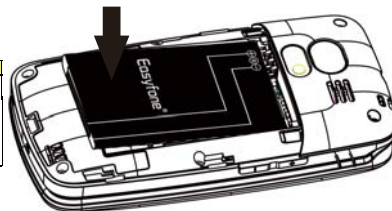


**Tips:** Nokia BL-4C battery, Easy to find spare battery on Amazon and local shop.


### Charge the phone

 
**CAUTION**

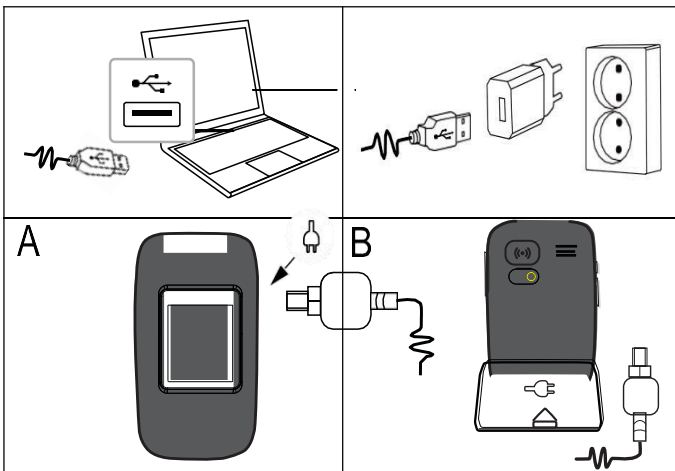

Only use batteries, chargers and accessories that have been approved for use with this particular model. Connecting other accessories may be dangerous and may invalidate the phone's type approval and warranty.



When the battery is running low,  is displayed and a warning signal is heard.

1. Connect the mains adapter to a wall socket and to the charging socket  (A) or place the device in the cradle (B).

Alternatively connect the cable to the charging socket  on the phone and to a USB port on a computer.

The battery charge indicator is animated while charging. It takes approximately 3 hours to fully charge the battery. When the charger is connected to the phone,  is displayed briefly, and  when it is disconnected.

2. When charging is completed,  is displayed on the screen.

If the phone is turned off when the charger is connected to the phone only the battery charge indicator will be shown on the display.

Note! To save power the LCD backlight goes off after a while. Press any button to illuminate the display. Full battery capacity will not be reached until the battery has been charged 3–4 times. Batteries degrade over time, which means that call time and standby time will normally decrease with regular use.

### **Save energy**

When you have fully charged the battery and disconnected the charger from the device unplug the charger from the wall socket

## **Get to know your phone**

### **User Level Settings**

This phone support two different use level for different user groups:




Beginner mode(Default): For User who want a simply operation system, no need to settings much.

Advanced mode: For user who want more feature customization.

### Set User level settings

1. Press Menu → Settings → User level settings
  - Beginner mode
  - Advanced mode

### Turn the phone on and off

1. Press and hold  3-5s on the phone to turn it on or off.
2. If the SIM card is valid but protected with a PIN code (Personal Identification Number), PIN is displayed. Enter the PIN code and press OK (  upper left corner of keypad). Delete with Clear (  upper right corner of keypad).

Note! If PIN and PUK codes were not provided with your SIM card, please contact your service provider.

Attempts: # shows the number of PIN attempts left. When no more attempts remain, PIN blocked is displayed. The SIM card must then be unlocked with the PUK code (Personal UnblockingKey).

1. Enter the PUK code and confirm with OK.
2. Enter a new PIN code and confirm with OK.
3. Re-enter new PIN code and confirm with OK.

### Start-up wizard

When starting the phone for the first time, you can use the Start-up wiz-

ard to set some basic settings.

- Press Yes to change or No if you do not want to change.



 
The default language is determined by the SIM card. See Phone settings,

p.8 on how to change language, time and date.

### **Navigate the phone**

#### **Standby (idle mode)**

When the phone is ready to use, and you have not keyed in any characters, the phone is in standby.




- Press  to return to standby mode.
- Press left selection button  to access the phone Menu or right selection button  to access your saved contacts in the phonebook.

Tip: You can always press  to return to standby.

#### **Scroll**

- Use the arrow buttons  /  to scroll in menus.

#### **Step-by-step instructions**

The arrow (  ) indicates next action in step-by-step instructions. To confirm an action, press OK. To select an item, scroll or highlight the item using  /  and then press OK.

Example:


• Press Menu → Contacts → Options → New

To perform the example on your Prime-A1 you should do the following:

1. Press Menu, scroll to **Contacts** and press OK.
2. Select -New contact- And Select Phone/SIM

### External display

The external display shows the time, a number of status indicators, and notifications for incoming calls. If the external display times out, press and hold any of the side keys +/- to turn it back on.



Enter text 

Enter text manually

Select character

- Press a numerical key repeatedly until the desired character is shown. Wait a second before entering the next character from same numerical key.

Special characters

1. Press \* for a list of special characters.
2. Select the desired character with  /  and press OK to confirm.

Move the cursor within text

- Use  /  to move the cursor within the text.



Upper case, lower case and numerals

- Press # to choose between upper case, lower case and numerals.

See Input mode, p.14

Change writing language






1. Press and hold # for a list of available languages.
2. Select language with  /  and press OK to confirm.

### Enter text

In some languages you can use an input method which uses a dictionary to suggest words.

- Press each key once, even if the displayed character is not the one you want. The dictionary will suggest words based on the keys you have pressed.

Example

1. Press 3, 7, 3, 3 to write the word “Free”. Complete the word before looking at the suggestions.
2. Use  /  to view the suggested words.
3. Press Select and continue with the next word. Alternatively, press  to continue with the next word.
4. If none of the suggested words are correct, use manual input mode. To temporarily switch between predictive text and manual input mode, Press # to select.

### Input mode

- Press # to change input mode. The icon on the top left of the display indicates the input mode.

<input checked="" type="checkbox"/>	En	Sentence case with predictive text
<input checked="" type="checkbox"/>	EN	UPPER CASE with predictive text
<input checked="" type="checkbox"/>	En	lower case with predictive text
	Abc	Sentence case
	ABC	UPPER CASE
	Abc	lower case
	123	Numerals


### **Hearing aid compatible**

This phone is hearing aid compatible. Hearing aid compatibility is not a guarantee that a specific hearing aid will work with a specific phone. Mobile phones contain radio transmitters that may interfere with hearing aid performance. This phone has been tested for use with hearing aids, for some of the wireless technologies that it uses, but there may be some newer wireless technologies that have not been tested yet for use with hearing aids. To ensure that a specific hearing aid works well with this phone, test them together before making a purchase.

The standard for hearing aid compatibility contains two types of ratings:

- M: To use your hearing aid in this mode, make sure that your hearing aid is set to "M-mode" or acoustic coupling mode, and position the phone's receiver near the hearing aid's built-in microphone. For the best results, try using the phone in different positions relative to your hearing aid—for example, placing the receiver slightly above the ear may result in better performance for hearing aids with microphones positioned behind the ear.

- T: To use your hearing aid in this mode, make sure that your hearing aid is set to "T-mode" or telecoil coupling mode (not all hearing aids have this mode). For the best results, try using the phone in different positions relative to your hearing aid—for example, placing the receiver slightly below or in front of the ear may result in better performance.

See also Audio setup , p.52  on how you can adjust the audio settings.

### **Phone settings**

#### Time & date

Set the time and date

1. Press Menu → Settings → Phone settings → Time & date:

- Set time to enter the time (HH:MM).
- Set date to enter the date (DD/MM/YYYY).

2. Press Done to confirm.

Set the time and date format

1. Press Menu → Settings → Phone settings → Time & date → Set format:

- Time format → 12 hours or 24 hours.
- Date format and select the desired date format.

2. Press OK to confirm.

Set the time and date format



1. Press Menu → Settings → Phone settings → Time & date → Set format:

- Time format → 12 hours or 24 hours.

- Date format and select the desired date format.
2. Press OK to confirm.

### **Language**

The default language for the phone menus, messages, etc. is determined by the SIM card. You can change this to any other language supported by the phone.

1. Press Menu → Settings → Phone settings → Language
2. Use  /  to select a language.
3. Press OK to confirm.

### **Change PIN code** (Advanced mode)

1. Press Menu → Settings → Security → Passwords → PIN.
2. Enter current PIN code and press OK.
3. Enter new PIN and press OK. Repeat to confirm.

### **Phone lock** (Advanced mode)

The phone lock protects your phone from unwanted usage. If activated, phone is locked after restart and the phone code needs to be entered to unlock.

1. Press Menu → Settings → Security → Phone lock. (Advanced mode)
2. Select On to enable, or Off to disable.
3. Press OK to confirm.

Note! You need to enter current phone code. Default phone code is 1234.

### **Blacklist** (Advanced mode)

You can compile a blacklist of phone numbers so that any phone number

on your blacklist is blocked when calling or texting you.



Activate the function, add, remove or edit blacklist numbers

1. Press Menu → Settings → Security → Blacklist. (Advanced mode only)
2. Select Activation.
  - On to activate the function.
  - Off to deactivate the function.
4. Select Number list.
5. **Options** → **Import contacts** to add a contact from the phonebook.  
Alternatively, press Manual to add names or numbers manually.
6. Select the phone number and press Edit or Unblock.
7. Press OK to confirm.

Tip: When activated, you can add numbers directly from your call log, just press Options → Block → Yes.



## Calls


Make a call


1. Enter the phone number including the area code. Delete with Clear.
2. Press  to make a call. Press Abort to cancel the call.
3. Press  to end the call.

Tip: For international calls, always use + before the country code for best operation. Press \* twice for the international prefix +.

**Call from the contacts**

1. Press Contacts to open the phonebook.
2. Use  /  to scroll through the phonebook, or quick search by


pressing the key corresponding to the first letter of the entry, see Enter text , p. 14.


3. Press Options  Call to dial the selected entry. If needed, select the number.

Alternatively, press  to dial.

4. Press Abort or  to cancel the call.

### **Receive a call**

1. Open the flip and press  to answer.

Alternatively press Silent to switch off the ringsignal or press /close the flip to reject directly (busy signal).

2. Press  to end the call.


To answer an incoming call by opening the flip, see Answer mode, p. 13.

Tip: Press and hold +/- to temporarily switch off the ringsignal without opening the flip.

### **Volume control**

During a call

- Use the side buttons +/- to adjust the sound volume. The volume level is indicated on the display.

If you use a hearing aid or have hearing difficulties when using the telephone in a noisy environment, you can adjust the phone's audio settings, see Audio setup , p.52. 

Silent

Silent is a fixed profile with Keypad tone, Message tone and Ringtone disabled, while Vibration, Tasks, Daily reminder and Alarm are unchanged.

- Press and hold shortcut button # to activate or deactivate silent mode.

### **Headset**


When a headset is connected, the internal microphone in the phone is automatically disconnected. If available, use the answer key on the head- set to answer and end calls.



### **CAUTION**

Using a headset at high volume may damage your hearing. Adjust the volume level carefully when using a headset.

### **Call options**

During a call the selection buttons1 (  ) give access to additional functions.

#### **Menu (left selection button)**

- Hands-Free To hands-free(Speaker) with current call
- Connect to BT headset
- Switch to hold/Retrieve with current call
- Contacts to search the phonebook.
- Messages to write or read text messages.
- Mute to disable the microphone.

#### **Hands-Free(right selection button)**

The loudspeaker allows you to speak without holding the phone close to the ear.


1. Press Hands-Free to activate. Speak clearly into the phone microphone

at a maximum distance of 1 m. Use +/- to adjust the loud- speaker volume.

2. Press Earpiece to return to normal mode.


Note! Loud background noises (music, etc.) may interfere with the sound quality.

### **SOS calls**

As long as the phone is switched on, it is always possible to place an SOS call by entering the main local emergency number for your present location followed by .


Some networks accept calls to emergency numbers without a valid SIM card. Contact your service provider for more information.

### **Call log**

Received, missed and made calls are saved in a combined  call log. 20 calls of each type can be stored in the log. For multiple calls related to the same number, only the most recent call is saved.

1. Selection buttons have multiple functions. The current function is shown above the selection button on the display.

1. Press .

Alternatively, press Menu  Call log.



2. Use  /  to select:




Received call



Dialled call



Missed call

3. Press  to call, or Options:

- Call, to call the contact.
- View, to show details for the selected call.
- Send, SMS to send a text message.
- Send, MMS to send a picture message.
- Delete, to delete the call.
- Delete all, to delete all calls in the call log.
- Save, to save the number in the phonebook → Create new → create new contact, or Update update existing contact.

### **Call settings (Advanced mode)**

#### Call time


During a call, the duration of the call is shown. You can check the duration of your calls.

1. Press Menu → Call logs → Call time :

- Last call to show the elapsed time of the most recent call.
- Outgoing calls to show the elapsed time of all made calls.
- Received calls to show the elapsed time of all received calls.
- Reset all → Yes to reset all.

2. Press OK to confirm.

#### Answer mode

1. Press Menu → Settings → Calls Settings → Answer mode:
  - Cover answer → On to answer incoming calls by opening the flip.
  - Any key → On to be able to answer incoming calls by pressing any key (exemption ).
2. Press OK to confirm.

#### Call waiting

You can handle more than one call at a time, put the current call on hold and answer the incoming call. When activated, an alert tone is heard if there is an incoming call while talking.

- During a call, press Options → Answer. Activate call waiting

1. Press Menu → Settings → Call settings →

2. Select Call waiting → Activate.

Press OK to confirm.

Tip: Repeat and select Deactivate to disable call waiting, or Query status to display if call waiting is active or not.

#### Call divert

You can divert calls to an answering service or to another phone number. Set up which calls should be diverted. Select a condition and press OK, then select Activate, Deactivate or Query status for each.

1. Press Menu → Settings → Call settings → Call divert:
  - Voice calls to divert all voice calls.
  - Unreachable to divert incoming calls if the phone is turned off or out of range.
  - No reply to divert incoming calls if unanswered.

- If busy to divert incoming calls if the line is busy.
  - Cancel diverts to cancel all call divert settings.
2. Press OK to confirm.

#### Hide ID

Display or hide your phone number on the recipient's phone when you call.

1. Press Menu → Settings → Call settings → Hide ID:
  - Set by network to use default setting by the network.
  - Hide ID to never show your number.
  - Send ID to always show your number.
2. Press OK to confirm.

#### Call barring

Your phone can be restricted to disallow certain types of calls.

Note! A password is needed to apply call barring. Contact your service provider to get the password.

1. Press Menu → Settings → Call settings → Call barring.
2. Select Outgoing calls:
  - All calls to answer incoming calls but not calling.
  - Internat.calls to block calls to international numbers.
  - Int. except home to block international calls except to the country associated with the SIM card.
3. Press OK to confirm.
4. Select Incoming calls:
  - All calls to call but not to receive incoming calls.

•When roaming to block incoming calls while roaming (operating in other networks).

5. Press OK to confirm.

6. Select Cancel all to cancel all call barring (password needed). Press OK to confirm.

Fixed dial (FDN)

You can limit calls to certain numbers saved on the SIM card. The list of allowed numbers is protected by your PIN2-code.

Note! The PIN2-code is needed to apply fixed dial. Contact your service provider to get the PIN2-code.


1. Press Menu → Settings → Security → Fixed dial:

- Mode → On to enable or Off to disable.


- Fixed numbers → Add and enter the first allowed number.

Alternatively, select an entry and press Options → Add, Edit or Delete.




2. If needed, enter PIN2 and press OK to confirm.

Note! You can save parts of phone numbers. For example, if you save 01234, allows calls to all numbers starting with 01234. It is possible to place an SOS call by entering the main local emergency number followed by  even when fixed dial is activated. When fixed dial is activated you are not allowed to view or manage any phone numbers saved on the SIM card. You are not able to send any text messages either.

## Contacts



The  phonebook can store 300 entries with photo(icon) in each entry.

### **Add contact**

1. Press Menu → Contacts → Options → New .
2. Enter a Name for the contact, see Enter text  , p.14
3. Use  /  to select Mobile, Default ringtones and enter the phone number(s) including the area code.
4. Select E-mail to associate e-mail address to the contact, see E-mail settings, p.36.
5. Select Modifyicon → Edit to associate picture to the contact,
  - Take picture to use the camera to take a picture.
  - Select from album to select an existing picture.
6. Press Save.

Tip: For international calls, always use + before the country code for best operation. Press \* twice for the international prefix +.

### **Manage phonebook contacts**

1. Press Menu → Contacts .
2. Select a contact, then press Options:
  - View to show details for the selected contact.
  - Edit to edit the contact. Use  /  to scroll. Delete with Clear. Press Save when done.
  - Call to call the contact.

- Add to add contact. See Add contact, p.26.
- Send SMS to create text message, see Create and send text message (SMS), p.34.
- Send MMS to create picture message, see Create and send picture message (MMS), p.34.
- Send e-mail to create e-mail message, see Create and send e-mail, p.36.
- Delete to delete the selected contact. Press Yes to confirm or No to abort.
- Delete all → From SIM/From phone to delete all phonebook contacts from the SIM card or phone memory. Enter the phone code and press OK to confirm. The default phone code is 1234.
- Copy all → From SIM to copy all phonebook contacts from the SIM card to the phone memory, or From phone to copy all contacts from the phone memory to the SIM card. Press Yes to confirm or No to abort.
- Others :
- Speed Dial , Add contact to speed dial list

## Others

### Speed Dial

Use M1/M2 and 2–9 to speed dial an entry from standby.

- Press and hold the corresponding key.

Add speed dial numbers

1. Press Menu → Contacts → Options → Others → Speed dial.
2. 2. Select Options → Add and select an entry from the phonebook.
3. Press OK to confirm.
4. Repeat to add speed dial entries for buttons 2–9 and M1/M2


Tip: To edit or delete an existing entry, Options → Edit or Delete.





### Memory status

To check currently Phonebook storage

- Press Menu → Contacts → Options → Others → Memory status

## ICE (In Case of Emergency)

First responders can access additional information such as medical information from the victim's phone  ICE in case of emergency. In the event of a trauma, it is critical to have this information as early as possible to increase the chances of survival. All fields are optional, but the more information provided the better.


1. Press Menu  ICE settings.
2. Use  /  to scroll the list of entries.
3. Press Owner info to add or edit information in each entry, see Enter text , p.14.

### Owner info

- Name: enter your name.
- Birth: enter your date of birth.
- Height: enter your height.
- Weight: enter your weight.
- Address enter your home address.
- Language: enter your preferred language.
- Insurance: enter your insurance provider and policy number.
- ICE contact: add your relationship Name and phone No.to ICE contact.
- Condition: enter any medical conditions or medical devices (e.g. diabetic, pacemaker).




- Allergies: enter any known allergies (e.g. penicillin, bee stings).
  - Blood type: enter your blood type.
  - Vaccination: enter any relevant vaccination.
  - Medication: enter any medication that you are treated with.
  - Other info: enter other information (e.g. organ donor, living will, consent to treat).
4. When done, press Save.


<b>Assistance button</b>	
	<b>CAUTION</b>
<p>When an assistance call is activated the phone is pre-set to handsfree/ speakerphone mode. Do not hold the device near your ear when the handsfree mode is in use, because the volume may be extremely loud.</p> <p>The assistance button allows easy access to contact your predefined help numbers (Number list) should you need help. Make sure that the assistance function is activated before use, enter recipients in the numbers list and edit the text message.</p>	

### Make an assistance call

1. When help is needed, press and hold the assistance button for 3 seconds

The assistance call begins after a delay of 5 seconds. In this time you can prevent a possible false alarm by pressing .

2. An assistance text message (SMS) is sent to all recipients.

3. The first recipient in the list is called. If the call is not answered within 25 seconds, the next number is called. Calling is repeated 3 times or until the call is answered, or until  is pressed.

Note! Some private security companies can accept automatic calls from their clients. Always contact the security company before using their phone number. Programming '999' into the assistance button is blocked.

Tip: The assistance function may be configured so that the recipient of the call must press 0 (zero) to confirm, in order to stop the alarm sequence. See Confirm with "0", p.31.

#### **IMPORTANT!**

Information to the recipient of an assistance call, when Confirm with "0" is activated.

- After receiving the assistance message, each number in the Number list is called sequentially.
- To confirm the assistance call, the recipient needs to press 0.
- If the recipient doesn't press 0 within 60 seconds (after answering) the call will be disconnected and the next number in the sequence will be called.

- If the recipient presses 0 within 60 seconds, the call is confirmed and no further call attempts will be made (assistance sequence interrupted).

### **SOS Button active**

Select how to activate the assistance function using the assistance button.

1. Press Menu → ICE Settings → SOS Button active:
  - On, Normal to press and hold the button for approximately 3 seconds
  - Off, to disable the assistance button.
2. Press OK to confirm

### **SOS Number list**

Add numbers to the list that is called when the assistance button is pressed.

#### **IMPORTANT!**

Always inform recipients in the Number list that they are listed as your assistance contacts.

1. Press Menu → ICE Settings → SOS Number list.
2. Select Empty → Options → contact input → input from the contacts  
 Select Empty → Options → Manual input → input By your hands.
3. Press OK to confirm.

## Speed Dial

Use M1/M2 and 2–9 to speed dial an entry from standby.

- Press and hold the corresponding key.

 
Add speed dial numbers

1. Press Menu → ICE Settings → Speed Dial
2. Select Empty → Options → contact input → input from the contacts  
Select Empty → Options → Manual input → input By your hands.
3. Press OK to confirm.

## Emergency SMS

A text message can be sent to the contacts in the numbers list when the assistance button is pressed.

Create assistance message

1. Press Menu → ICE Settings → Emergency SMS → Edit Message
2. Select Edit and write the message, see Enter text , p. 14.
3. Press OK to confirm.

Note! You must write a message if you activate the SMS function.

## Emergency alert


Select the notification alert type for the assistance sequence.

1. Press Menu → ICE Settings → Emergency alert
  - On to use loud signals (default).
  - Off no sound indication, like a normal call.
2. Press OK to confirm.

## Messages

### **Create and send text message (SMS)**

Note! Before you can send any text messages, you need to save your message centre number. The number to your service centre is supplied by your service provider and is usually set on the SIM card. If not, you can enter the number yourself.

1. press Menu → Messages → Create new → SMS.
2. Write your message, see Enter text  , p.14, then press To.
3. Select a recipient from Phonebook.  
Alternatively, select Enter number to add recipient manually and press Done.
4. Press Add to add more recipients.

Tip: You can modify the recipients by selecting one, press Options → Edit/Delete/Delete all.

5. When done, press Send.


Note! If you choose to add multiple recipients, you will be charged for each recipient (maximum 10). For international calls, always use + before the country code for best operation. Press \* twice for the international prefix +.

### **Create and send picture message (MMS)**

A picture message can contain text and media objects such as pictures, sound recordings and video. Both you and the recipient must have subscriptions that support picture message. The settings for picture message are supplied by your service provider and can be sent to you

automatically via text message.

1. press Menu → Messages → Create new → MMS.

2. Write your message, see Enter text  , p.14.

3. Press Options → Add picture:

- My pictures to select a file.
- Take picture to use the camera to take a picture.

Note! If you add more than one picture, the following pictures are increasingly compressed by the phone (scaled down). This to allow you to send more pictures in one message. To keep best picture quality, send only one picture per message.

You can also Add sound and Add video using the Options menu

4. Select Add subject and enter your subject, then press Done.

5. Select To and select recipient from Phonebook.

Alternatively, select Enter number to add recipient manually and press Done.

6. Press Add to add more recipients.

7. Press Send to send.


### **Create and send e-mail**

#### **IMPORTANT!**

Using data services can be costly. We recommend that you check your data rates with your service provider.

You can send or view e-mail messages using your personal or company e-mail account. See E-mail settings, p.36 on how to setup your e-mail.

1. Menu → Tools → E-mail .

2. Write your message, see Enter text  , p.14,
3. Select Options.
4. Enter recipient to add recipient manually and press Done .
5. Press Add to add more recipients.
6. Press Back.
7. From Options → Add subject.
8. From Options → Add picture:
  - My pictures to select a file.
  - Take picture to use the camera to take a picture.

You can also Add sound and Add video using the Options menu.

9. Press Send to send.

Switch between accounts

If you create more than two e-mail accounts, you can switch between them.

1.Press Menu → Tools → E-mail → Customized Accounts.

2.Use  /  to select account.

Download e-mail

• Press Menu → Messages → E-mail → Inbox.

Note! After configuring your account, you can view previously retrieved e-mail offline or connect to the e-mail server to view new messages.

After you retrieve e-mail messages, you can view them offline.

Signing in on Gmail / Yahoo

E-mail accounts, like Gmail and Yahoo require you to change an account setting before you are able to access e-mails on your new Easyfone phone. To avoid problems signing in, you may need to log-into your

Gmail / Yahoo account. Please use the following process to activate the use of your account on your Easyfone phone or you may receive a 'pop up' message that the 'authentication process has failed . '

**Account settings**

1. Use a computer web browser to log in to your Gmail/Yahoo account.
2. Click your name (top right corner) → My Account → (Under the security section click) Connected apps & sites/Account security → Allow less secure apps → Set the switch to ON.
3. Try to log in with your device again

**Gmail still not working?**

1. Use a computer web browser to log in to your Gmail account.
2. Use the shortcut link: <https://accounts.google.com/b/0/DisplayUnlockCaptcha>
3. Click Continue.
4. Try to log in with your device again.



## Voice mail service (Advanced mode)

Voice mail is a network service and you may need to subscribe to it first.  
Different Network provider provide different voicemail service  
May not compatible with all network provider voicemail service.  
For more information and for the voice mail number, contact your service provider.

1. Press Menu → Message → Voice mail server :
2. Input voice mail service number
3. Press OK to confirm.

To edit or delete an existing entry, select it and press Options → Edit or Delete.

Call to voicemail center for listen voice message.

- Press and hold shortcut button 1.
- The phone will call to voicemail center directly.
- Listen to voice messages or other operations according to operator voice instructions.



## Message settings (Advanced mode)

### SMS centre

1. From SMS settings, select SMS centre → Edit.
2. Enter the service centre number. Press Clear to delete.
3. Press OK to confirm.

Tips: Ask your network provider for SMS message service number.

### Message validity period

1. Press Messages → Message settings → Message validity period
2. Select a time with  /  .
3. Press OK to confirm.

### Save sent messages

1. Select Prompt user.
2. Select Save
3. Select Don't Save

### Preferred Storage

1. From SMS settings, select Storage:
  - SIM (default) to store messages on the SIM card.
  - Phone to store messages in the phone memory.
2. Press OK to confirm.

## MMS settings

- Press Menu → Messages → message settings → MMS settings

### File Storage

Picture messages are saved by default in the phone memory. When the memory becomes full you will need to either delete a picture message or select to save your picture messages to the memory card. When the memory is full you will see a notification when you try to send or

receive a picture message.

Note! Make sure to insert a compatible memory card before saving to it (see Insert SIM card, memory card and battery, p.7). The storage menu only appears if you have inserted a card.

1. From MMS settings select Storage:
  - Phone to store in the phone memory.
  - Memory card to store picture messages to the memory card.
2. Press OK to confirm.

## MMS account


These settings are needed to use the picture messages function. The settings for picture messages is supplied by your service provider and can be sent to you automatically.

1. From MMS settings, select MMS account
2. Select your service provider and press Options → select .

## Add new MMS account

Follow the steps below if your service provider is not in the list. Contact your service provider for correct settings.

1. From MMS profile, select Add:
  - APN to add APN (Access Point Name).
  - User name to add user name.
  - Password to add password.
  - Homepage to add homepage.
  - Gateway
  - port to add port.

2. Press OK to confirm.
3. Press Yes to save or No to exit without saving.
4. Select your new profile and press Options → Select .
5. Press OK to confirm. Press  during setup to exit without saving.

To edit or delete an existing entry, select it and press Options → Edit or Delete.

Note! Some service providers require you to send a picture message before you will be able to receive one. Send a picture message with text only to activate the service. Some service providers require that you contact them before enabling picture message for your account. Contact your service provider's Customer Service.

## E-mail settings

May not support all kind of E-mail account, confirm with your E-mail service provider to make sure the E-mail account compatible with a feature phone before set-up.

you need to have an already configured e-mail account such as Fox Mail, Yahoo or Hotmail.

- Press Menu → Tools → E-mail :

The first time you configure an account you are prompted Start to create account?. Press Yes.

Set up general e-mail accounts

For general e-mail accounts such as (Google Mail, Yahoo or Hotmail).

1. From E-mail → Select:

- Gmail
- Hotmail
- Yahoo

2. Enter your E-mail address and your Password.

3. Press OK to Next.

Set up other accounts

Follow the steps below if your service provider is not in the list. Contact your service provider for correct settings.

1. From E-mail → Select:

2. Select Other e-mail accounts.

- Enter E-mail address.
- Select POP3 or IMAP4.
- Enter Incoming server.
- Enter Outgoing server.
- Enter User name.
- Enter Password.
- Enter Account name.

3. Select Check interval.

### IMPORTANT!


Using data services can be costly. We recommend that you check your data rates with your service provider before selecting any of below intervals.

- Off is default.
  - 5 min
  - 30 min
  - 1 hour
  - 2 hours
4. Press OK to confirm.

## Camera

Camera (take photos)

To get sharp photos, wipe the lens clean with a dry cloth.

1. Press shortcut button .

Alternatively press Menu → Multimedia → Camera

2. Press  to take photo.



3. Press Options: → Image viewer → Options

• Share → Send by MMS, see Create and send picture message (MMS), p.34.

- Share ➔ Share by Bluetooth, see Bluetooth®, p.47.
  - Delete to delete. Press Yes to confirm or No to return.
  - Set as ➔ Wallpaper to save as display background.
  - Power On/Off display
4. Press Back to take a new photo.

If you do not make any selection the picture is saved.

### Camera adjustments

- Use  /  to zoom in and out.
- Use the side buttons +/- to zoom in and out.

Note! Zoom may reduce picture quality.

Camera settings

1. Press Menu ➔ Multimedia ➔ Camera ➔ Options ➔ Settings

- Banding : 50Hz or 60Hz.
- Auto save : Off or Activate
- Quality to set as Low , Normal or Advanced .
- Image size to set as 240\*320,640\*480,1280\*960, 1600\*1200(highest quality).

- Shutter sound ➔ Off , Activate
- Storage to save pictures and videos on Phone or Memory card.  
Note! This option is only available when a compatible external memory is inserted in the device.

2. Press OK to confirm.

Note! With higher quality, less pictures or videos can be stored in the internal memory.





If you insert a compatible external memory (micro SD) card into your Prime A1, you can change the default storage location.

This allows you to save more files on your device, like pictures and videos.

### Image viewer

View your saved images.

1. Press Menu, scroll to →Multimedia →Gallery
2. Select an image and press Options.
  - View for a single image. Press Back when done.  
Use  /  to see more images.
  - Share →Send by MMS, see Create and send picture message (MMS), p.34.
  - Share →Send by Bluetooth, see Bluetooth®, p.47.
  - Delete to delete an image. Press Yes to confirm or No to return.
  - Use →Wallpaper to save as display background.
  - Use →Phonebook picture to save as phonebook contact.
  - Details to view detailed information about the file, e.g. date, size, copyright protection.
  - Rename the image. Delete with Clear and confirm with Done.
  - Browse style to set the image view to List, Medium or Large.
  - Sort by to sort the images by Name or Time.

- Delete all to delete all images. Press Yes to confirm or No to return
3. Press OK to confirm.

## Connectivity

### Bluetooth®

When you are not using Bluetooth connectivity, select Function on/off  
→Off or select Visibility →Off. Do not pair with an unknown device.

#### Activate Bluetooth

1. Press Menu → Settings → Connections → Bluetooth Activation.
2. Select On to enable, or Off to disable.
3. Press OK to confirm.

#### Bluetooth settings

##### Visibility

1. Press Menu → Settings → Connections → Bluetooth Visibility.
2. Select On to make your device visible to other devices, or Off to be invisible.
3. Press OK to confirm.

Note! To prevent other devices from finding your device, select Off. Even if you select Off, paired devices can still detect your device.

Device name

1. Press Menu → Settings → Connections → Bluetooth → Device name.
2. Enter the name your Prime-A1 should appear with for other Bluetooth devices.
3. Press Done to confirm.

Search device(Paired device)

Search for available Bluetooth audio devices.

1. Press Menu → Settings → Connections → Bluetooth → Paired device → Add new device →
2. Select a device from the list and press Pair to connect. If Bluetooth is not enabled, press Yes to activate.
3. When connecting to another Bluetooth device you need a shared password. Enter the password and press OK.

### **Network account (Advanced mode)**

The Internet settings are used by services that communicates using Inter- net. The Internet settings for most major service providers are already in- serted in- start. Another way is to ask your service provider to send the settings directly to your phone.

Follow the steps below if your service provider profile is not in the list.

Contact your service provider for correct settings.

1. Press Menu → Settings → Connections → Network account
2. Use  /  to select a profile.
3. Press Options → Edit to enter settings for your service provider:
  - Account name to enter the account name.

- APN to enter the APN address.
- User name to enter user name.
- Password to enter password.
- Homepage to enter homepage.
- Connection type select HTTP/WAP.
- Proxy address to enter proxy address.
- Proxy port to enter proxy port.
- User name to enter user name.

### **GPRS Service and Data connection setting**

#### **IMPORTANT!**

Using data services can be costly. We recommend that you check your data rates with your service provider.

GPRS on or off

Restricts features like internet browser, Facebook, Connect & Care, Weather, Prime Manager, MMS and e-mail. Select Off to avoid data charges.

1. Press Menu → Settings → Connections → GPRS Service Function on/off.
2. Select On to enable, or Off to disable.
3. Press OK to confirm.

Data connection settings

1. Press Menu → Settings → Connections → Data connection settings

- Connect when need.
- Always connect.
- Power saving mode.

### **Network selection (Advanced mode)**

Your phone automatically selects your (service providers) home network if this is within range. Contact your service provider for more information.

1. Press Menu → Settings → Connection → Network selection

2. Select one of the following options and press OK to confirm:

- New search to perform new search if connection is lost.
- Select network to view available network, a list of available network operators is displayed (after a short delay). Select desired operator.
  - Network mode to select another network. Select Automatic to select network automatically or Manual to select network manually.

File manager(My files)



Manage the contents and properties of files. You can open, delete, move, copy and rename files.

1. Press Menu → Tools → My Files.

2. Select Phone/Memory card → Open.

3. Select a folder, eg Photos and press Open.

4. Select a file and press Options:

- Play (audio/video/music), press  to Play or  to Stop.
- View (photos/images) for single view.
- Send → Send by MMS to send as picture message (Create and send picture message (MMS), p.34)

Send by Bluetooth (Bluetooth®, p.47)

Send by e-mail (Create and send e-mail, p.36).

- Details to view detailed information about the file, e.g. date, size, copyright protection.

- Use → Wallpaper to save as display background/Phonebook picture to send to a phonebook contact.

- Rename to rename the file.

- Delete to delete the file.

- Delete all to delete all files in selected folder.

- Sort by → Name/Time.

- Copy/Move → Phone/Memory card → Options → Open. Select a folder, eg Photos and press Options → Paste.

5. Press OK to confirm. Supported formats:

- Picture format: BMP/GIF/JPG/PNG. Photos taken with the built in camera are saved as JPG.

- Audio format: WAV/AMR/MIDI/MP3/AAC/AAC+. Recordings made with the built in sound recorder are saved as AMR.

- Video format: MP4/3GPP.

### **Connect the phone to a computer**

Connect the phone to a computer and start transferring pictures, music and other file types. All you have to do is connect a USB cable between the phone and computer. From your computer's file explorer, you can drag and drop content between your phone and the computer.

Drag and drop content between phone and a computer

1. Connect your phone to a computer using a USB cable.
2. Wait until the phone or memory card appears as external disks in the file explorer.
3. Drag and drop selected files between the phone and the computer.

Note! You can transfer files using a USB cable on most devices and operating systems supporting a USB Mass Storage interface.

Disconnect the USB cable safely

1. Make sure to enable the hardware to be safely removed.
2. Disconnect the USB cable.

Note! Computer instructions may vary depending on your operating system. See the documentation of your computer's operating system for more information.

## Sound & Display

Note! Silent needs to be set to Off to access Tone setup, Volume, Alert type and Extra tone.

### Audio setup



If you use a hearing aid or have hearing difficulties when using the device in a noisy environment, you can adjust the audio settings.

1. Press Menu → Settings → Profiles → Adjust volume
2. Press OK to confirm.

Note! Try different settings to find the one that suits your hearing the best.



### Ringtone setup

Select a ringtone with the best tone curve adjustments and frequencies to best fit your needs.

1. Press Menu → Settings → Profiles → Ring settings → Caller ringtone
  - Select Caller Ringtone From Fixed ringtones
    - Use  /  to select one of the available melodies, the melody will be played.
    - Press OK → Done to confirm or Back to discard changes.
  - Select Caller Ringtone From More ringtones
    - Select from SD card (Memory card needed)
    - Saved mp.3 files before you select it as ringtone.

Tip: Set up the Alarm, Message tone, Keypad tone, Closing Opening tone, Power on and Power off in the same way.

### Ringtone volume

1. Press Menu → Settings → Profiles → Adjust Volume
2. Use  /  to change the ringtone volume.
3. Press OK to confirm.



### **Silent**

1. Press Menu → Settings → Profiles → Ring type → Silent
2. Select On to enable, or Off to disable.
3. Press OK to confirm.

Tip: From standby mode, press and hold shortcut button # to activate or deactivate silent mode.

### **Alert type**

Select to use ringtone and/or vibration for incoming calls.

1. Press Menu → Settings → Profiles → Ring type:
  - Ring only for ringtone only.
  - Vib. only for vibration only.
  - Vib. and ring for vibration and ringtone.
  - Vib. then ring to start with vibration and adds ringtone after a short while.
  - Silent for no sound or vibration, the display light is lit.
2. Press OK to confirm.



### **Extra tone**

You can select to enable warning and error tones to alert you of low battery power, phone and SIM card errors, etc.

1. Press Menu → Settings → Profiles → Other alert rings
2. Select Other alert rings
3. Select On to enable, or Off to disable.
4. Press Done to save.

## Main menu

### Wallpaper

1. Press Menu → Settings → Display → Wallpaper settings
  - Static wallpaper to select predefined images.
  - More picture to select user defined images,
2. Use  /  to display available wallpapers.
3. Press OK to confirm.

### Idle display

In standby mode the display can show clock only, clock and the service provider, or all information.

1. Press Menu → Settings → Display.
2. Select Idle display → Clock only, Clock & Operator, All info or No information.
3. Press OK to confirm.

### LCD backlight

Select the delay time for the display backlight.

1. Press Menu → Settings → Display.
2. Select LCD backlight → 15 sec., 30 sec. or 1 min.
3. Press OK to confirm.


### Brightness

You can adjust the brightness of the display.



1. Press Menu → Settings → Display.
2. Select Contrast → Level 1, Level 2 to Level 7 .
- 3 Press OK to confirm


## Additional functions

### FM Radio

The  FM radio has a frequency range from 87.5 to 108.0 MHz and 9 preset channels.

Turning the radio on




1. Press Menu  FM radio.  
The radio is turned on. The tuned frequency is displayed.
2. Select channel using M1 or M2 .
3. Press  To Switch off / Pause

Tip: Press  to return to standby mode. The radio will continue to play.

Volume

- Use the side buttons +/ - to adjust the volume.


Auto search and save

- Press Menu  FM radio  Options  Auto search and save.
- Phone will automatically search and save FM channels in channel list.

#### Loudspeaker

1. Press Menu → FM radio → Options → Openspeaker → On.
2. Use the side buttons +/ - to adjust the sound volume.
3. To turn off, select Off.

#### Channel list (editing the channel list)

1. Press Menu FM radio → Options → Channel list.
2. Select the channel you wish to edit and press Options:
  - Play, to play the selected channel.
  - Delete, to delete the channel. Press Yes to confirm or No to re- turn to the channel list.
  - Edit, to edit the channel name, then press  to edit the frequency, use \* to enter the decimal point. When done, press OK.
3. Press OK to confirm.

#### Manual search (changing search mode)

1. Press Menu → FM radio → Options → Manual search:
  - Edit your own Frequency(MHz)

2. Press OK to confirm.

Auto search and save

1. Press Menu → FM radio → Options.


2. Select Auto save to automatically install available radio stations in channels 1-9.

3. Press OK to confirm.

Note! This will overwrite all previously saved channels.

### **Torch (Flashlight)**


Press and hold shortcut button  to power on the torch.

Press and hold shortcut button  to power off.

Note! The torch will drain the battery very quickly. Remember to power off the torch after use.

Tips: Quick press the torch button when it on to switch flash mode.

### **Calculator**

The  Calculator can perform basic mathematical operations.

1. Press Menu → Tools → Calculator .

2. Enter the first number. Use \* to enter decimal points.


3. Use the arrow buttons to select an operation (+, -, x, ÷) and press OK.

4. Enter the next number and press OK.

5. Repeat steps 2 - 4 as necessary.

Select = and press OK to calculate the result.

## Games

The  Games menu contains 2 games.

1. Press Menu → Tools → Games
2. Select Snake/Boxman:
  - Continue to continue game.
  - New game to start a new game.
  - Select level to select difficulty level.
  - Help to view instructions for the game. Press Back to return.
3. How to operate game?
  - Up = 2
  - Down = 8
  - Right = 6
  - Left = 4

## Alarm

1. Press Menu → Tools → Alarm
  2. Enter the alarm time using the keypad and press OK to confirm.
    - Select Once to set one single alarm.in Options -> Edit ->Repeat Mode
      - Select Daily/custom to repeat the same alarm time several days.
- Scroll through the list of days and press On to enable or Off to disable the alarm for each day.
3. Press Save to confirm.
- Tip: To edit an alarm, press Edit or Off to stop the alarm.

Snooze or stop




When the alarm sounds:

- Select Off to stop.
- Select Snooze to repeat after 9 minutes.

Note! The alarm will work even when the phone is powered off. Do not power on your phone if wireless phone use is prohibited or when it may cause interference or danger

## Calendar

Add task

1. Press Menu → Tools → Calendar → Options → Add new schedule
2. Enter date, then press .
3. Enter time, then press .
4. Enter subject, see Enter text  , p.14.
5. When done, press OK.

Options

1. Press Menu → Tools → Calendar → Options:
  - Select View to show tasks for the selected date or View all to see all tasks. Press Options → Clear or Clear all .
  - Select go to date and enter the date.
2. Press OK to confirm.

Note! The calendar reminders will work even when the phone is powered off. Do not power on your phone if wireless phone use is prohibited or when it may cause interference or danger.

### Reset settings

1. Press Menu → Settings → Phone settings → Restore factory settings
2. Select Reset settings to reset the phone settings. All the changes that you have made to the phone settings will be reset to default settings.
3. Enter the phone code and press OK to reset. Tip: The default phone code is 1234.

### Reset all (Advanced mode)

1. Press Menu → Settings → Security.
2. Select Reset all to delete phone settings and content such as contacts, number lists and messages (SIM memory is not affected).
3. Enter the phone code and press OK to reset.

Tip: The default phone code is 1234.

## Troubleshooting

### Phone cannot be switched on

Battery charge low	Connect the power adapter and charge the battery for 3 hours. Full battery capacity is reached after the battery has been charged 3 - 4 times.
Battery incorrectly installed	Check the installation of the battery.
Not remove the insulation film from the battery	Check the insulation film on the battery and remove it before turn the phone power on and charger the phone.



**Failure to charge the battery**

Battery or charger damaged	Check the battery and charger.
Battery should only be charged in temperatures between 0°C and 40°C	Improve the charging environment.
Charger incorrectly connected to phone or power socket	Check the charger connections.

**Standby time decreases**

Battery charge capacity too low	Install a new battery.
Too far from base station, phone is constantly searching for signal	Searching the network consumes battery power. Find a place with a stronger signal, or temporarily turn off the phone.
The battery has passed its service life	Buy a new battery from Amazon or local phone accessories shop to replace the old battery; Searching name: Nokia BL-4C battery

**Failure to place or receive calls**

Call barring activated	Deactivate call barring. If this does not solve the problem, contact your service provider.
------------------------	---

**PIN code not accepted**

Wrong PIN code entered too many times	Enter the PUK code to change the PIN code, or contact your service provider.
---------------------------------------	--

**SIM card error**

SIM card damaged	Check the condition of the SIM card. If it is damaged, contact your service provider.
SIM card incorrectly installed	Check the installation of the SIM card. Remove the card and reinstall it.
SIM card dirty or damp	Wipe the contact surfaces of the SIM card with a clean cloth.

**Failure to connect to network**

SIM card invalid	Contact your service provider To get a new sim card.
Verizon or other CDMA user	This is a WCDMA/GSM cell phone not compatible with CDMA network, change to AT&T or T-mobile network.
Incorrect sim card plan service	Please select prepaid sim card or pay as you go sim card for this phone; This unlocked sim-free phone will not work with sim card with contract. (Operators specify phone models before)

**Weak signal**

Too far from base station	Try again from another location.
Network congestion	Try calling at a later time.

**Echo or noise**

Regional problem from bad network relay	Hang up and redial. This may switch to another network relay.
---	---

**Failure to add a contact**

Phonebook memory full	Delete contacts to free up memory.
-----------------------	------------------------------------

**Failure to set a function**

Function not supported or subscribed from network.	Contact your service provider.
--	--------------------------------

**SIM card cannot be inserted**

Wrong size sim card	Change to Micro size sim card or use the sim card adapter to become micro sim card.
Cannot open the sim card slot	See this manual P.7 to get to know how to insert sim card in phone.

**Accidentally press the SOS emergency button**

Dial emergency number by mistake	Deactivate the SOS button; Menu - ICE settings - SOS Button active - OFF
----------------------------------	--

**Failure to set voice mail service**

haven't open the voice mail service yet	Contact with your network provider to open the voice mail service first.
Input wrong voice mail service number	Contact with your network provider to get correct voice mail service number and put it in the Menu - Message - voice mail service - Input number - OK

**Unable to send or receive Picture Messages/MMS with the SIM card**

The MMS profile is not set automatically and it is not possible to send or receive MMS	For some operators the MMS profile has to be selected manually. Activate the correct profile to suit your SIM card or network used.
--	---

### Failure to send or download MMS

Phone memory is full and it is not possible to send or download MMS	Delete received MMS or select to set the default storage for MMS to be saved on a memory card (not included).
Incorrect MMS profile selected.	For some service providers the MMS profile has to be selected manually.

### Safety instructions



#### CAUTION

The unit and the accessories can contain small parts. Keep all of the equipment out of the reach of small children.

The mains adapter is the disconnect device between the product and mains power. The mains socket outlet must be close to the equipment and easily accessible.

### Network services and costs

 
Your device is approved for use on the GSM 900/1800/1900 MHz and WCDMA850/1900;900/2100 networks. To use the device, you need a subscription with a service provider.

Using network services may result in traffic costs. Some product features require support from the network, and you may need to subscribe to them.

# Easyfone Prime-A1

Deutsch

## Schnellstartanleitung

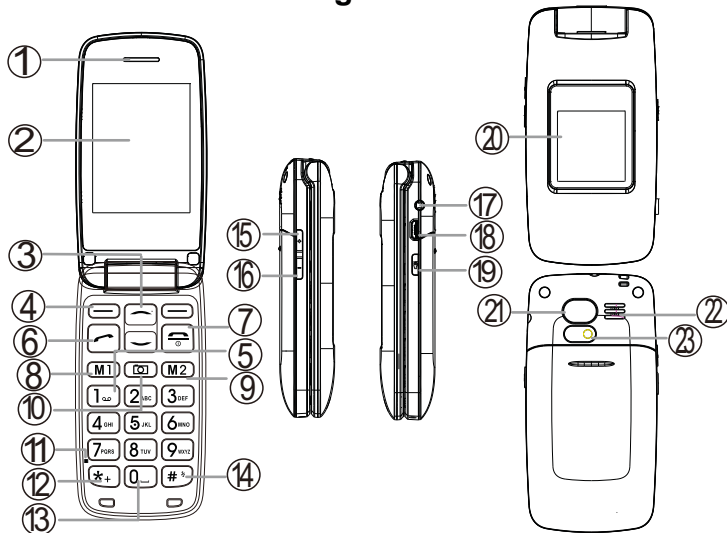

1	Hörer	2	LCD
3	Pfeiltasten	4	Menütaste
5	Voicemail	6	Anrufknopf
7	Anruf beenden; Einschalten/Ausschalten	8	M1 Shortcut/linke Taste
9	M1 Shortcut/Rechte Taste	10	Kameraverknüpfung / ok
11	MIC	12	*/+/ Symbole
13	Leerzeichen	14	#/ Lautlos/Eingabemethode
15	Volumen+	16	Volumen-
17	Kopfhörerbuchse	18	Micro5pinbuchse
19	Taschenlampe Schlüssel	20	LCD
21	SOSTaste	22	Lautsprecher

Die Geräte, die im Lieferumfang Ihres Telefons enthalten sind, können variieren. Dies hängt ab von der Software und dem Zubehör, die in Ihrer Region erhältlich sind bzw. von Ihrem Netzbetreiber angeboten werden. Sie können weiteres Zubehör von Ihrem örtlichen Easyfone-Händler erhalten. Das mitgelieferte Zubehör bietet die beste Leistung für Ihr Telefon.


### warne Tipps:

 Wenn Sie ein Telefon in englischer Sprache erhalten haben, folgen Sie bitte den Schritten, um zu Deutsch zu wechseln:  
**Menu - Settings - Phone settings - Language settings - Display language - Deutsch - OK**

## Erste Schritte

**Tipp:** Es wird empfohlen, die Schutzfolie von der Anzeige zu entfernen, damit diese besser erkennbar ist.

**SIM-Karte, Speicherkarte und Akku einlegen**  
Entfernen Sie die Abdeckung des Batteriefachs

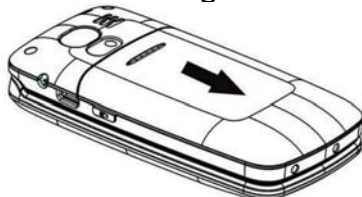

### Hinweis!

 
Da sich die SIM-Karten- und die Speicherkarten-Halterung unter dem Akku befinden, müssen Sie das Telefon ausschalten, um die Karten einzulegen oder herauszunehmen.

Legen Sie die SIM-Karte (erforderlich) und die Speicherkarte (optional) ein.




**Legen Sie den Akku ein und bringen Sie die Akkuabdeckung wieder an**  
Legen Sie den Akku ein, indem Sie diesen in das Akkufach schieben, wobei die Kontakte nach oben links zeigen. Bringen Sie die Akku-abdeckung wieder an.

**⚠ Hinweis**  
Die Batterie kann mit einem Isolierfilm bedeckt sein. Bitte entfernen Sie es, bevor Sie das Telefon einschalten oder aufladen.

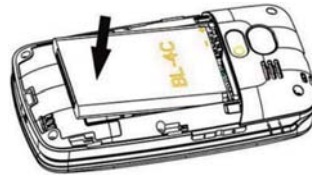

### Laden des Mobiltelefons

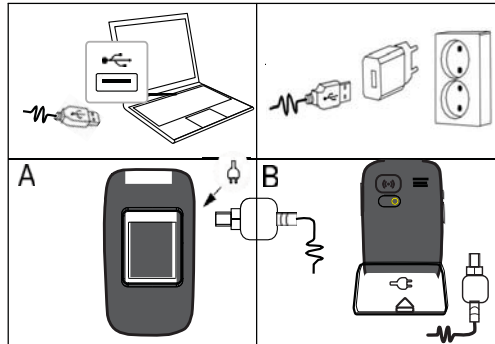 




# Easyfone Prime-A1

Français
 
## Manuel de démarrage rapide

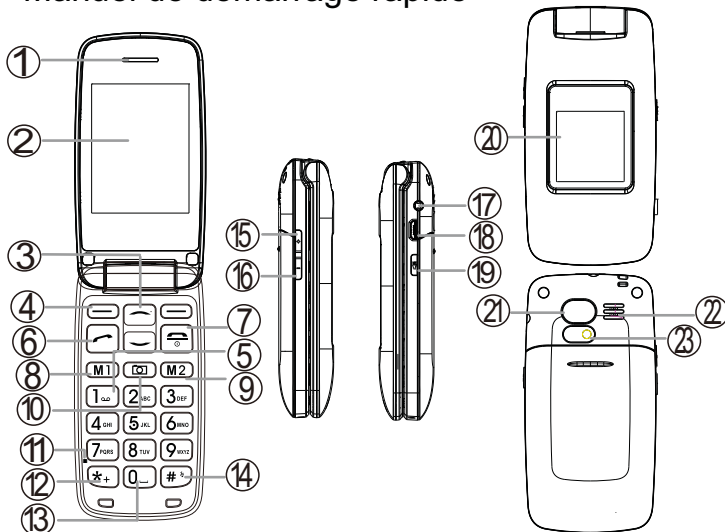

1	écouteur	2	écran
3	Touches de direction	4	Touche contextuelle gauche
5	Voicemail	6	Touche d'appel
7	Fin d'appel/Marche/arrêt	8	M1 shortcut
9	M2 shortcut	10	OK/Prendre une photo
11	Microphone	12	Préfixe international/symboles
13	Blank Button	14	Silence/Métho de desaisie
15	Réglage du volume +	16	Réglage du volume-
17	Prise pour casque	18	Prise de chargement
19	Raccourci lampe	20	écran externe
21	Touche d'assistance	22	Haut-parleur

Les articles fournis avec votre téléphone sont susceptibles de varier en fonction du logiciel et des accessoires disponibles dans votre région ou offerts par votre opérateur. Vous pouvez vous procurer des accessoires supplémentaires auprès de votre vendeur Easyfone local. Les accessoires fournis sont conçus pour fonctionner de manière optimale avec votre téléphone.

### conseil chaleureux:

Si le téléphone que vous avez reçu est affiché en anglais, veuillez suivre les étapes ci-dessous pour le configurer en français.

**Menu - Settings - Phone settings - Language settings - Display language - français- OK**

 
## Démarrage

**Astuce** : il est recommandé de retirer le film plastique protecteur de l'écran pour améliorer la visibilité.

### Mise en place de la carte SIM, de la carte mémoire et de la batterie


#### Retirez le couvercle de la batterie

**Remarque !** Les compartiments pour carte SIM et pour carte mémoire étant situés sous la batterie, vous devez éteindre le téléphone pour pouvoir insérer ou retirer ces cartes.

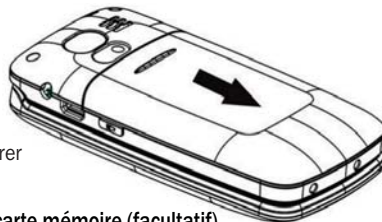

#### Insérez la carte SIM (obligatoire) et la carte mémoire (facultatif)

 - Retirez la batterie si elle est déjà installée.
- Repérez le compartiment pour carte SIM et insérez-y délicatement la carte. Reportez-vous à l'étiquette située à côté du compartiment pour savoir comment insérer la carte. Si vous rencontrez un problème pour retirer/replacer la carte SIM, utilisez la bande adhésive située sur la partie exposée de la carte SIM pour l'extraire.
- Repérez le compartiment pour carte SD et insérez-y délicatement la carte.

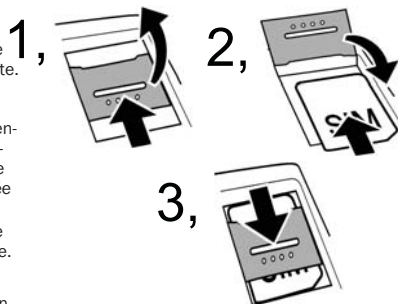

**Remarque !** L'appareil fonctionne qu'une carte SD soit installée ou non.

### Insérez la batterie et remplacez le couvercle de la batterie.

Insérez la batterie en la glissant dans son compartiment, avec les contacts orientés vers le haut à gauche. Remplacez le couvercle de la batterie.



 
#### ⚠ ATTENTION

La batterie peut être recouverte d'un film isolant. Veuillez le retirer avant d'allumer le téléphone ou de le recharger.

### Chargez le téléphone


#### ⚠ ATTENTION

Utilisez uniquement des batteries, chargeurs et accessoires approuvés pour ce modèle spécifique. Le raccordement d'autres accessoires peut vous faire perdre vos droits de recours en garantie et se révéler dangereux.

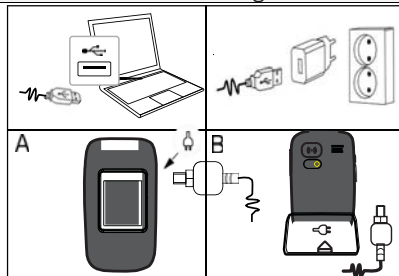

# Easyfone Prime-A1

 Español  
manual de inicio rápido

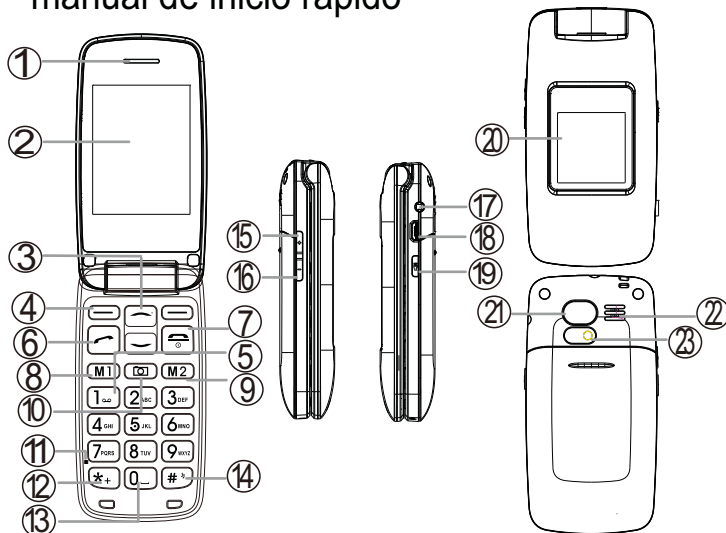

1	Auricular	2	Pantalla
3	Teclas de flechas	4	Tecla de selección izquierda
5	Voice mail	6	Tecla de llamada
7	Fin. llam./encender/apagar	8	M1 shortcut
9	M2 shortcut	10	OK/ Acceso rápido a cámara
11	Micrófono	12	Prefijo internacional/ símbolos
13	Blank Button	14	Modo silencioso/método de introducción
15	Control del volumen+	16	Control del volumen-
17	Toma para auriculares	18	Toma para el cargador
19	Acceso rápido a la linterna	20	Pantalla externa
21	Tecla de alerta	22	Altavoz

Los elementos que se suministran con el teléfono pueden variar en función del software y los accesorios que estén disponibles en su región o que ofrezca su proveedor de servicios. Puede adquirir accesorios adicionales a través de su distribuidor local de Easyfone. Los accesorios suministrados proporcionan el mejor rendimiento con su teléfono.

#### consejos cálidos:

Si la pantalla del teléfono está en inglés, siga los pasos a continuación para configurarlo en español.

**Menu - Settings - Phone settings - Language settings - Display language - español- OK**

 
## Primeros pasos

**Consejo:** se recomienda retirar el plástico de protección de la pantalla para mejorar la visibilidad.

### Colocación de la tarjeta SIM, la tarjeta de memoria y la batería

**Retire la tapa del compartimento de la batería**


**Nota:** En el caso de la tarjeta SIM y la tarjeta de memoria, como sus soportes se encuentran debajo de la batería, debe apagar el teléfono para insertarlas o extraerlas.

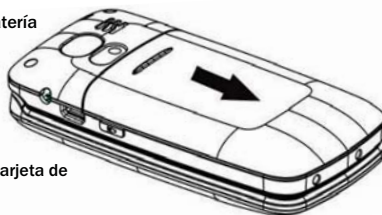

**Coloque la tarjeta SIM (indispensable) y la tarjeta de memoria (opcional).**

- Extraiga la batería si ya está instalada.
- Localice el soporte de la tarjeta SIM e inserte la tarjeta deslizándola con cuidado en su soporte. Si necesita ayuda para saber cómo insertarla, consulte la etiqueta que encontrará junto al soporte. Si tiene dificultades para retirar/sustituir la tarjeta SIM, utilice cinta adhesiva en la parte expuesta de la tarjeta SIM para extraerla.
- Localice el soporte de la tarjeta SD e inserte la tarjeta deslizándola con cuidado en su soporte.

 **Nota:** El dispositivo funciona con o sin tarjeta SD.

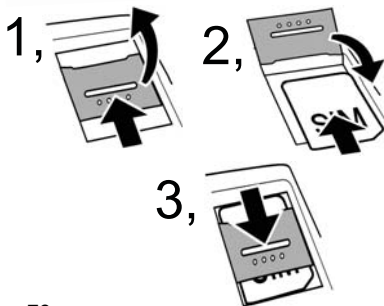

## Inserte la batería y vuelva a colocar la tapa de la batería.

 
Introduzca la batería deslizándola en su compartimento con los contactos mirando hacia arriba y a la izquierda. Vuelva a colocar la tapa de la batería.

### ⚠ Nota

La batería puede estar cubierta con una película aislante. Quitela antes de encender el teléfono o el cargador.




## Cargue el teléfono

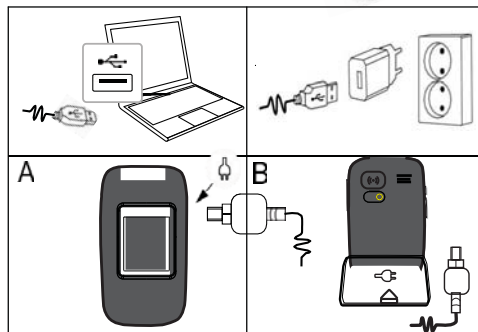



# Easyfone Prime A1

 Italiano  
manuale di avvio rapido

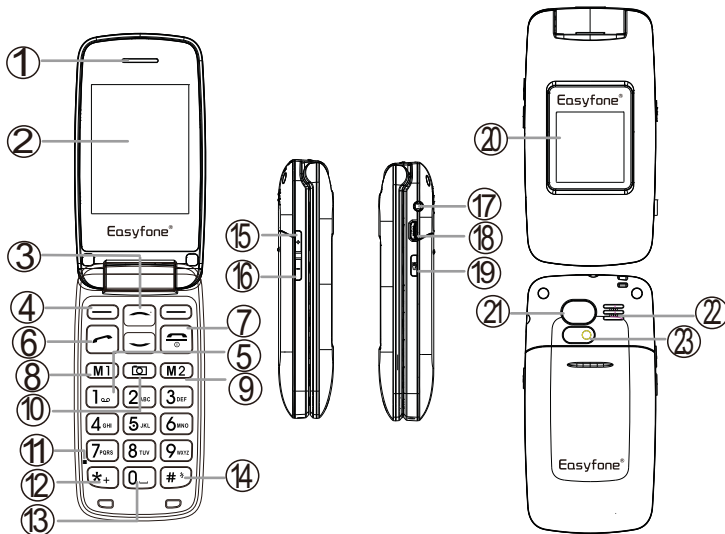

1	Ricevitore	2	Display
3	Pulsantifreccia	4	Pulsante funzione sinistro
5	Voicemail	6	Pulsante di chiamata
7	Termina chiamata/Accensione	8	M1 shortcut
9	M2 shortcut	10	OK/ scattare foto
11	Microfono	12	Prefisso internazionale/Simboli
13	Blank Button	14	Modalità silenziosa/Metodo di immissione
15	Controllo volume +	16	Controllo volume -
17	Presca cuffie auricolari	18	Presca di carica
19	Accesso rapido luce	20	Display esterno
21	Pulsante assistenza	22	Altoparlante

Gli elementi forniti con il telefono possono variare a seconda del software e degli accessori disponibili nella regione oppure offerti dal proprio operatore telefonico. Sono disponibili ulteriori accessori in vendita presso il rivenditore locale Easyfone. Gli accessori in dotazione offrono le migliori prestazioni per l'utilizzo del telefono.

### Suggerimenti:

Se il display del telefono è in inglese, atteniti alla seguente procedura per configurarlo in italiano.

 
Menu - Settings - Phone settings - Language settings - Display language - Italiano - OK

## Per iniziare

**Suggerimento:** Si consiglia di rimuovere la pellicola protettiva dal display per aumentare la visibilità.

### Inserire la scheda SIM, la scheda di memoria e la batteria Aprire il coperchio del vano batterie


**Nota!** Poiché gli alloggiamenti della SIM e della scheda di memoria sono posizionati sotto la batteria, occorre spegnere il telefono per inserire e rimuovere le schede.

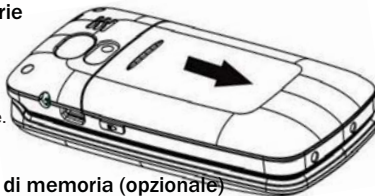

#### Inserire la scheda SIM e la scheda di memoria (opzionale)

- Rimuovere la batteria se già installata.
- Individuare l'alloggiamento della SIM, quindi farla scorrere delicatamente nell'alloggiamento. Fare riferimento all'etichetta accanto all'alloggiamento per una guida sulla modalità di inserimento della scheda. In caso di problemi con la rimozione/sostituzione della scheda SIM, utilizzare il nastro adesivo sulla parte esposta della scheda SIM per estrarla.
- Individuare l'alloggiamento della scheda SD, quindi farla scorrere delicatamente nell'alloggiamento.

 **Nota!** Il dispositivo funziona con o senza una scheda SD inserita.

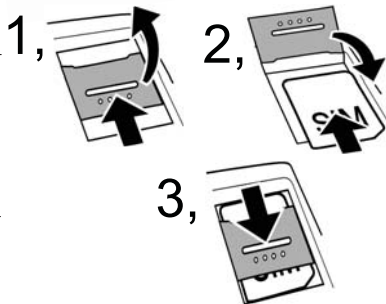

## Inserire la batteria e riposizionare il coperchio del vano batteria

 
Inserire la batteria facendola scivolare nell'apposito vano con i contatti rivolti verso l'alto a sinistra. Riposizionare il coperchio del vano batteria.

### ⚠ Nota

La batteria può essere coperta con un film isolante. Rimuoverlo prima di accendere il telefono o il caricabatterie.



## Caricare il telefono

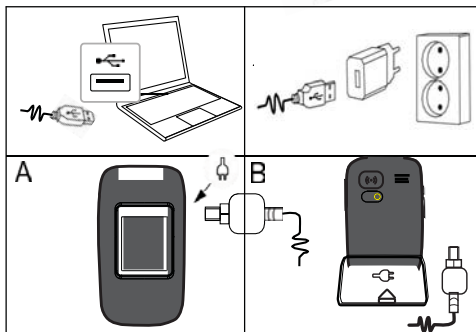

Item: C512W

Model:Prime-A1

**English Version 1.3**

**© 2018 Easyfone. All rights reserved.  
www.easyfone-global.com  
easyfone\_support@yeah.net**



## FCC Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

## Specific Absorption Rate (SAR) information-

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest

certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, tests for each phone are performed in positions and locations as required by the FCC.

For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 0.5cm from the body. Non-compliance with the above restrictions may result in violation of RF exposure guidelines

## **ISED WARNING**

This device complies with Innovation, Science, and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d' Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Radio apparatus containing digital circuitry which can function separately from the operation of a transmitter or an associated transmitter, shall comply with ICES-003. In such cases, the labeling requirements of the applicable RSS apply, rather than the labelling requirements in ICES-003.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

SAR tests are conducted using standard operating positions accepted by the ISED with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the ISED that it does not exceed the exposure limit established by the ISED, Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the ISED.

For body worn operation, this model phone has been tested and meets the ISED RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 5 mm from the body.

Non-compliance with the above restrictions may result in violation of RF exposure guidelines.

*Le présent appareil est conforme*

*Après examen de ce matériel aux conformités aux limites DAS et/ou aux limites d'intensité de champ RF, les utilisateurs peuvent sur l'exposition aux radiofréquences et la conformité and compliance d'acquérir les informations correspondantes La distance minimale du corps à utiliser le dispositif est de 5 mm*



Appareil radio contenant des circuits numériques pouvant fonctionner séparément du fonctionnement de

un émetteur ou un émetteur associé doit être conforme à la norme ICES-003. Dans de tels cas, les exigences en matière d'étiquetage du RSS applicable s'appliquent, plutôt que les exigences en ICES-003.

Cet appareil numérique de classe B est conforme à la norme canadienne ICES-003.

Cet appareil numérique de classe est conforme à la norme NMB-003 du Canada.

Les tests SAR sont effectués à l'aide de positions d'opération standard acceptées par l'ISED avec téléphone émettant à son niveau de puissance certifié le plus élevé dans toutes les bandes de fréquences testées, bien que

le SAR est déterminé au niveau de puissance certifié le plus élevé, le niveau de SAR réel du téléphone

pendant le fonctionnement peut être bien en dessous de la valeur maximale, en général, plus vous êtes proche d'un

antenne de station de base sans fil, plus la puissance de sortie est faible.

Avant qu'un nouveau modèle de téléphone ne soit disponible à la vente au public, il doit être testé et certifié conforme aux normes.

l'ISED qu'elle ne dépasse pas la limite d'exposition établie par l'ISED, Tests pour chaque téléphone sont effectués dans des positions et des emplacements (par exemple à l'oreille et portés sur le corps)

requis par l'ISED.

Pour un usage sur le corps, ce modèle de téléphone a été testé et répond aux normes d'exposition RF ISED.

lorsqu'ils sont utilisés avec un accessoire conçu pour ce produit ou avec un accessoire qui

Ne contient pas de métal et positionne le combiné à 5 mm minimum du corps.

Le non-respect des restrictions ci-dessus peut entraîner une violation des consignes d'exposition aux RF.