

Contents

Congratulations on your purchase.....	1
Safety Remind.....	1
Get to started.....	4
Shortcut Path Settings.....	8
Insert SIM Card/Memory Card/Battery.....	8
Get to know your phone.....	9
Power ON and OFF.....	9
Start-UP wizard.....	10
Standby Mode.....	10
Flashlight.....	10
Keyboard lock.....	11
PPT(Push to talk).....	11
Volume adjustment.....	11
SOS Button.....	12
Call Logs.....	12
Making a call.....	13
Hands-free.....	13
Call settings.....	13
Hang up the call.....	14
Mute the caller.....	14
Contacts(PhoneBook).....	14
Add contacts	14
Quickly search for contacts.....	15
Contacts options.....	15
Speed dial with Photos.....	16
Messaging.....	16
Write message.....	16
In Box.....	18

Out box.....	18
Drafts.....	18
Sentbox.....	18
Templates.....	18
Voice mail server.....	18
Settings.....	19
Message capacity.....	19
Tasks.....	19
Options.....	19
Add New Tasks.....	19
FM Radio.....	20
Options.....	20
Multimedia.....	21
Camera.....	21
DV.....	21
Music player.....	22
Video Player.....	23
Recorder.....	24
Image.....	24
ICE Settings.....	25
Owner info.....	25
SOS button active.....	25
SOS numbers.....	26
Emergency SMS active.....	26
Emergency SMS.....	26
Emergency alert.....	26
Speed dial.....	27
Alarm.....	27

Edit.....	27
Tools.....	28
Calendar.....	28
Calculator.....	28
My files.....	28
Bluetooth.....	28
Easy talk.....	29
Today step.....	30
Medical reminder.....	30
Internet.....	30
Settings.....	31
Date&time.....	31
Language settings.....	31
Sound settings.....	32
Display.....	32
Call settings.....	33
Network settings.....	35
Security.....	35

Congratulations on your purchase


Dear Customer, Thank you for choosing this Easyfone Prime-A4 unlocked Sim-Free senior cell phone; Please follow the manual to start, if have any trouble in your use please contact with us, we will help to resolve the trouble for you.

Safety Remind

- ◆  Please take earphone if making or Answer incoming call while driving or after your car is parked.
- ◆  Any phone may be susceptible to interference, which could affect performance.
- ◆  Please use the original battery and accessories in order to have optimal performance and prevent phone damage. Please don't use mismatched products.
- ◆  The phone may interfere with aircraft telecommunication. So please turn it off or switch to flight mode during the flight.
- ◆  Please turn off your phone near the medical equipment or in the medical facility where any phone must be out of service.
- ◆  Please turn off your phone in the gas station or near fuel or chemicals to prevent explosion.

- ◆  To avoid interference with blasting work, please turn off the phone on the site or where two-way radio must be switched off. Please observe the local rules.
- ◆  If your phone needs to be connected with other device, please read the User Guide of the latter.
- ◆  Please copy or keep a written copy of the vital information stored in your phone.
- ◆  Burning or disposing of phone battery as usual is prohibited, or it may cause life risk or environmental pollution. Please dispose of and recycle it in compliance with the local environmental regulations.
- ◆  Some small components (e.g. memory card, etc.) shall be out of children's reach; otherwise it may be swallowed or cause other hazards.
- ◆  Ensure the phone is turned on and within the service area. Enter the emergency number, press the talking key to tell your location. Please don't end the call without permission.

Special note: this phone is suitable for 3G and below TF card (Adapter micro SIM card, and Micro TF card) .

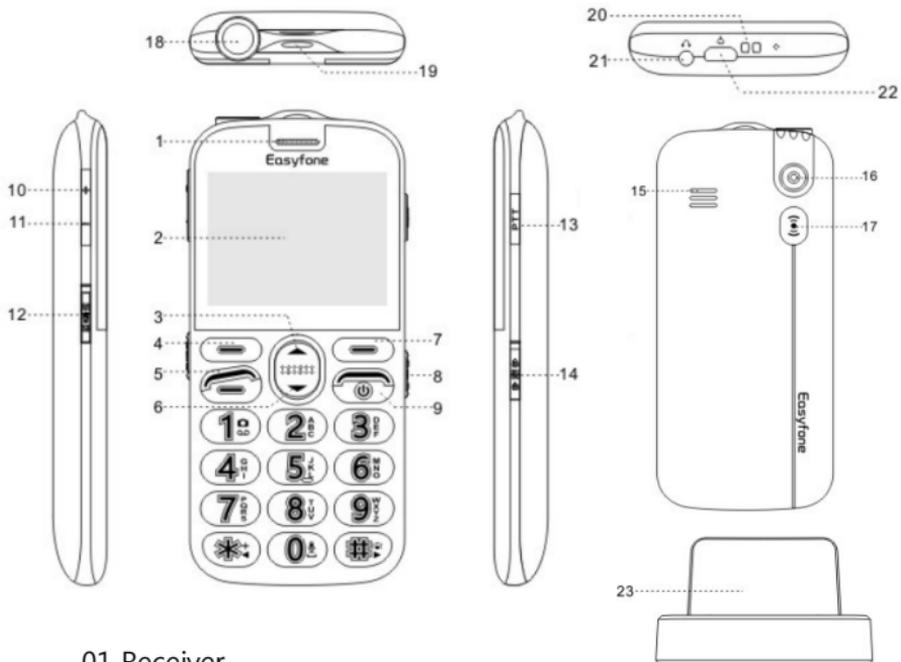

01-Receiver

03-Up Key

05-Dail Key

07-Right selection button

09-End call/Power on/off

11-Volume

13-PTT

15-Speaker

17-SOS Button

19-Lanyard hole

21- Headset Socket

23- Charging Cradle

02-Displayer

04-Left Selection Button

06-Down Key

08-lock/unlock Keyboard

10-Volume

14-lock/unlock Keyboard

16-Camera


18-LED Lamp

20-Charging cradle connector


22- Charging Socket

Get to started


1. Open the battery cover along the lower left corner notch.

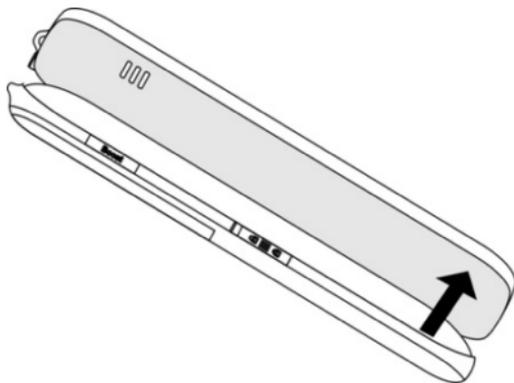


2. Insert your SIM card.

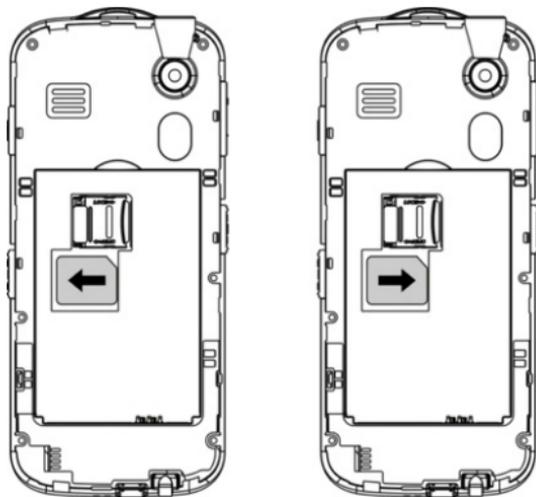


3. Insert your memory card (Maximum supports 16GB).

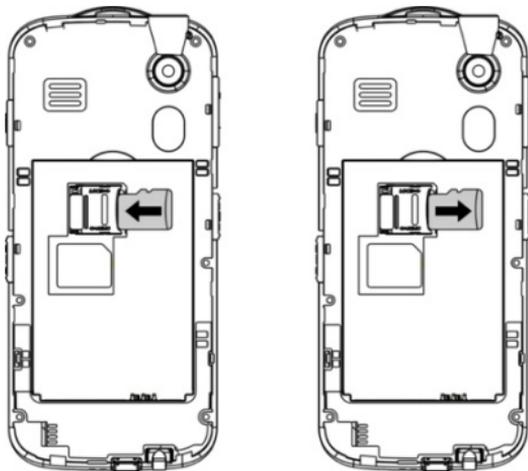


4. Load the battery.

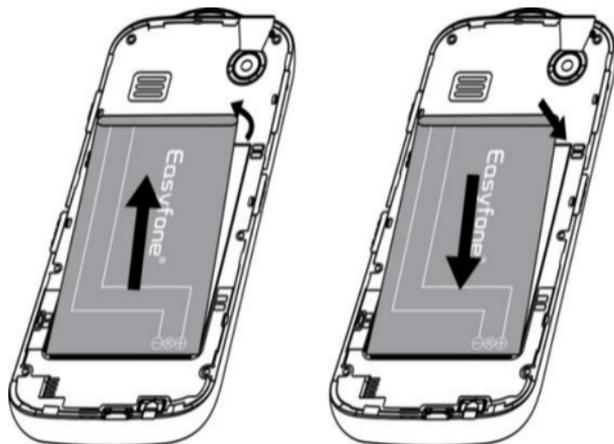


5. Phone charging diagram.

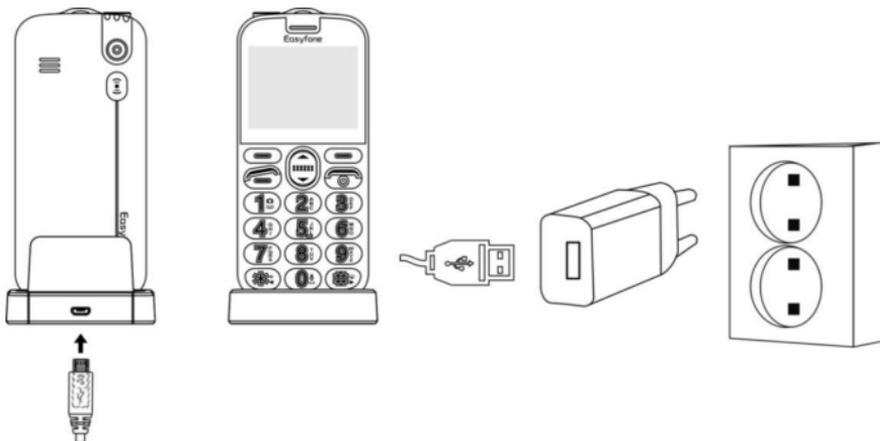


6. Connect to computer diagram(Data transfer or charging).

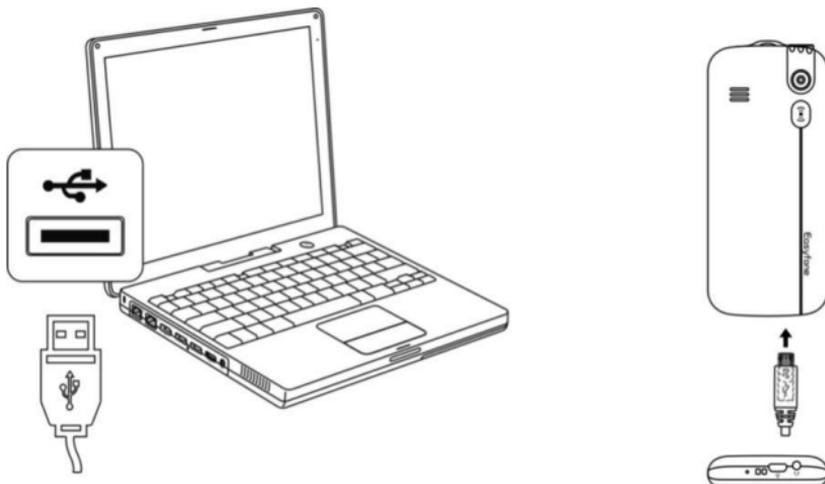

7. Phone lock- the phone lock protects your phone from unwanted usage. Toggle up the right side button to unlock the phone, and toggle down to lock the phone.

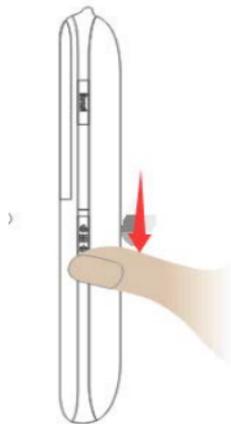

8. Torch- toggle up the left side button to turn on the torch, and toggle down to turn off the torch.

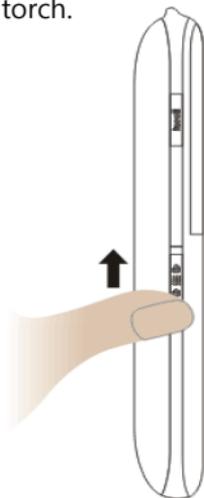

9. Up/Down/Left/Right Definition

In this product, any time you need to use the arrow keys, use the up/down/*/# keys to operating.



Shortcut Path Settings:

Language settings : Menu > Settings > Language settings > OK

Time settings : Menu > Settings > Date&time > OK

Sound settings : Menu > Settings > Sound settings > OK

Wallpaper settings : Menu > Settings > Display > Wallpaper > OK

Insert SIM Card/Memory Card/Battery

1. Please open and remove the battery cover along the bottom left corner notch of the product.

(please refer to Figure 1)

2. Insert the SIM card (according to the "Micro SIM Card" mark on the sticker). Make sure the metal contacts are facing down. Note the notch on the SIM card should be in the same direction as the card slot.

(Please refer to Figure 2)

3. This phone supports T-Flash memory card. After inserting, you can scan and copy files on the card through the mobile phone to expand its storage room. Open the memory card cover according to the arrow on sticker, Make sure the metal contact is faced down. Insert the narrow end of the card into the card slot until the whole card fits completely. Close the card cover to complete the installation.

(Please refer to Figure 3)

Warning: Do not insert or remove the memory card quickly and frequently to avoid damage to it!

4. Keep the battery notch to the bottom, put the gold contact to the bottom right corner, get it into the battery compartment, and press to load the battery.

(Please refer to Figure 4)

Get to know your phone

Power ON and OFF

1. Power ON

Press and hold the power button  for 3 seconds to power on your phone.

2. Power OFF

Press and hold the power button  for 3 seconds to power off your phone.

(When your phone is low battery, an automatic shutdown will occur.)

Warning: When you are in a place where you are prohibited from using mobile phone or using a phone may cause interference and danger, please do not power on your mobile phone and ensure the phone does not turn on the timer switch and other functions.

Start-UP wizard

When you first start up, the system will prompt you to set up the system functions.

1. Set language -You need to make language choices.
2. Set time&date -You need to set the time&date.
3. Set Sound -You need to set the caller ring/SMS ring/alarm clock ring.

Standby Mode

1. During standby, the current signal strength of the phone is displayed in the upper left corner of the screen, and the current remaining power of the phone is displayed in the upper right corner.
2. During standby, the current carrier name is displayed at the top of the screen, the current time and date is in the middle.
3. During standby, the menu function is displayed in the lower left corner of the screen, and the contact function is displayed in the lower right corner.

Flashlight

On the left side of the phone, there is a flashlight toggle switch,  up to turn on the flashlight, and down to turn off the flashlight.

Note : The flashlight can still be used normally without being turned on.

Keyboard lock /

On the right side of the phone, there is a toggle switch that unlocks, Move up to release the keyboard lock and toggle down to lock the keyboard.

Note : When you are not using your phone, lock the keyboard to avoid accidentally touching the keys in your pocket.

PPT(Push to talk)

In the upper right corner of the phone, there is a "PTT" button. In the standby state, long press the "PTT" button for 3 seconds to go to Easytalk app, Select a friend and long press "PTT" button to talk.

Note : Please read the talkie tracking operating guide carefully .

Volume adjustment /

On the left side of the phone, there is a volume adjustment button "+" "-" to adjust the phone volume with the button.

- a). In the MP3/MP4/FM/ state, press the volume button to adjust the speaker volume in the current state.
- b). In the standby or other menu state, press the volume button to adjust the volume of the incoming call ring.
- c). In the call state, press the volume adjustment button to adjust the call volume.

SOS Button ((●))

In the ICE menu, after adding an emergency contact in the SOS contact, you can make an emergency call by pressing the SOS button in any state after the phone is turned on.

SOS emergency help function: After you set the 5 emergency contact number, as long as you encounter an emergency and need help, please press and hold the SOS button for about 5 seconds, the system will start SOS mode, it will send your emergency help message to 5 contacts and start to cycle dial the emergency contact number in turn until one of the emergency contacts is connected.

Since the SOS button is activated, there will be a certain chance of accidental contact. To avoid the trouble of accidental touch, please ensure that there are no other small items in your pocket when you put phone in your pocket.

Note: SOS emergency rescue function can only provide general emergency rescue for you. When you encounter life-threatening and major events, please dial the local police center number and emergency center number first, so as not to miss the prime time of emergency treatment!



Call Logs

Note: In standby mode, press the call button  to in the call logs.

- 1:  Received calls-Displays the received call history.
- 2:  Dialed calls-Shows a list of calls that have been dialed.
- 3:  Missed calls-Show your missed calls.

4:  Rejected calls-Show a list of calls you declined to answer. In the call log, you can add the caller ID to the phone book, or send a text message, or add the number to the blacklist to prevent the number from continuing to call.

Making a call

- a). In the standby mode, enter the number you want to call. After the input is complete, press the  button to make a call.
- b). Press the contacts  button to enter the contact list, press the  button to select a contact, and after selecting the contact, press the  dial button to call.

Hands-free

After the call is connected, you can press the right button  to switch, handsfree/Earpiece mode.

Call settings

- a). During the call, press the left button  to enter the call settings menu.
- b). Connect to a Bluetooth headset. (when this feature is selected, the system will automatically turn on the Bluetooth function, and search for the Bluetooth headset and adapt it)
- c). Hold (Pause the current call, you can choose "unhold" to resume the current call.)
- d).Start recording (Record the current call, the recording file can be viewed in the multimedia / recording / recording file.)
- e).Contacts (View your contact list during a call.)

Hang up the call

a). When you want to end the call, press the  button to hang up the call.

b). When the caller ID does not recognize or harass the call, press the  button to reject the call.

Mute the caller

When you are not convenient to answer an incoming call, you can use the volume “+” or “-” key to mute the incoming call ringtone.



Contacts(PhoneBook)

In standby mode, press the right button to enter the contacts list.

Add contacts

a). After entering the contacts list, the first "Add contact" can add a new contact quickly.

b). After entering the number in dialing interface, press the options menu Options-Add to contacts to quickly add a new contact

c).Add a contact photo: When you add a new contact into the Phone, you can choose to add a photo of the contact. Add contact > Phone. The "Modify icon" option can add a photo avatar to the contact, which you can shoot with your phone camera, or using photos in your memory card as contact avatars. When you add a contact avatar, when you call the contact or when the contact call you, the contact avatar is automatically synced. If you set this contact as a quick contact, the avatar can also be synced to your shortcut contact list.

Note: When you add a contact, you will be prompted to add a contact to your phone/SIM card. After you select it, follow the menu in the contact add list, enter the corresponding contact information, and press “Done” to save the contact. When the contact is stored to the phone, the contact caller avatar can be set to make it easier to view the identity of the caller.

Quickly search for contacts

In the contact list, you can enter the first letter of the contact you want to find. If there are many contacts in the first letter, you can continue to enter the second letter, and so on, you will quickly find the contact person you want to search.

Contact options

In the contact list, use the UP/DOWN keys to select a contact and set it up.

Options:

- 1) View- You can view current contact phone number.
- 2) Call- You can dial the currently selected contact.
- 3) Send contact- You can send the current contact information via SMS/MMS/Bluetooth.
- 4) Write message- You can edit and send SMS/MMS to your current contacts.
- 5) Add to blacklist- You can add the current contact to the blacklist.
- 6) Edit- You can edit contact information.
- 7) Delete- You can delete the current contact information. (The data will not be restored after deletion, please choose carefully)
- 8) Copy- You can select one or more contacts in the phonebook to copy and move, copy the contacts from SIM card to phone / copy the contacts from phone to SIM card.



Speed dial with Photos

Speed dial function with photos to help elderly person quickly make a call.

In standby mode, use "UP" button to quick into "photo Speed dial" menu.

Add Speed dial contacts - Menu - ICE Settings - Speed dial - Options - Add from contacts - OK

Note: User must save photo(Modify icon) to Contacts(Phonebook) first if you want use Speed dial with photos function. How to save photo to Phonebook? See Page 14.



Messaging

1: Write message- You can create a new SMS or MMS

1.1 New SMS

a) Send single message, type receiver number directly or add it through phonebook : **Options > Contacts > choose a Contact> Options > OK**

b) Send group message: **Options > Contacts > choose a contact >**

Mark / Mark all> Contacts> OK , can add multiple contacts

c) In the editing SMS interface, you can press the "#" key to switch the input method, and press the "*" key to select the punctuation, press the "0" key to enter a space. Use the "Up/Down" button to select the word or letter you entered, press the OK button to confirm the selection, press the "Right" button to delete, and press the "Up/Down" button to move the cursor.

d) After the SMS editing is completed, select: **Options > Send** to complete the SMS sending. After the SMS is successfully sent, the screen will

prompt "Sent completed" to indicate that the SMS has been sent successfully.

e) In SMS editing, you can choose to save the edited content as a draft:

Options > Save as draft So that the SMS content will be sent next time.

f) In SMS editing, you can add the contact in the phonebook as a business card to the SMS content and send it to the SMS content by going to **Options > Add contact info > Select Contact > OK**.

1.2 New MMS

a) Send a MMS, type receiver number directly or add it through phonebook: **Options > Contacts > choose Contacts > Options > OK**

b) MMS title editing - **Options > Edit**, can edit a title for the currently edited MMS.

c) TEXT, MMS text content editing, you can press the "#" key to switch the input method, and press the "*" key to select the punctuation, press the "0" key to enter a space. Use the "Up/Down" button to select the word or letter you entered, press the OK button to confirm the selection, press the "Right button" to delete, and press the "Up/Down" button to move the cursor.

d) Add picture - In MMS, you can add a picture. When the cursor is moved to the picture bar: **Options > Add photo**, you can enter the album to select the picture, select the image and click "Select" to add the currently selected image to MMS.

e) Add music - In MMS, you can add music. When the cursor is moved to the music add bar: **Options > Add Music**, you can enter the music file to select. Select the music and click "Select" to add the currently selected music file to MMS. The music file cannot exceed 30KB, otherwise the MMS transmission may fail.

f) Add next page - When the first page of MMS is edited, you can choose to add a new page, you can also edit and add pictures/music.

g) After the MMS editing is completed, select: **Options > Send** to complete the SMS sending. After the SMS is successfully sent, the screen will prompt "Sent completed" to indicate that the SMS has been sent successfully.

2: In Box

a) View and delete SMS, move the cursor to select the SMS you want to view: **Options > Open**, open the message and view it; **Options > Delete/Delete all**, choose to delete the current text message/all the text message in your inboxes.

b) Reply to the message, in "Read message" interface, **Options > Reply > SMS/MMS**, reply to the current message.

c) Forward message, in "Read message" interface, **Options > Forward > Contacts > choose sender > OK**, the current message can be forwarded.

d) Call- Can directly dial the current sender's number.

e) Add sender to- The sender's number can be added directly to the phone book.

f) Details- You can view SMS related information.

Note: After selecting SMS to delete, you will not be able to recover. Please choose carefully!

3: Out box – You can view the text messages that failed to be sent and re-edit and send it.

4: Drafts – You can view the saved draft and re-edit and send it.

5: Sentbox – You can view the sent text messages.

6: Templates – You can add or send a quick reply template.

7: Voice mail server – You can add a voicemail number to enable voicemail.

a) The voicemail number can be automatically recognized in some operators' SIM cards without manual addition.

b) When the Voice mail number is blank, please call your SIM card

operator service center, consult the operation mailbox number, add it to the Line 1 number field, and press "Save" to save.

8: Settings – You can view the SMS settings, choose the time to save your incoming SMS and whether to save the sent SMS and SMS location etc.

9: Message capacity – You can view the SMS storage capacity. You can store 50 SMS messages in the SIM card and 200 SMS messages in the phone. If you need more storage space, you need to insert the memory card to increase the storage space.

Note :

1 Voicemail number, please be sure to consult your SIM card operator for the correct voicemail service center number if you are not sure about it.

2 In the SMS settings, the Message center number option, do not change, because changing this number will cause your phone to not send and receive text messages properly.



Tasks

You can add a tasks to remind yourself of your to-do event.

Options

- 1: View- To view details of the selected tasks.
- 2: Edit- To edit selected tasks.
- 3: Add- To add a new tasks.
- 4: Delete- To delete selected tasks.
- 5: Delete all- To delete all tasks.
- 6: Go to date- To jump to the date of your to-do event.

Add New Tasks

a: Theme – Tasks Title(40 characters Max).

b: Details - Tasks Details(500 characters Max).

C: Date - The event date.

d: Time - The event time(Use UP/Down Key to to change AM/PM).

e: Ringtone - To select reminder ringtone.

f: Repeat mode - Option: Once / Daily repeat / Weekly repeat / Monthly / yearly.

Note: When you choose the mode other than Once, below will be come a option for your set deadline.



FM Radio

During FM playback, you can use the "Up/Down" keys to switch channels and use the "5" key to pause/play. During playback, you can use the volume keys to adjust the FM volume.

Options :

- 1- Play/Pause.
- 2- Auto search and save: Automatically search for all valid stations at your location and save it.
- 3- Channel list: Display your current FM channel list, move the cursor to the selected channel and jump directly to the selected channel.
- 4- Save: You can manually input the channel in the FM channel list and save it.
- 5- Manual search: You can manually input the channel you want to search for and enter the channel.
- 6- Background play: FM playback can be maintained when exiting to the standby interface.

Note : FM is a low-frequency radio wave. Your location environment may affect the FM channel search results. If you have no effective channel when using the FM function, or if there are fewer effective channels, please exclude the source of interference in your location.



Multimedia

1. Camera

When you enter the camera function, you can press the “1” button to take a picture. When framing, you can press the “up/down” button to zoom in or out. (maximum imaging can be enlarged by 8 times)

Options :

A) Image viewer: You can view the image files in the album.

B) Effect: You can adjust the hue of the photo.

C) Settings:

Size: You can choose 1600*1200/1280*960/640*480 pixels. Pixels are reflected in the clarity of the photos you take when viewed on your computer. The higher the pixels, the larger the memory space.

Shutter sound: You can select whether the shutter sound is turned on/off when taking a picture.

Preferred storage: You can choose the location where the photo file is stored after taking a photo. Since the memory space of the phone itself is limited, we recommend you insert a memory card to store photos.

Note: When viewing a photo file, you can set the image as a standby wallpaper, an avatar of the phone contact, or send it to your friends via MMS/Bluetooth.

2.DV

When entering the camera function, you can use the “1” button to start recording. When framing, you can use the “up/down” button to zoom in or out (the maximum imaging can be enlarged by 8 times).

Options :

a) View video directory: You can view the video files in your phone or memory card.

b) Effect-You can adjust the hue when you record.

c) Settings:

Banding: You can select the strobe of the screen when shooting, 50HZ/60HZ.

Music player: You can choose whether to block the ambient sound when recording.

Video format: You can choose the storage format when you record, AVI or 3GP.

Preferred storage: You can select the video file storage location after recording. Due to the limited memory space of the phone itself, we recommend you insert a memory card to store the video.

Note: When viewing a video file, you can set the video as a standby live wallpaper or send it to your friends via MMS/Bluetooth.

3. Music player

When entering the MP3 player, you can press the "Up" / "Down" keys to switch between the previous and next songs, press the "5" key to play / pause and press the left volume button to adjust the volume.

Options :

1- Play/Pause.

2- Music list.

You can view the list of music files in your memory card, move the cursor to select the MP3 file and press the "5" button to play.

You can set the selected music file in the music list as ringtone or alarm ringtone, or send the current file to your friends via Bluetooth.

3- Set as ringtone - You can set the currently playing music as a ringtone / an alarm ringtone.

4- Repeat: You can choose the music repeat mode.

Off: The repeat mode will be turned off and the music files will be played randomly.

Repeat all: Repeat all music files in sequence. (The music file list is

arranged in the following order: according to the first letter of the file name from A-Z) .

Repeat one: Repeat the same music file.

5- Settings

5.1 Equalizer – you can set music playback style.

5.2 Bluetooth audio output – you can connected to a Bluetooth device for playback. (This unit must have been paired with the Bluetooth device to use this feature.)

5.3 Bluetooth audio devices – Bluetooth device search / pairing is possible. (This unit must have been turned on the Bluetooth and set the Bluetooth mode to visible. When a normal search and pairing is completed, it can be played through the Bluetooth device.)

6- Exit: You can quit the current music player. (When this feature is selected, the music player will exit the background and stop playing.)

4. Video Player

When entering the MP4 player, you can press the "Up" / "Down" keys to perform the rewind / fast forward adjustment, press the "5" key to play / pause, press the left volume button to adjust the volume and press the upper left button to make Options and the upper right button to return.

The left button-Options :

1- Play/Pause.

2- Open: You can open the local play list in the memory card / phone, select video files and play.

3- View: You can view the video files in the memory card or phone, and delete / play / view the video file size and recording time, etc.

4- Repeat: You can set to repeat the video files

Off: Turn off the video loop and stop playing after playback.

Repeat all: Loop through all local videos automatically.

Single: Loop the current video automatically.

5- Details- You can view the information of currently playing video file, like storage location / file size / recording time etc.

6- Exit- Exit the player.

5. Recorder

You can record when entering Recorder. (According to national laws from different countries, recording may infringe on the privacy of others and cause legal disputes. Please use it with caution!)

Options :

1- Start recording: Start recording During recording, you can press the upper right button to stop. When stopping, the recording file will be saved automatically.

2- Record file list: You can view a list of your recorded files. (the recording file is in the same format as the MP3 file, so it is stored in the same folder)

After opening the list of recording files, you can move the cursor, select the file, and press the option button to implement "Open/Set as ringtone/Send/Delete/Rename".

3- Storage: Choose a storage location, phone or memory card.

Note: Due to the Multimedia function is necessary to be used with a memory card. We recommend you to insert a memory card into the phone !



Image

When entering the Image, the system will take time to arrange if you have many photo files. Please wait patiently.

When the photos are arranged, you will see a list of pictures arranged in

chronological order. You can press the up / down keys / * / # keys to move up / down / left / right.

After selecting, press Options - View to zoom in. When viewing, you can press the up / down keys to view all photo files.

When viewing, you can press Options to set the photo file:

- 1- Set as wallpaper: You can set the currently viewed photo file as a wallpaper.
- 2- Set as contact icon: You can set the currently viewed photo file as a contact avatar.
- 3- Delete: You can delete the currently viewed photo file. (When the photo is deleted, it cannot be recovered. Please use it with caution.)
- 4- Share: You can send the currently viewed photo file to your friends via MMS / Bluetooth.
- 5- Slide show: You can play all your photo files in order by using the slide show.
- 6- Details- You can view the shooting time, photo size, and other information of the currently viewed photo.



ICE Settings

1. Owner info

Please follow the prompts in this menu to fill in your personal information: Name / Birth / Height / Weight / Address / Language / Insurance / Blood Type / Allergies / Medication / Medical history.

Note: Please fill in carefully because these information is very important. When you encounter emergency assistance, the on-site medical staff can promptly and accurately take measures and get in touch with your family !

2. SOS button active

SOS button switch is turned on by default. You can manually turn off by

pressing it, when you need emergency help, long pressing the SOS button for about 5 seconds and call for help.

Note: When you need an emergency help, the phone will make a speed dial for help. We recommend you to turn it on by default, do not turn it off !

3. SOS numbers

You can add 5 emergency contacts.

a): Options > Manual edit You can input the contact number manually and press "OK" to save.

b): Options > Add from contacts You can add an emergency contact through Contacts. When the cursor is selected, press "OK" to save.

c): Deleted When you move the cursor to the corresponding emergency contact, you can delete the contact and replace it.

4. Emergency SMS active

Emergency help SMS switch. When you press the SOS button, the phone will send emergency help messages to your 5 emergency contacts prompting that you are in danger and needing help currently.

Note: This function is enabled by default. We recommend you turn it on by default. Do not turn it off !

5. Emergency SMS

In this function, you can edit your own SOS Message, and then press "OK" to save. Please ensure that there is "emergency help" in the message to ensure that you can get the emergency contacts' response in time, avoid the information content is not clear and miss the rescue time !

6. Emergency alert

Emergency alert. When you press the SOS help button, the alarm will

sound to remind the people around you that you need an emergency assistance. This feature is enabled by default. We recommend you turn it on by default. Do not turn it off !

7.Speed dial

Speed dial function. The 2/3/4/5/6/7/8/9 keys support speed dial function. You can add the contacts you need under the corresponding number keys. In the standby interface, press and hold the number key for about 3 seconds, then it will call the corresponding contact's number.

a):Options > Manual edit You can input the contact's number manually and press "OK" to save.

b): Options > Add from contacts You can add an emergency contact through Contacts. When you select the contact, press "OK" to save.

c):Delete When you move the cursor to the corresponding emergency contact, you can delete the contact and replace it.



Alarm

In Alarm, you can set 10 groups of alarms

Edit:

Theme: Edit the alarm's name.

Time: Edit the repeat time of the alarm. The default time settings is 12-hour format, you can press "5" key to switch to AM/PM.

Ringtone: Edit the alarm's ringtone. You can select the system default ringtone, or select music in the memory card.

Repeat mode: Select the repeat mode of an alarm :

a):Once: The alarm will repeat only once.

b):Every day: The alarm will repeat at the same time every day.

c):Working days: The alarm will repeat at the same time of working days.

When you select the Working days repeat mode, a week option will appear. You can press the "*" and "#" keys to select the day, and then check OK > Cancel to cancel the alarm on the day of the week.



Tools

1 – Calendar

In Calendar, you can set a daily-trip reminder :

Options :

- a) Add new schedule -You can add a new schedule reminder.
- b) View schedules – You can view the schedule reminders for the day you have set.
- c) All schedules – You can view all schedule reminders you have set.
- d) Clear today's schedules – You can clear schedule reminders of today.
- e) Clear all – You can clear all schedule reminders.
- f) Go to date – Jump to your specified date.
- g) Weekly – You can set the weekly schedule reminders.
- h) Daily – You can set the trip reminder of every hour in a day.

2 – Calculator

In Calculator, you can press "Up" and "Down" buttons to select the operation symbols, press "OK" to get the result and press "Delete" to clear the number.

3 – My files

In My files, you can view files in various folders of your phone / memory card, delete or create new folders.

4 – Bluetooth

You can use Bluetooth for file transferring, or use a Bluetooth device to play music, etc. Effective distance: In the absence of any occlusion space,

the effective distance is 10M.

You can select the Activate option, check the Bluetooth feature, and choose the Bluetooth visibility to make your Bluetooth device visible.

1) Paired device: There is no paired device in this option when you use it at the first time, you need to search it :

a Add new device : Press this option, the phone will search for Bluetooth devices. (When searching for devices, make sure the device being searched is in Bluetooth enabled)

b When the phone searches for the device that needs to be paired, select "Stop" to stop searching, then move the cursor to select the device name and select: "Pair" to pair.

c When pairing with Bluetooth, you need to input the pairing password. The default Bluetooth password of the device is "0000". After entering the password, the pairing will be completed. You can view it in the Paired device.

d When the pairing is completed, you can use Bluetooth to send files to the paired device. For example, open the MP3 file in the memory card file with My files: **Options > Send > Bluetooth > Select paired device > Select to send the file.**

e When other paired devices send you a file, you will be prompted: XXXX is transferring the file to you. You can select "OK" to receive. When the file transfer is completed, you can choose "Open" to view it, or choose My files or View received files on the memory card to view.

2) Device name: You can modify the Bluetooth name in which you can view the Bluetooth device easily.

3) Bluetooth file storage: You can select the storage location of the received files by Bluetooth, mobile phone / memory card.

5 – Easy talk

Users can send voice messages after bound to the APP. This feature needs

to be used with the app.

a) When the phone is in standby, you can receive a message after the other party sending you a voice message. After choosing the "Open" option, you will directly enter the Easy talk interface to play the other party's voice message. After the voice message is played, you can press the "0" button to record your voice message, and release the "0" button to send.

b) You can send an emoticon to the other party. In the Easy talk, select the contact. The number keys 1/2/3/4/5/6/7/8/9/*/0/# correspond to different emoticons, you can press the number keys to send the corresponding emoticons to the other party.

Notes :

1 In the standby interface, if you want to send or play voice messages, you can press and hold the "PPT" button to enter the Easy talk.

2 When you are entering the voice message, press and hold the "PTT" Button, When the recording symbol displays, start your voice recording. Release the "PTT" button to send.

6 – Today step

You can view how many steps you walked of the day.

7 - Medical reminder

You can set up time reminders using the Smart App, such as reminding you to take medicine / reminding you to charge the phone / reminding you to do something that you will easily forget.

8 – Internet

The default homepage is www.google.com, when the GPRS service has been turned on, you can browse the web.



Settings

- 1 – Date & time** The system automatically updates the network time corresponding to the SIM card by default. When some carriers cannot update the time properly, please enter the time/date manually. Time, date, and time format settings are available.
- a) **Set time** -Please input in HH:MM format, AM/PM, press “Up” or “Down” to switch, press “OK” to save time.
- b) **Set date** - Please input in YYYY/MM/DD format and press "OK" to save the date.
- c) **Time Format**
Time display format. You can choose the 12-hour or 24-hour display mode. 12-hour display mode is : XX:XX AM / XX:XX PM 24-hour display mode is : 01:00-24:00.
- d) **Date format**
Date display format. You can choose one of the three date display formats : YYYY/MM/DD and MM/DD/YYYY and DD/MM/YYYY.
- e) **Update time settings**
Auto update time: The function is enabled by default. It will update the time/date automatically after reading the SIM card. Do not close it.
Manual update time: This function is used to read the SIM card. You can use this function to update the time manually when it is not updating automatically.

2- Language settings

In the system software, there are: **English / Arabic / French / Hindi / Portuguese / Russian / Spanish / Italian / German / Polish / Chinese** for your choice. After selecting the language, press "OK" to save.

3 – Sound settings

- a) **Ring settings**-In this function, you can set Caller ringtone, Message ringtone, Key tone and Power ringtone. You can also add the sound you want as a ringtone from the memory card. When the ringtone setting is completed, press “OK” to save.
- b) **Adjust volume**-In this function, you can set the volume of Caller ringtone, Message ringtone, Alarm & calendar ringtone, Call and Power ringtone. When volume setting is completed, press “Done” to save.
- c) **Silent** – In this function, you can set all the prompts to silent mode: Call, Messages, Alarm, Button sound, Power on and off, etc.
- d) **Ring type**
In this function, you can set the prompt ring type of: Call / Message / Alarm & calendar , there are four modes to choose from :
 - Ringtone – Ringing only, without vibration.
 - Vibrate – Vibration only, without ringing.
 - Silent – Silent mode.
 - Vibrate then ring – Vibration and ringing.

e) **Speech Settings**

- Key Ring – You can turn on the button voice announcement, then when you are entering a phone number to make a call, a voice will be emitted.
- Incoming Call Ring – You can open the caller number broadcast. When there is an incoming call, the caller number is broadcast first and then the bell is prompted.

4 – Display

- a) **Main Menu style**: You can set individual ICON menu or list menu.
- b) **Block function**: You can hide the default menu icons of some functions that you don't need or don't use often to make the menu interface easier.
- c) **Start-UP wizard**: You can re-run the boot wizard to quickly set the

language / ringtone / time / date

- d)**Wallpaper:** You can change the wallpaper from the system default wallpapers or photo files (static or dynamic) on the memory card.
- e)**Font size:** You can set the system font size.
- f)**Idle display:** You can select the standby interface to display the content: display the time/date/SIM card information, display only the time/date, display only the SIM card information or display neither the time/date/SIM card information.
- g)**Brightness:** You can adjust the screen display brightness. The system defaults to level 4. When your phone is low which may reduce the screen brightness to extend battery life.
- h)**LCD backlight:** You can choose the length of time of the screen is on. You can set the brightness time of 5 seconds to 30 seconds. When there is no operation on the phone, the screen will automatically go out to reduce the power consumption. If you want the screen to be always on, please select: "Always on " and press "OK" to save.

5 – Call settings

Call divert

- a)Call forwarding unconditional - Activate it to divert all calls into voice mail or the preset phone number. Press "Check status" to check the status of this service.
- b)Call forwarding on busy - When activate this function, if your phone number is in conversation, all coming calls will be diverted to voice mail or the preset phone number.
- c)Call forwarding on no reply - When activate this function, if your phone number is no answer, all coming calls will be diverted to voice mail or the preset phone number.
- d)Divert if unreachable - When activate this function, if your phone number is unreachable due to lost signal or be powered off etc., all

coming calls will be diverted to voice mail or the preset phone number.
e)Cancel all diverts - Cancel all diverting services above.

Call waiting

- a)Activate - After activate this function , when you receiving another new call during a phone conversation, you'll be informed about the new call, you can hold on your current phone conversation ,and answer the new call.
- b)Cancel - If deactivate this function, when another person call you during your current phone conversation, this call cannot come in.
- c)Check status - Check the status of call waiting (activated or deactivated).

Call barring

- a) All outgoing calls: Barring of all outgoing calls.
- b) All incoming calls: Barring of all incoming calls.
- c) Incoming calls when roaming: Barring of incoming calls while roaming.
- d) ISD calling: Barring of making or receiving international calls.
- e) Dial when INTL roaming: Dial international roaming.
- f) Cancel all barring: Cancel all call restrictions.

Hide ID

- a) Hide ID: Hide your phone number.
- b) Display own ID: Display call number.
- c) Display ID by network: Display network call ID synchronously.

Other

- a) IP prefix: Choose the package number of the offer before the international long distance number is dialed.

- b) Call time minute reminder: Set call duration reminder.
- c) Auto redial: Set automatic call redial.
- d) Vibration when connected: When the call is received, the phone will vibrate to remind you.
- e) Flight mode
- f) Auto record voice call: Voicemail automatically recording.

6 – Network settings

- a) Network account: Choose the carrier network channel.
- b) GPRS Service: Check this option to open GPRS service.
- c) Data roaming: Check this option to turn on data transfer.
- d) Data connection settings :
 - Connect when needed--- Check this option when you need a data connect service.
 - Always connect--- Data connect service is always opened (data traffic is consumed faster when this option is checked).
 - Power saving mode--- Power saving mode, only data transmission is enabled for the system default functions.
- e) Network selection:
 - Auto--- Update the network automatically.
 - Manual--- Update the network manually.

7 – Security

- a) PIN This option is to calibrate the SIM card. The PIN code belongs to the operator's parameters. If you are not clear about the PIN code, do not set it or which may cause the SIM to fail.
- b) PIN2 This option is to calibrate the SIM card. The PIN code belongs to

the operator's parameters. If you are not clear about the PIN code, do not set it, which may cause the SIM to fail.

c) Phone lock

Phone lock: When this option is selected, the original password is required: "1234".

Modify phone password: Set a new password. When the new password is saved, you need to enter the phone password to enter the system when you are turning on the phone at the next time. Please remember the phone password you have set. If forget, your phone will be invalid.

d) Reset all Reset the phone to the factory state and all system data to the initial state. Please save your contacts, messages, photos and other information before restoring. Reset all will result in data loss. The password of Reset all is: "1234".

e) Blacklist

Blacklist list: Display the blacklist list you have added. In Blacklist list, delete contacts will remove them from blacklist.

Blacklist settings: You can choose blacklist interception mode to block blacklisted contacts to call in or block blacklisted contacts to send SMS.

You can add unneeded contacts to the blacklist in Contacts, Call logs or Messaging.

f) Shortcut settings

UP Button / Down Button You can set shortcuts. You can select different functions and set them as shortcuts. In the standby interface, press "UP" button and "Down" button to enter the corresponding menu functions.

Thank You

FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 5mm from the body.

Non-compliance with the above restrictions may result in violation of RF exposure guidelines.

IC Warning :

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne

doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

Radio apparatus containing digital circuitry which can function separately from the operation of a transmitter or an associated transmitter, shall comply with ICES-003. In such cases, the labelling requirements of the applicable RSS apply, rather than the labelling requirements in ICES-003.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.