



PERSONAL MUSIC AND LIGHT
HEADPHONE SYSTEM


NEON 100

U S E R G U I D E

PRODUCT AND SAFETY INFORMATION:

1. Use the standard USB charging cable (included) to charge your headphones. Plug the cable into any standard USB (5 V, over 500 mA) power adaptor or computer.
2. Avoid listening to music at high volume levels for extended periods of time. Exposure to high volume levels for extended periods may cause hearing damage.
3. Avoid storing the headphones in extreme heat or cold.
4. Avoid exposing the headphones to water or excessive moisture. If the headphones becomes wet, turn the power off, pat the device dry with a towel, and let it dry completely before turning on again.
5. Do not attempt to disassemble, modify, or repair the headphones.
6. Avoid excessive impact or shock to the headphones.
7. Keep out of the reach of children or pets.
8. Do not tug on cables or touch power cables with wet hands. Avoid getting water in charging or cable receptacles.
9. Do not use the headphones near microwaves or wireless LAN adapters.
10. Turn the device off when not in use.

 
11. When storing the headphones, place them in the included protective carrying pouch.
12. When cleaning the headphones, use a soft, dry cloth to wipe them clean. Do not use solvents.
13. Wipe the ear pads with a damp cloth after use and before storing. Exposure to excessive sweat, moisture, or makeup for extended periods can damage the ear pads. If damage occurs, replacement ear pads can be purchased.
14. Do not use these headphones while driving, riding a bicycle, or walking in urban environments. The headphones will block outside noise and may pose a safety hazard. Always use caution and maintain awareness to protect yourself and others when using your headphones.
15. Use these headphones only for their intended purpose.
16. This device cannot be used for purposes related to human safety as it may cause radio interference during operation.

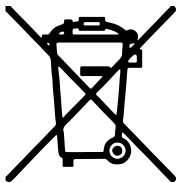

WARNING:

Electrical and electronic equipment, parts and batteries marked with this symbol must not be disposed of with normal household waste. It must be collected and disposed of separately to protect the environment.

 BUTTONS AND SWITCHES

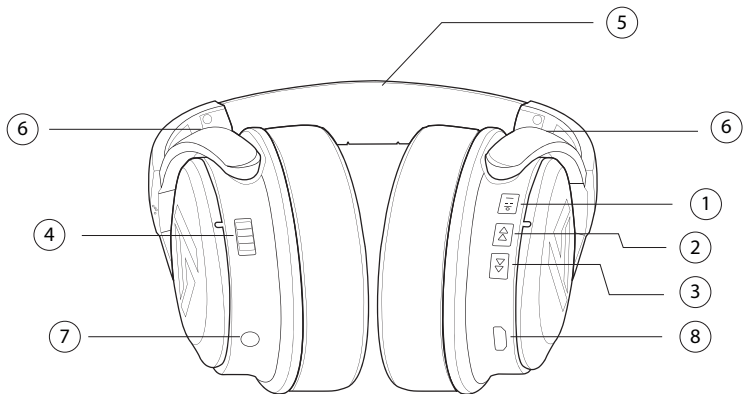

1. Multi- function Button/Play/Pause

2. Volume Down/ Previous Track

3. Volume Up/ Next Track

4. Lighting Effects

5. Headband

6. Headband Extension

7. Headphone 3.5mm Input Jack

8. Micro USB Charging Jack

WEARING THE HEADPHONES:

 


The NEON 100 headphones are designed to be lightweight, adjustable, and very comfortable to wear. The unique multi-pivot hinge mechanism and headband extension allow for easy adjustment to fit almost any head, hairstyle, and ear size combination. Simply extend or retract the adjustable headband to adjust the ear cups in the most comfortable position. Place the cups over your ears and enjoy the great sound quality.

CHARGING:

The headphones are not charged upon purchase and must be charged before first use.


1. Connect the provided USB charging cable to the headphones.
2. Connect the other end of the cable to a computer.
You may also use a standard USB power adapter (5V, over 500 mA).

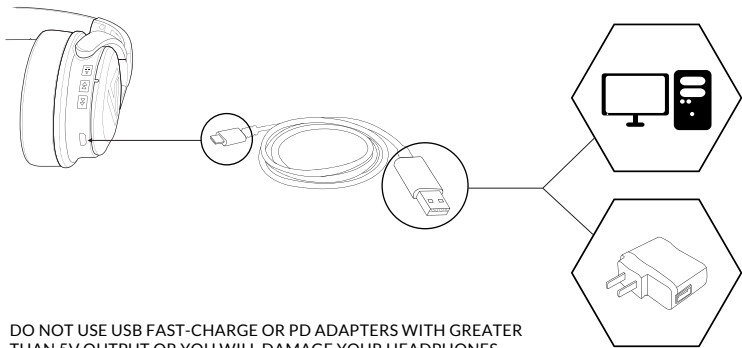


DO NOT USE USB FAST-CHARGE OR PD ADAPTERS WITH GREATER THAN 5V OUTPUT OR YOU WILL DAMAGE YOUR HEADPHONES AND VIOLATE WARRANTY.

POWER ON AND OFF YOUR HEADPHONES:

 1. To power on your headphones, press the Multi-function Button (1) for 2 seconds.
2. To power off your headphones, press the Multi-function Button (1) for 3 seconds.

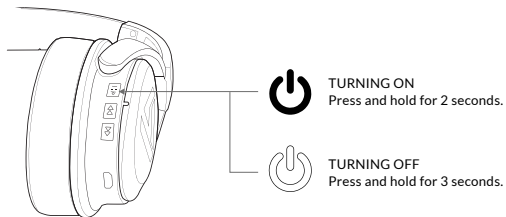


CONNECTING TO A BLUETOOTH DEVICE:

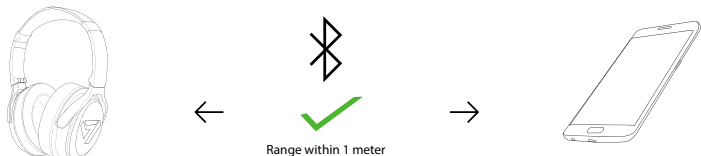 


1. Turn on your mobile device and go to the Bluetooth menu.
2. Make sure the headphones are within one meter from the mobile device.

 3. Press and hold the Multi-function Button (1) on your headphones for 3 seconds.

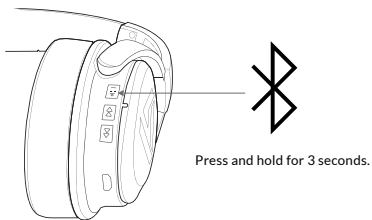


 4. Select NEON 100 on the Bluetooth device menu. Ensure that the device shows "Connected" in the status display. (IF a PIN is required, enter 0000.)

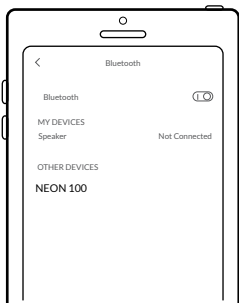

RECONNECTING TO A DISCONNECTED DEVICE:

 1. If previously connected to a Bluetooth device, the NEON 100 will automatically reconnect with the device when powered on.

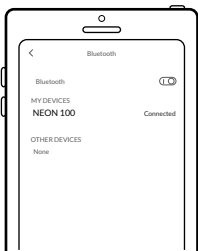

2. The headphones will not automatically reconnect if the one meter distance is exceeded.

 


Range more
than 1 meter



CONNECTION WAITING MODE:

1. If the headphones are powered on and no Bluetooth device is available for pairing, the headphones will enter "Connection Waiting Mode". If a Bluetooth device becomes available, press the Multi-function Button (1) to connect automatically.

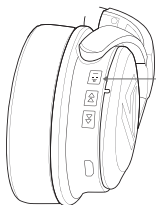


Press and hold
for 3 seconds.



2. If no Bluetooth device becomes available, the headphones will power off automatically after five minutes.




 Automatically
turn off 5 minutes
when not used.

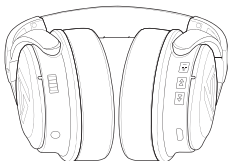

PLAYING AND CONTROLLING MUSIC:

 1. Press the Multi-function Button (1) one time to play music from your Bluetooth device.
2. Press the Multi-function Button (1) for 1 second when music is playing to pause the music.
3. Press the Multi-function Button (1) for 1 second when music is paused to begin playing again.

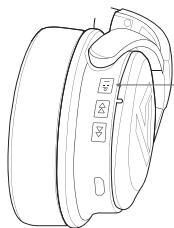

PLAY MODE

 
One time press to play music.

PAUSE MODE

One time press to play music.


RESUME PLAY

Press 1 second to resume music when paused.

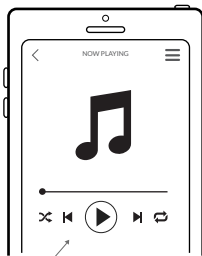


Icon change when Multi-function Button(1) press.

 - To go back to the previous track, press the Volume Down Button (2) for 1 second.
- To skip to the next track, press the Volume Up Button (3) for 1 second.

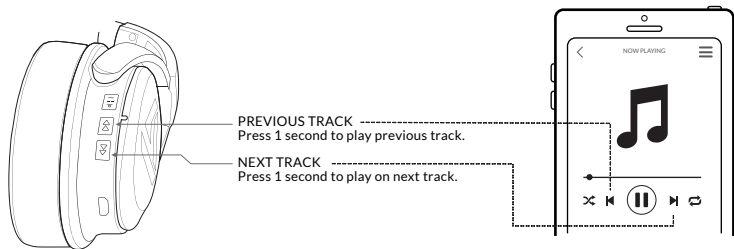

 - To lower the volume, press and hold the Volume Down Button (2) for more than 1 second.
- To raise the volume, press and hold the Volume Up Button (3) for more than 1 second.

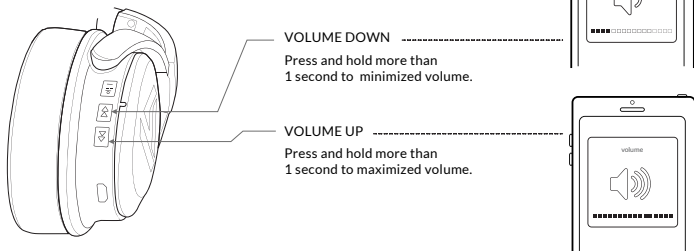


USING YOUR HEADPHONE'S LIGHTING EFFECTS:


Express yourself!

Our goal was to create great sounding and super comfortable headphones that are also fun to use. There are a number of lighting effects that can be configured to your personal tastes. Set the color and brightness, make it pulse, and change colors automatically.

 Enjoy!

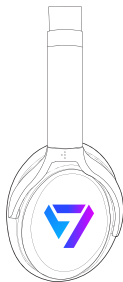

Left Side

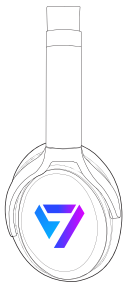 


Right Side

USING YOUR HEADPHONE'S LIGHTING EFFECTS:

1. Setting the lighting mode.

 - a. A short press on the Lighting Effects Button (4) cycles the headphone lighting between On with solid color, Pulse to Music, SVN Color Mode, and Off.

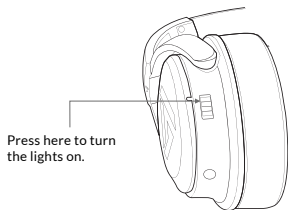

On



Off

- i. On is a solid neon color under the logo.
- ii. Pulse is a solid lighting color pulsed to the beat of your music.
- iii. SVN Color cycles through all of the colors in 5-second intervals.
- iv. Off is no light behind the logo.

2. Setting the lighting color.

- a. Press the Lighting Effects Button (4) for 3 seconds to cycle through the lighting colors. Stop on the one you want. This will be the color for the ON or PULSE mode lighting effect. The color choices include red, blue, green, purple, yellow, and teal.

3. Setting brightness level.

 
- a. Press the Lighting Effects Button (4) quickly (tap-tap) two times to switch the light intensity from full to half brightness. Using the lower lighting level will increase the battery life of the headphones.

Off Mode



Press button for 3 seconds to cycle colors.

Quickly tap 2x to adjust brightness.

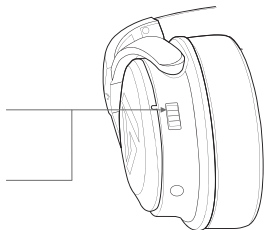

Featured Colors:



White



Red



Blue



Green



Purple



Yellow



Teal

MAKING CALLS:

 


Press to answer incoming call. (Press again to end call)
Press and hold 1 second to reject incoming call or redial the last number called.
Press and hold 1 second to answer waiting calls, end current calls and return to previous call.
Press and hold 1 second to switch between waiting and main calls.

- 1. ACCEPTING OR ENDING A CALL** (during music playback included)
 - Upon hearing the incoming call tone, press the Multi-function Button (1) once to answer the call. This will also pause your music.
 - Press the Multi-function Button (1) again to end the call. Music will resume.
- 2. MAKING A CALL** (during music playback included)
 - Press and hold the Multi-function Button (1) for 1 second to redial the last number called. This feature may vary based on the mobile device.
- 3. REJECTING A CALL** (during music playback included)
 - Upon hearing the incoming call tone, press the Multi-function Button (1) for 1 second to reject the call.
- 4. CALL WAITING** (during music playback included)
 - For incoming calls during another call, press and hold the Multi-function Button (1) for 1 second to place the current call on hold and connect the second call.
 - Press and hold the Multi-function Button (1) again for 1 second to switch between the waiting call and the connected call.
 - Press the Multi-function Button (1) once to end the current call and return to the waiting call.

CONNECTING TO AN ANALOG AUDIO SOURCE:

1. Use the 3.5mm to 3.5mm analog cable (included) to connect to the 3.5mm Analog Input Jack (9) on the headphones.
2. Connect the other end to the analog audio source.
3. Set the desired volume on the attached device. The headphone volume controls will not operate when connected to an external wired audio source.

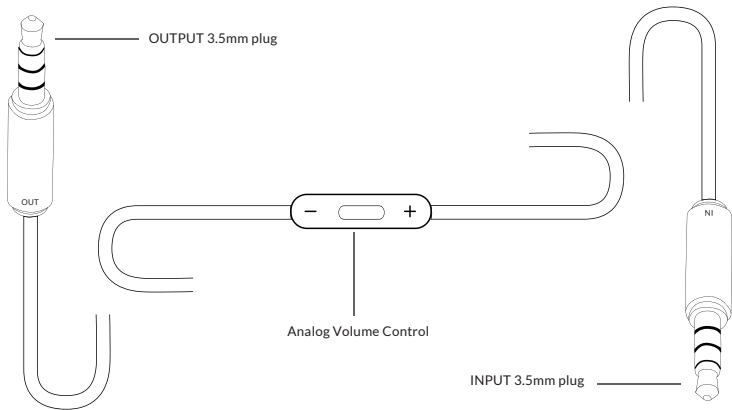

TROUBLESHOOTING:

1. The headphone power does not turn on.
 - a. Charge the headphones. If the headphones do not turn on even after charging, contact customer service at www.svnsound.com.
2. The headphones do not charge.
 - a. Check whether the USB charging cable has been properly connected to the headphones and the power source.
 - b. Check whether the PC power is on and that it is properly connected.
 - c. When using a separately purchased USB power adapter, make sure that it is properly connected.
3. The headphones do not pair.
 - a. Check whether the Bluetooth device is powered on.
 - b. Check whether Bluetooth is enabled on the Bluetooth device.
 - c. Check whether the Bluetooth device is within 1 meter from the headphones.
 - d. Check whether the Bluetooth device is compatible with the headphones.
4. Music will not play through the headphones.
 - a. Check whether the headphones and Bluetooth device are powered on.
 - b. Check whether the music is playing on your Bluetooth device.
 - c. Check the volume level on your Bluetooth Device.

5. Sound lag/ distortion/ noise.
 - a. Check if there is a 2.4 GHz device near your headphones or Bluetooth device.
 - b. Check whether the Bluetooth device is within 10 meters (30') of your headphones.

6. Caller cannot be heard.
 - a. Check whether the headphones are connected to the Bluetooth device.
 - b. Check whether Bluetooth is enabled on your Bluetooth device.
 - c. Check the volume level on your Bluetooth device.

WARRANTY:

To register your product and review warranty information, please go to www.svnsound.com/warranty

REGULATORY INFORMATION:

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by SVN Sound could void the user's authority to operate this equipment.



Hereby, the manufacturer declares this device is in compliance with the Directive (RED) 2014/53/EU. The full text of the EU declaration of conformity is available at the following web address: www.svnsound.com/certifications