

# TikiTunes Pro™

## Quick Start Guide



### CONTROL PANEL

 **Flame**  
Light On/Off/Cycle Modes

 **Power**  
Turn the Speaker On/Off

 **Bluetooth®**  
Activate PartySync™ Mode

 **Plus**  
Next Song/Volume Up

 **Minus**  
Last Song/Volume Down

 **Play/Pause**  
Play/Pause the Song

 **Battery**  
Check the Battery Level

### QUICK START

**Speaker**  
1. Power on the TikiTunes Pro.  
2. Connect to a Bluetooth® enabled device.  
3. Begin listening!

 
**Light**  
Modes: Flicker | Pulsing | Solid

- Single click the **Flame** (🔥) button to turn on & cycle through the modes.
- Press and hold the **Flame** (🔥) button to turn off the light without cycling through the modes.



### CONNECT TO A DEVICE

1. Single click the **Power** (⏻) button.
2. Turn on the Bluetooth feature in your device's settings.
3. Select "TikiTunes Pro" from the list of devices. Once you hear the voice prompt "TikiTunes Connected" you are ready to begin streaming. This will be the "Parent" speaker.



Do you have more than one TikiTunes Pro?  
Continue with steps 4-7!

### SYNC UP TO 100 SPEAKERS



4. Turn on PartySync Mode on the Parent speaker by single clicking the **Bluetooth** (📶) button. You will hear "PartySync Mode".
5. Power on the second speaker and single click the **Bluetooth** (📶) button to turn on PartySync Mode. This speaker and all additional will be called the "Child".

### LISTENING

Audio can be adjusted from the Control Panel or directly on your device.

- **Plus (+)**  
Single click = next song  
Press and hold = volume up
- **Minus (-)**  
Single click = restart song  
Press and hold = volume down

### BATTERY

Single click the **Battery** (🔋) button to check the battery level. A voice prompt will announce the current percentage.

It is recommended to charge the speaker to 100% before each use to achieve the longest playtime.

To charge, connect the included Type-C to USB Cable to a USB output.

The lights on the Control Panel will illuminate red while charging. Once fully charged, the lights will change to blue or turn off.

Recharge Time: 5-6 Hours




6. To connect the Child and Parent speakers, press and hold the **Bluetooth** (📶) button until you hear a beep. The prompt "Synced" will play when successfully connected.
7. Repeat steps 5 & 6 for each additional TikiTunes Pro you would like to connect.

- **Pro Tip: Disconnecting Speakers**  
Single click the **Bluetooth** (📶) button on any Child speaker to disconnect from the Parent.

Single click the **Bluetooth** (📶) button on the Parent speaker to disconnect all Child speakers.

- **Pro Tip: Indicating the Parent Speaker**  
When multiple speakers are connected the LED lights of the control panel will slowly blink to indicate which speaker is the Parent.

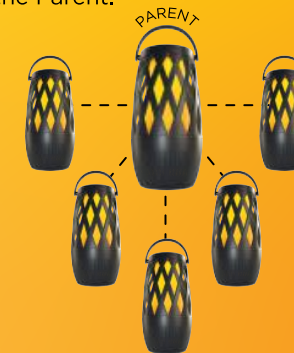

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that

interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

The device has been evaluated to meet general RF exposure requirements, the device can be used in portable exposure conditions without restriction

## TROUBLESHOOTING

### Connecting To Bluetooth

If TikiTunes Pro does not show up in your Bluetooth menu, try:

- Turning the device's Bluetooth off, wait 15 seconds, then turn it back on.
- Turning the TikiTunes off, wait 15 seconds, then turn it back on.
- "Forget" TikiTunes Pro from all other near-by mobile devices.

### Sound Quality

If the audio being streamed to TikiTunes Pro is skipping or has poor sound quality, try:

- Moving the Main TikiTunes closer to the connected device.
- Moving all paired TikiTunes Pro Speakers closer to the Main Speaker.
- Checking for interferences between the device and the Main Speaker (walls, metal structures, etc).

## TECH SPECS

**Pairing Name:** TikiTunes Pro

**Version:** 5.3

**Pairing Capacity:** Up to 100 Speakers

**Water Resistant:** IPX6

**Battery Type:** Li-Ion 3.7 V DC 4,000mAh

**Recharging Time:** 5-6 Hours (from 0%)

**Type-C Input:** 5V/1A

**Playtime:** Up to 12 Hours

\*Varies by audio volume and light brightness.

**Max Output Power:** 10W

**Transmission Distance:** 50 ft

**RF Frequency:** 2.402G Hz - 2.48 GHz

**Drive Unit:**  $\varnothing$  57 mm

**Impedance:** 4 ohm

**Sensitivity:** -85 dBm

**S.P.L.:** 95 dB

**Accessory Thread Size:** 1/4-20 | Class 3A

**Dimensions:** 7.4" x 3.9"

**Weight:** 1.25 lbs

## SAFETY INFORMATION

By using the TikiTunes, you hereby agree that Limitless Innovations, Inc., an Illinois corporation and its affiliates ("Limitless") shall have no liability for any losses associated with property damage, personal injury or loss of life that are incurred by you or by any third party in connection with or relating in any manner whatsoever to your use of the TikiTunes. By using the TikiTunes, you hereby agree at all times to comply fully with all safety warnings, operating instructions and general safety information in this user manual. By using the TikiTunes, you further agree to hold harmless Limitless, (and Limitless' officers, directors, shareholders and employees) in connection with any losses sustained by you (including, without limitation, losses arising in whole or in part from property damage, personal injury or loss of life) relating in any manner whatsoever to your use of the TikiTunes.

## WARNINGS

- The TikiTunes is **NOT** a toy and should be kept away from children.
- Do **NOT** use the TikiTunes near a magnetic or electric field.
- Do **NOT** use the TikiTunes in direct sunlight or extreme heat for extended periods of time.
- Do **NOT** use the TikiTunes if it has been damaged and/or modified.
- Do **NOT** subject the TikiTunes to harsh chemicals.
- Do **NOT** submerge the TikiTunes or its accessories in water.
- Do **NOT** store the TikiTunes where temperatures will exceed 140° F (60° C).
- Do **NOT** insert any foreign objects into the openings or port of the TikiTunes.
- Do **NOT** charge the TikiTunes in high humidity conditions.
- Do **NOT** attempt to replace the battery as it is a non-serviceable part.
- Do **NOT** attempt to disassemble, repair, or open the TikiTunes or its accessories in any way.
- Do **NOT** paint or apply coatings to the TikiTunes as you might affect moving parts or damage internal components.
- Do **NOT** leave the TikiTunes plugged in for extended periods of time. Doing so may decrease the life of the battery life.
- Batteries should be recycled or disposed of, as per state and local guidelines.

**To view the complete user manual, please visit:**  
[LimitlessInnovations.com/TikiTunesPro](https://LimitlessInnovations.com/TikiTunesPro)

## LIMITLESS™

All rights reserved. TikiTunes™, TikiTunes Pro™, and Limitless™ are trademarks of Limitless Innovations, Inc. Design and specifications subject to change without notice. Products may vary from images shown. Accessories sold separately.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Limitless Innovations, Inc. is under license. All other trademarks included herein are property of their respective owners.

**LimitlessInnovations.com**

Support@LimitlessInnovations.com  
(855) 843-4828

Limitless Innovations, Inc.  
4800 Metalmaster Way  
McHenry, IL 60050

© Limitless Innovations, Inc.



@LimitlessInnovations



/LimitlessInnov



/LimitlessInnov



/LimitlessInnov



Limitless Innovations