

Safety Instructions

Read and follow all the safety instructions:

- This device is for indoor use only.
- Avoid dropping the device from high places.
- Do not significantly modify the device.
- Do not leave children unattended with the device.
- Only use the attached power cable to charge this device.
- This device is not waterproof. Avoid exposing it to splashing, water drops, or any high-humidity environment.

- If you don't plan to use this device in the short term, long press for 3 seconds to Power-Off Mode.
- If you have not used this device for half a year, please recharge it before using it again in order to protect the battery.

CAUTION: Risk of explosion if the battery is replaced by an incorrect type. Be aware discharged battery may cause fire or smoke, tape the terminals to insulate them.


Introduction

Thanks for choosing Govee Sync. This portable box contains one button which can sync any music type via Bluetooth to other Govee devices within a range of 10 meters (32.8 ft), greatly enhancing the harmony between the lighting effects and your favorite songs.

What You Get

Sync Box	1
Type-C Cable	1
User Manual	1
Service Card	1

At a Glance

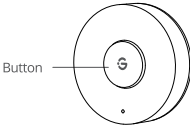

Button	Function
Short press	Stand-by Mode ⇌ On
Long press for 3 seconds	Power-Off Mode ⇌ On
Short press for 5 times within 3 seconds	Reset

Pairing Your Device with Govee Home App



Govee Home App

For FAQs and more information, please visit: www.govee.com

Pairing Instructions

- 1 Download Govee Home App from the App Store (iOS) or Google Play (Android).
- 2 Turn on Bluetooth on your smartphone.
- 3 Open Govee Home App, tap the “+” icon in the top right corner and search for “H1162”.
- 4 Tap the device icon and follow the on-screen instructions to complete pairing.

05

Specifications

Connected Sub-devices	≤5
Control Range	10m/32.8ft
Voltage	5V DC
Control Method	Govee Home App

Note:

Sub-devices connected to Govee Sync cannot be individually controlled by their remote, control box, Govee Home App and any third-party Voice Assistants. If you wish to control the sub-device separately, disconnect it from Govee Sync or turn off Group Control on the app.

06

Troubleshooting

1. Cannot connect to Govee Home App.

- Check if the device is powered on.
- Check if Bluetooth on the smartphone is enabled, or try connecting with another smartphone.
- When connecting for the first time, ensure the smartphone is near the device.
- If a connection error still exists, please delete the connected device from "My Device" on the app.
- Reconnect to Govee Home App by following the previously provided instructions.

2. No response to any press during usage.

Use a needle or a similar object to press into the hole on the bottom of the device to reset it.

07

Customer Service

- 🛒 Warranty: 12-Month Limited Warranty
- 🔑 Support: Lifetime Technical Support
- ✉ Email: support@govee.com
- 🌐 Official Website: www.govee.com
- 📺 @Govee 📷 @govee_official 🎵 @govee.official
- 🐦 @Goveeofficial 📘 @Govee.smarthome

08



User Manual



Model: H1162
Govee Sync Box II

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.