# MBH583 IM

# SIZE: 70x158mm

# MAGNAVOX

# TRUE WIRELESS SOFT HOOKS

# OWNER'S MANUAL

# FCC STATEMENT

technician for help.

receiver.

FCC NOTICE:

1. This device complies with Part 15 of the FCC Rules.

This equipment has been tested and found to comply

with the limits for a Class B digital device, pursuant to

provide reasonable protection against harmful

interference in a residential installation. This equipment

generates, uses and can radiate radio frequency

energy and, if not installed and used in accordance with

radio communications. However, there is no guarantee

that interference will not occur in a particular

installation. If this equipment does cause harmful

interfer-ence to radio or television reception, which can

be determined by turning the equipment off and on, the

user is encouraged to try to correct the interference by

Increase the separation between the equipment and

different from that to which the receiver is connected.


Connect the equipment into an outlet on a circuit

• Consult the dealer or an experienced radio/TV

one or more of the following measures:

Reorient or relocate the receiving antenna.

- Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation
- 2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

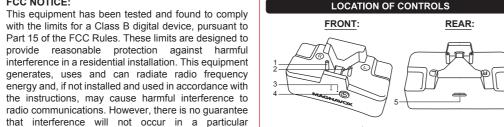

Charging Port for R (Right) Earbud

- 2. Charging Port for L (Left) Earbud 3. Charging Station Indicators
- 4. O Button

5. Micro USB Port (For charging only)

# EARBUDS:

 
1. Charging Port 2. Microphone 3. Earbud Indicators CPP. 4. – Button 5. + Button 6. Multi-function Button

# POWER SOURCE

The Charging Station and Earbuds equipped built-in Li-ion rechargeable battery; recharge it before use or when it is drained as below.

# Charging Station:

- 1. Connect the Micro USB Plug from the supplied USB Connection Cable to the Micro USB Port on the rear of Charging Station.
- 2. Connect the full sized USB Plug from the supplied USB Connection Cable to the USB Port on the Computer or USB Charger. (Computer and USB Charger NOT supplied).
- 3. When charging, the Red Charging Indicators on the front of Charging Station will blink. When charging is complete, it will stop blinking.



# Earbuds:

- 1. Place the L (Left) Earbud into the L (Left) Charging Port.
- 2. Place the R (Right) Earbud into the R (Right) Charging Port as shown in the right
- drawing:
- 3. Press and release the O Button to start charging, press and release the O Button again to stop charging.
- When charging, the Blue Indicator on the front of Charging Station will illuminate.
- The Red indicator on each Earbud will illuminate. Wher charging is complete, it will turn off.

redhilee

- (red

- 1. The charging time period of Left and Right earbuds may vary. It is normal.
- 2. When charging the Charging Station, you can also charge the Earbuds through the station at the same time
- 3. Your battery will last longer if you're following these simple guidelines for caring and storing:
- A. Before first time use, charge the Charging Station and Earbuds approximately 2 hours until there are fully charged.
- 3. Recharge and store the Charging Station and Earduds within the temperature range of 5°C~35°C (40°F~95°F).
- C. Do not charge longer than 24 hours. Excessive charging or running until battery completely flat will damage battery. Battery life will be extended if you keep the battery fully charged.
- D. Battery life naturally shortens slowly over time.
- E. The rechargeable battery incorporated in this product is not user replaceable.

# OPERATION:

# To use the L Earbud alone (Mono mode):

- For first time pairing to the L Earbud to the BT Device ( or repair to a new BT Device) alone (Mono mode), follow the steps below:
- 1. Recharge the Earbud as previously instructed. 2. Take out the L Earbud from the Charging Station to
- power on, the Red and Blue indicators on the Earbud will illuminate and blink.

When the external BT Device searches for the unit, the BT device name "MBH583" will appear on the BT Device Name List on your external BT Device. Pair your BT Device with it.

4. When paired, Earbud Indicators will turn off. 5. If pairing is complete you may now play music and answer calls with your external BT Device.

- 6. During playback:
- sound level: skip tracks ... as usual.
- pause, press again to resume normal playback.
- during an active music session:
- Press the Multi-function Button on the Earbud then

# To use the R Earbud alone (Mono mode):

For first time pair the R Earbud to the BT Device (or repair to a new BT Device) alone (Mono mode), follow the steps

- will illuminate and blink.

PLEASE READ BEFORE OPERATING THIS EOUIPMENT.





3. Power on the external BT Device and enter to BT searching mode. Start pairing following the on screen instructions from the external BT Device.

· Using the controls on the paired BT Device to adjust Press the Multi-function Button on the Earbud to

7. If the Earbud is paired to a Cell Phone and a call is incoming

speak to the Microphone to answer the call. When your call is complete, press the button again to disconnect or end the phone call and resume to music playback. > Or, press and hold the Multi-function Button to decline the incoming phone call then resume to music playback. Quick press the Multi-function button twice to redial the last telephone number your cell phone called. 8. When finished listening, press and hold the Multi-function Button on the Earbud to shut off the Earbud.

. Recharge the Earbud as previously instructed. 2. Take out the R Earbud from the Charging Station to power on, the Red and Blue indicators on the Earbud 3. Power on the external BT Device and enter to BT searching mode. Start pairing following the on screen instructions from the external BT Device.

### Note:

When the external BT Device searches for the unit, the BT device name "MBH583" will appear on the BT Device Name List on your external BT Device. Pair your BT Device with it.

- 4. When paired, Earbud Indicators will turn off.
- 5. If pairing is complete you may now play music and answer calls with your external BT Device.
- 6. Other operations is same as L Earbud.

# To use both L & R Earbuds at the same time (Stereo Mode):

- 1. Take out L (Left) and R (Right) Earbuds from the Charging Station to power on both earbuds, Red and Blue indicators on each Earbud will illuminate and blink. When Paired, the R Earbud indicator will turn off.
- 2. Power on the external BT Device and enter to BT searching mode. Start pairing following the on screen instructions from the external BT Device.

Note:

When the external BT Device searches for the unit, the BT device name "MBH583" will appear on the BT Device Name List on your external BT Device. Pair your BT Device with it.

- 3. When paired, the L Earbud Indicators will turn off.
- 4. If pairing is complete you may now play music and answer calls with your external BT Device in stereo mode. 5. During playback:
- Using the controls on the paired BT Device to adjust sound level: skip tracks ... as usual.
- · Press either one of Multi-function Button on the Earbuds to pause, press again to resume normal plavback.

- 6. If the Earbuds are paired to a Cell Phone and a call is incoming during an active music session:
- Press either one of the Multi-function Button on the Earbuds then speak to the Microphones to answer the call. When your call is complete, press the button again to disconnect or end the phone call and resume to music playback.
- > Or, press and hold the Multi-function Button to decline the incoming phone call then resume to music playback
- · Quick press either one of Multi-function Button twice to redial the last telephone number your cell phone called.
- . When finished listening, press and hold either one of Multi-function Button on the Earbuds to shut off the L & R Earbuds.

# Normal operation after pairing:

- 1. Power on the external BT Device and enter to BT plavback
- 2. Power on the L and/or R Earbuds as previously instruction.
- 3. Wait a few seconds, the earbud will automatically pair to the external BT Device.
- (Some of cell phones may not have the automatically repairing function. Then enter to the BT searching mode in your external BT Device again, start repairing following the on screen instructions from your external BT Device.)
- 4. If pairing is complete you may now play music and answer calls with your external BT Device.

TROUBLESHOOTING	

Check the following before requesting service:				
SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION		
Can't power on	Built-in battery drained Recharge the built-in batter Charging Station and Earb as page 2-3			
	The Charging Station is in Off position	Press the 🖒 Button on the Charging Station to start charging, the Red Indicator on the Earbud will illuminate.		
The Earbuds can NOT be recharging	The Charging contacts on the Charging Station and/or Earbud is dirty	Clear it before charging		
	The Earbud had not insert to the Charging Port firmly	Insert the Earbud into Charging Port firmly		
No sound or sound weak	Volume level of paired device is in low level	Rise the volume level of the paired device		
Sound distortion	Volume level of the paired Reduce the volume level of the paired device			
3T not functioning	The external BT Device had NOT paired to the unit	Pair the external BT Device to the unit as page 3-5		
st not raneadning	The external BT device too far from the Earbud	Place the external BT device close to the Earbud		

# GENERAL SPECIFICATIONS:

Power Source	Charging Station: Built-in DC === 3.7 V, 250 mAh (0.925WH) rechargeable Li-ion Battery; Recharge by DC === 5V through Micro USB Port		
	Earbuds: Built-in DC ===3.7 V, 40 mAh (0.148 WH) rechargeable Li-ion Battery per each Earbud; Recharge by the Charging Station		
mpedance of the Earbuds	32 ohm		
udio power	5 mW per channel (Total 10 mW)		
T Version	5.0		
T Operation Distance	Up to 32 feet in open area		

### PACKAGE INCLUDES

- 1 x User's Manual
- 1 x Charging Station
- 2 x Earbuds
- 1 x USB Connection Cable (For charging the Charging Station only)
- 1 x Carry pouch

SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE

### LIMITED WARRANTY

Craig Electronics Inc. warrants this product to be free manufacturing defects in material and workmanship ur normal use for a period of 180 days from date of purchase service is required, please return the product to the store when was purchased for exchange; or, pack the unit in the orig packing material with all accessories if applicable, a copy of sales receipt and a Cashier's check or Money Order for \$3 cover shipping and handling costs) payable to Craig Electror Inc. For consumers in Canada, please make sure that the cas check or money order is redeemable through a U.S. bank. S your product freight pre-paid. Your unit will be repaired, repla or if the unit can not be repaired or replaced, a refund will forwarded to you within four weeks of receipt of your unit. Ple ship your unit to:

raig	Elec	troni	CS	lnc.
1160	NW	163	Dri	ve
Mia	ami, I	FI 33	169	9

This warranty is void if the product has been: a) Used it commercial application or rental. b) Damaged through misu negligence, or abuse. c) Modified or repaired by anyone of than an authorized Craig service center. d) Damaged becaus is improperly connected to any other equipment. Note: This warranty does not cover: a) Ordinary adjustments outlined in the Owner's Manual which can be performed by customer. b) Damage to equipment not properly connected to product. c) Any cost incurred in shipping the product for repair Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warrant merchantability, are limited in duration to the period of expressed warranty and no warranty whether expressed implied shall apply to the product thereafter.

Under no circumstance shall Craig Electronics Inc. be liable any loss or consequential damage arising out of the use of product. This warranty gives specific legal rights. However, may have other rights which may vary from state to state. So states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may apply to you.

This product has been manufactured by and is sold under responsibility of Craig Electronics Inc. and Craig Electronics is the warrantor in relation to this product. MAGNAVOX SMART, VERY SMART are registered trademarks of Koninkl Philips N.V. and are used under license from Koninklijke Ph

To Obtain Service on your Product email: magnavox@craigelectronics.com	

Printed in China

RANTY
his product to be free from al and workmanship under tys from date of purchase. If e product to the store where it pack the unit in the original is if applicable, a copy of your k or Money Order for \$3 (to payable to Craig Electronics use make sure that the cashier let through a U.S. bank. Ship unit will be repaired, replaced or replaced, a refund will be of receipt of your unit. Please
nics Inc. 3 Drive 3169
uct has been: a) Used in a b) Damaged through misuse, or repaired by anyone other enter. d) Damaged because it er equipment. r: a) Ordinary adjustments as iich can be performed by the not properly connected to the oping the product for repair. d) the USA.
nd only applies to the original , including the warranty of ration to the period of this ranty whether expressed or ereafter.
Electronics Inc. be liable for arising out of the use of this fic legal rights. However, you ary from state to state. Some nplied warranties or exclusion re, these restrictions may not
red by and is sold under the nc, and Craig Electronics Inc. s product. MAGNAVOX and red trademarks of Koninklijke kense from Koninklijke Philips
n your Product igelectronics.com
MBH583_WC_E0SI1_B0US