
In-Furniture Safe User Manual

Thank you for choosing our safe!
Before operating your new safe, please read
the user manual to ensure maximum performance.
For models:
ES100

Please keep manual safe for future reference.

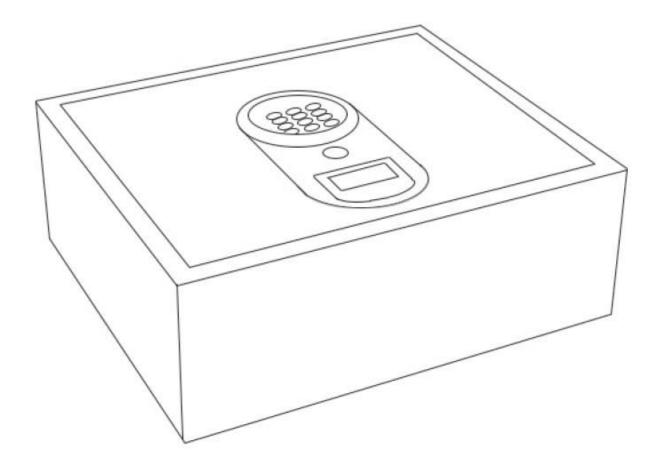

- Operation Voltage: DC 6V (1.5V AA Alkaline battery X 4)
- > Frequency: BLE and RFID



POWER SUPPLY

Battery

- The working voltage for the product is equal to 4 X AA alkaline batteries.
- System will turn into micro power consuming state automatically

⚠ CAUTION: When replacing batteries, do replace all the batteries at once and never use old and fresh batteries together. Never mix the specified batteries with other types of batteries in use.

USER INSTRUCTION

1. BY PIN CODE

- 1) TO CLOSE THE SAFE:
 - Close the door and enter your own 4-6 digit User Code.
 - Press "LOCK" button.
- 2) TO OPEN THE SAFE
 - > Enter the correct 4-6 digit User Code.
- 3) TO RE-LOCK THE SAFE
 - Close the door and press "LOCK" button.
 (Your code will be kept in memory for 5 minutes while the safe is open)
- NOTE Every time you close the safe, you can enter a new User Code. The safe will open with the last entered User Code only.

2. BY RFID CARD

- 1) TO CLOSE THE SAFE:
 - Close the door and press "CLEAR" button.
 - Scan your Guest card or any RF card on the keypad.
 (RFID protocol supported: ISO 14443 Type A cards)
- 2) TO OPEN THE SAFE
 - Press "CLEAR" button.
 - Scan the same Guest card or RF card on the keypad.
- TO RE-LOCK THE SAFE
 - Close the door and press "LOCK" button.

 (Your card CSN will be kept in memory for 5 minutes while the safe is open)
- NOTE Every time you close the safe, you can scan a new RF card. The safe will open with the last scanned RF card only.

3. BY MOBILE

1) DOWNLOAD USER APP:

Search Passtech from Google Playstore or App Store and download the User App into your smartphone.

2) TO CLOSE THE SAFE

- Run the User App from your smartphone. (Make sure that BLE is on)
- > Close the door and press "CLEAR" button.
- Press "Touch" button from the User App.

3) TO OPEN THE SAFE

- Run the User App from your smartphone. (Make sure that BLE is on)
- Press "CLEAR" button.
- Press "Touch" button from the User App.

4) TO RE-LOCK THE SAFE

Close the door and press "LOCK" button.
(Your smartphone data will be kept in memory for 5 minutes will be the control of the contr

(Your smartphone data will be kept in memory for 5 minutes while the safe is open)

NOTE

Every time you close the safe, you can register a new smartphone. The safe will open with the last registered smartphone only.

4. BY MASTER CODE

Factory Preset MASTER CODE: 1234567 (7 digit)

Users are advised to change the MASTER CODE

1) TO OPEN THE SAFE

- Press "CLEAR" button twice.
- > Enter the Master Code.
- Press "LOCK" button.

2) CHANGING MASTER CODE

- Open the safe.
- Press "CLEAR" button twice + "LOCK" button + Master Code + "LOCK" button, the display will show "PROG".
- > Press "756" + "LOCK" button, the display will show "MasterChange".
- Enter the new 7 digit Master Code then press "LOCK" button and re-enter the same 7 digit Master Code then press "LOCK" button to confirm.
- Then display will show "SUCCESS" to indicate new Master Code has been set up successfully.

5. MECHANICAL OVERRIDE KEY

- Open the key cover.
- Insert the mechanical Override Key into the cylinder and turn clockwise to open the safe.
- 3) While "AddUSER" displays, follow the instructions to set your new User Code.
 - Enter the new 4-6 digit User Code.
 - Press "LOCK" button.
 - The door will be closed then take out the key.

PROGRAM SETTING

Note: All program setting should be processed while the safe is opened.

Factory Preset ADMIN CODE: 123456

Press "CLEAR" button twice + "LOCK" button + Admin Code + "LOCK" button, the display will show "PROG", then follow the steps to set up the different features listed below.

6.1 CHANGING ADMIN CODE

- Press "111" + "LOCK" button, the display will show "AdCHAn".
- ➤ Enter the new 4-6 digit Admin Code then press "LOCK" button and re-enter the same 4-6 digit Admin Code then press "LOCK" button to confirm .
- The display will show "rEGISe" to indicate new Admin Code has been set up successfully.

6.2 DISPLAY OPTION

Press "789" + "LOCK" button, the display will show "DisplayOff".

6.3 BEEP SOUND OPTION

Press "735" + "LOCK" button, the display will show "SoundOff".

6.4 USER PIN DISABLE

➤ Press "741" + "LOCK" button, the display will show "PINDISABLE".

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

Caution:

Any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.

IMPORTANT NOTE:
FCC RF Radiation Exposure Statement:
This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be colocated or operating in conjunction with any other antenna or transmitter. Changes or modifications not expressly approved by SMARTeLock may void your authority to operate the equipment.