

# Troubleshooting Guide

Problem	Cause	Solution
The BROADCASTING indicator does not up.	The cordless microphone is not turned on.	Turn on the cordless microphone.
	The microphone receiver is not turned on.	Turn on the microphone receiver and the connected AV equipment.
	The microphone receiver is not connected properly.	See the "connections" in this manual and correct the connections.
No Sound	The battery in the cordless microphone is weak	Replace the battery.
	The microphone receiver is not turned on.	Turn on the microphone receiver and the connected AV equipment.
	The connected AV equipment is not turned on.	Turn up the AV equipment.
	The connected AV equipment is turned down.	Turn up the volume of the AV equipment.
	The speakers/headphones are not connected to the AV equipment.	Connect the speakers/headphones.
The sound is distorted.	The battery in the cordless microphone is weak.	Replace the battery.
	The AUDIO OUT selector switch on the receiver is not set correctly.	See the "parts identification" in this manual and set it correctly.
A howling noise is heard from the speakers	The distance between the cordless microphone and speakers are too close.	Move the cordless microphone away from the speakers or change the direction of the microphone.
A loud hissing noise is heard from the speakers.	The battery in the cordless microphone is weak.	Replace the battery.

If the above mentioned suggestions do not improve the situation, consult your out company.

## SPECIFICATIONS:

### OVERALL SYSTEM

Carrier Frequency Range	588.85 MHz
Frequency Stability	+/-0.005% with quartz controlled.
Modulation Mode	FM
Maximum Deviation Range	+/-15KHz, with Limiting compressor.
Frequency Response	60Hz—15K Hz(±2 dB)\ 100Hz—12K Hz(±1dB)
S/N Ratio	≥80 dB
T.H.D	Less than 0.5%
Audio Dynamic Range	Over 100dB .Over 118dB with Limiting
Service Areas	30 meters.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

# Operating Instructions

Portable speaker with wireless microphone

Model: PSBT65A

Thank you for buying this WIRELESS MICROPHONE SYSTEM product. Please read through these operation instructions so you will know how to operate your model properly. After you have finished reading the instructions, put them away in a safe place of future reference.

## WARNING

\*\*To prevent fire or shock hazard, do not expose the unit to rain or moisture.

\*\*To avoid electrical shock, do not open the cabinet.

Refer servicing to qualified personnel only.

## PRECAUTIONS

\*\*Do not drop or give any physical shocks to the wireless microphone.

\*\*Do not use the system where it may be subjected to :

--direct or indirect sunlight.

--excessive heat from radiators or other heat sources.

--excessive dust or humidity.

--Mechanical or other vibrations.

\*\*Should any liquid or foreign object fall into the unit, disconnect the unit from the power source and have it checked by qualified personnel before operating it any further.

\*\*If you have any questions or problems concerning this system which are not covered in this manual, please consult the nearest out company.

\*\*Be sure to bring the cordless microphone and the receiver (the whole system) to out company when requiring repair work.