

2in1 Tablet PC

(Windows)

Quick Start Guide

Charger specifications

The charge specifications of tablet refer to the voltage/current of input that shows on the back of the product you purchase.

1. Please only use the charger that meets above specification.
2. Please do a full recharge per 3 months if you don't use it for a long time.
3. The charge must be over 30 mins before using if it has been placed for a long time.

List of product contained hazardous substances and their contents

Component name	Hazardous substances					
	(Pb)	(Hg)	(Cd)	(Cr (VI))	(PBB)	(PBDE)
Device	×	○	○	○	○	○
Digital player	○	○	○	○	○	○
<p>The sheet is made according to SJ/T 11364.</p> <p>○ : Means the content of this hazardous substances is under the limitation of GB/T 26572.</p> <p>× : Means the content of this hazardous substances is over the limitation of GB/T 26572.</p>						



AWOW Technology(ShenZhen)Co., Ltd
AWOW official website: www.awow-tech.com
Hotline: +86 755 86567921
E-Mail: awow_support@cqteq.com.cn

Caution

Thank you for purchasing AWOW product. Please read this manual carefully before using in order to gain maximum benefits.

- 1.The new battery is only able to achieve the best performance after two or three times of full charge and discharge.
- 2.To prevent data loss,It is recommended to regularly backup important personal data especially, before performing firmware upgrade.
- 3.Please don't disassemble the device by yourself because of its high precision.
- 4.Please avoid strong impact or splash water on tablet because it will cause physical damages.
- 5.Please avoid using the device in the following environments: high or low temperature; humid, dusty, powerfully magnetic field and long-term exposure under sunlight.
- 6.Please only use the original battery, charger and accessories of which safety is approved by manufacturer. It will violate warranty regulations or may be dangerous if you use any other unqualified accessories.

Tips


Please note the nominal battery life refers to the longest time achieved with minimum power consumption.

The real time of battery life might be varied in different operating conditions.

Volume calculation:

- 1.The volume calculation is different between hardware manufacturer(1MB=1000KB) and operating system (1MB=1024KB).
- 2.Deviation exist by using third-party tools to detect the battery capacity.

Setting to know your tablet

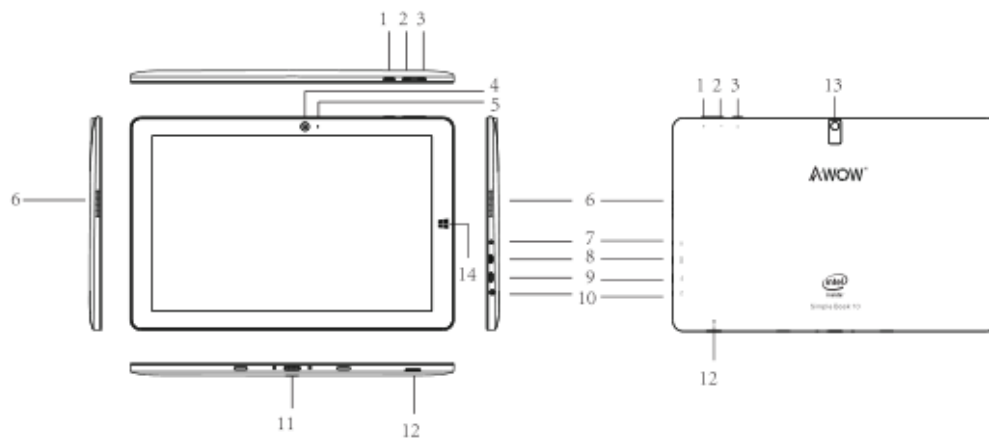

1.Power button:

* When device is off, keep pressing power button for 3 seconds to turn on the device.

* When device is on, shortly press power button to turn on/off screen.

* When device is on, keep pressing power button for 3 seconds to access to power-off interface, keep pressing for 10 seconds to forcibly power off the device.

2.Volume- Button: Short press to decrease the volume.

3.Volume+ Button: Short press to increase the volume.

4.Front Camera: Use the camera for video communication.

5.Power Indicator: Displays operating status of tablet.

6.Speaker: Provides audio output.

7.DC Power Adaptor Jack: Connects the DC power adapter here.

8.Micro HDMI: Connects to micro USB devices.

9.Micro USB: connects to Micro USB devices.

10.Headphone Jack: Connects to external headphone.

11.Keyboard Docking: Use it to connect the keyboard.

12.Memory Card Slot: used to store, record static or dynamic image.


13.Rear Camera: Use this camera to take photos.

First boot up guide

Boot up guide will help you to select system language, time zone, WiFi network, user name and device information during first boot up.



Windows can be activated automatically by connecting to internet

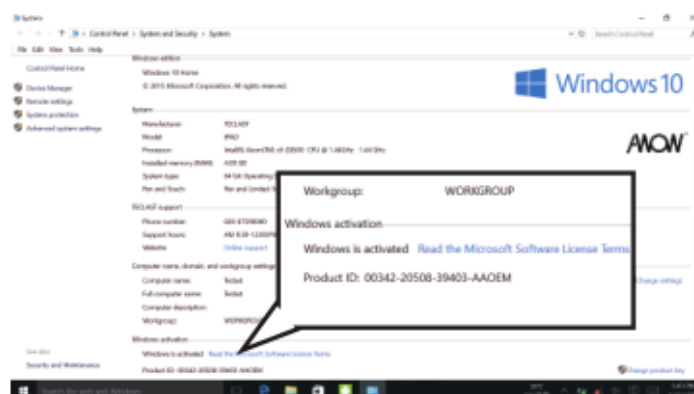

Status bar



Battery power display, click to set the screen brightness and switch power save mode, system takes control of screen brightness in power save mode.



WiFi signal strength, click to set WiFi connection and switch on/off airplane mode.



Volume status indicator, click to control the speaker volume.



Action center, allows for quick settings.

Virtual button bar



Press to directly go back to main screen



Press to go back to previous screen



Press to perform local & internet search



Press to switch or close all the background apps



Press to access to " Sleep", "Shut down" and "Restart" functions



Press to browse and open all installed apps



Press to change account settings and view the regular use apps

Action center



Press to turn on/off tablet mode



Press to lock/unlock screen rotate



Press to search and connect to wireless display



Press to open all settings



Press to turn on/off Bluetooth



Press to turn on/off positioning



Press to access to VPN settings



Press to open OneNote (need to login Microsoft account)



Press to turn on/off battery saver mode



Press to adjust screen brightness



Press to turn on/off WiFi



Press to turn on/off airplane mode



Gesture control

1. Use single finger to swipe from the left edge of screen to the middle can launch the background application list.



2. Use single finger to swipe from the right edge of screen to the middle can launch the action center.



3. Swipe down from the top of screen to open app close bar on application screen.



Factory reset

User can perform factory reset if the system performs unstable or system files are damaged, you can access to this function by following:

1. Open all settings–choose “Update & security”
2. Choose “Recovery” – “Reset this PC”
3. Choose “Remove everything” if you want to fully format the device
4. Click “Reset” to take action

Caution:Please connect device to charger before performing factory reset



FAQ

Q: The keyboard does not work after sleep inactivity?

A: try to pull and plug the keyboard again. If it does not work, please reboot the machine.

Q: The tablet is charged slowly or not be charged after unused for a long time?

A: Please use the original plug to charge it for a 20mins, because our tablet has battery protection for a long time without using it.

Q: You forget the password of locking screen?

A: You can reboot the tablet and press F9 continuously during starting up and follow this way to reset your tablet:

Troubleshoot---Reset this PC--- Remove everything---Just remove my files.

Note: Please keep charging during the reset because the process will spend a lot of time.

Q: How to turn the volume to max?

Continually press ↑ button during playing video or music. But we do not recommend this way for a long time because it will damage the speakers.



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

FCC ID: 2AQAZ-CQ1019