

BB2652- BILLBOARD 4" BLUETOOTH PARTY SPEAKER

Front




4" PORTABLE PARTY SPEAKER

BB2652

Buttons & Functions

 - 1 Mode (LINE IN, MP3, FM, BT)
- 2 Previous song (FM, Previous channel)
- 3 Play/Pause (FM Automatic Search)
- 4 Next song (FM, The next channel)
- 5 USB socket
- 6 Charging socket (DC 5V)
- 7 Audio input socket
- 8 Micro SD card socket
- 9 Mode (Power/Status and Volume Control)
- 10 Power indicator

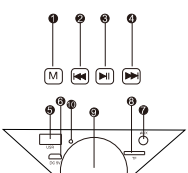

Connecting to Bluetooth

- The product is on with AUX mode. Click the "MODE" button, once you hear ding-dong sound, BT mode is on.
- Turn on your smartphone's BT and search for the device. Then you will read Model on smartphone.
- Connect with Model. Click the "OK" on smartphone.
- "Connected" message will appear. Connection is successful.
- Play and select music with smartphone when connected through BT.

Micro SD Function

- Press "MODE" button on the product to switch to TF mode or just insert a Micro SD card. TF mode will start automatically.
- Press "PLAY/PAUSE" button to continue and play/pause music.
- Press "NEXT" button to go to next song.
- Press "PREVIOUS" button to go back to previous song.

USB Function

- Press "MODE" button on the product to switch to USB mode or just insert a USB flash drive. USB mode will start automatically.
- Press "PLAY/PAUSE" button to continue play/pause music.
- Press "NEXT" button to go to next song.
- Press "PREVIOUS" button to go back to the previous song.

FM Radio Function

- Press "MODE" on the product to switch to FM mode. Radio will start automatically.
- Press "PLAY/PAUSE" button for a second to enter into FM channel searching.
- Press "NEXT" button to go to next frequency.
- Press "PREVIOUS" button to go back to previous frequency.

 
TWS CONNECTION

- (1) TWS connection: TWS connection is only for two speakers, can not support quantity over 2 PCS.
- (2) Turn on the Speakers, press the MODE button to switch to BLUETOOTH mode, and the word "BLUE" on the LED screen will flash.
- (3) At the first time, please press the Play/Pause (TWS) button for 3 seconds. Then two speakers will connect together.
- (4) Connect the phone: Open the phone Bluetooth settings, Search and connect the main device Bluetooth Name "BB-RF-E8".
- (5) Select music from phone and enjoy TWS playing in pairs with two Speakers.
- (6) Exit TWS: Long press the Play/Pause (TWS) button for 3 seconds to exit the TWS function.

Item Description

Thank you for purchasing the BILLBOARD®. For best use of this device, we recommend carefully reading this user manual and keeping it for your records.

- Package contains:
- 1 Speaker
 - 1 USB charging cable
 - 1 User manual



Specifications

 
Speaker Unit: 4 inches*1

Back

Battery information

Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two to three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times, but it will eventually wear out. Do not leave a fully charged battery connected to a charger, overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time. Never use any charger that is damaged. Leaving the device in hot or cold places will reduce the capacity and lifetime of the battery. Optimal temperature for the battery is between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Always dispose of batteries according to local regulations. Please recycle. Do not dispose as household waste.

All other trademarks are property of their respective companies. Bluetooth® is a registered trademark of Bluetooth SIG, Inc. BATTERY CAUTION: Do not disassemble, short circuit, or expose to fire or high temperature. Properly connect specified devices. Recycle battery according to local, state and national regulations.



It may damage your hearing if you listen with high volume for a long time. It is recommended you use the lowest volume possible for listening to music.

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USING YOUR SPEAKER. KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

Your speaker has an internal rechargeable battery. Improper usage may result in the speaker becoming hot, ignite or burst and cause injury if exposed to conditions of abuse. Be sure to follow the safety warnings listed below:

1. Do not assemble, throw away or damage the speaker.
2. Store the speaker in a dry place, keeping it away from damp corrosive materials and environments such as salt air.
3. Keep the speaker away from direct sunlight, fire, and high voltage equipment. Do not store the speaker inside a car during hot weather. Remember a closed car acts as a greenhouse allowing the inside temperature to possibly reach over 200°F.
4. The speaker is not toys. Please keep it out of the reach of young children.

Please do not discard this rechargeable device as trash. Consult your local waste collection agency for proper disposal or recycling methods. You may also contact "Call2Recycle" at 877-273-2925 or online at "call2recycle.org" for a battery recycling drop off location near you.

Charging the battery

- This device has an internal, rechargeable battery.
- 1. Plug the charger cable into the speaker.
- 2. Connect the charger to a USB power source. The red indicator light will display during charging. Charging does not start, disconnect the charger plug it in again, and retry. Charging the battery fully may take up to 3 hours.
- 3. When the battery is fully charged, the red indicator light will turn off. Disconnect the charger from the USB power source and the speaker. The fully charged battery has power for up to 4-5 hours of music time or up to 240 hours of standby time. However, the talk and standby times may vary when used with different devices, settings, and environments.

FCC Information

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Federal Communications Commission (FCC) Statement: This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warnings: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment. Tested to comply with FCC standard, FOR HOME OR OFFICE USE.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its accessories must not be co-located or conjunction with any other antenna or transmitter.

Limited Warranty

ES Cases and Accessories warrants to the first consumer purchaser that this product, when shipped in its original container to the original purchaser, will be free from defective workmanship and material for one year and agrees that it will, at its option, either repair the defect or replace the defective product or part thereof at no charge to the purchaser for parts or labor for the time period described.

This warranty does not apply to any appearance items of the product nor to the additional excluded items set forth below nor to any product, the exterior of which has been damaged or defaced which has been subjected to misuse, abnormal service or handling or which has been altered or modified in any way without the express written consent of the manufacturer. In addition to an applicable law, ALL IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD FROM THE DATE OF ORIGINAL PURCHASE SET FORTH BELOW. Some states do not allow limitations on how long an implied warranty last, so the above limitation may not apply to you. Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein as stated in the location of any warranties beyond the time period described herein on the behalf of ES Cases and Accessories.

The warranties described herein shall be the sole and exclusive warranties granted by ES Cases and Accessories and shall be the sole and exclusive remedy available to the purchaser in respect to defects in the product and for the period of time described herein. Seller's complete fulfillment of all obligations and responsibilities of ES Cases and Accessories to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract negligence, strict liability or otherwise. In no event shall ES Cases and Accessories be liable in any way responsible for any incidental or consequential economic or property damage. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. THE WARRANTY DOES NOT COVER THE FOLLOWING: OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

The user should immediately replace this, or any, charge cable that has become frayed, cracked, or broken. If the user should immediately replace this, or any, charge cable that has become frayed, cracked, or broken, it may constitute a safety hazard, including electrocution, if it is continued to be used.

Technical Support:
 TechSupport@billboard.com or Call (212) 883-8838
 Send device with the product to:
 ES Cases and Accessories
 120 West 30th Street 6th Floor, New York, New York 10016
 *to include proof of purchase and \$11.95 for shipping and handling.