

PRODUCT OPERATION

BASIC FUNCTIONS

■ Feminine Wash

Press "Feminine Wash" button.

The water is sprayed from the the nozzle to wash the private part of female. Pressing the button again will change the state into oscillating cleaning and expand range.

■ Stop

Press "Stop" to Stop.

※ Dryer stops automatically after 4mins.

■ Spray Strength

Press "+" to turn up,press "-" to turn down spray strengh.

Press button to switch the display of light and choose an appropriate one.

■ Posterior Wash


Press "Posterior Wash" button.

The water is sprayed from the the nozzle to wash the posterior. Pressing the button again will change the state into oscillating cleaning and expand range.

■ Nozzle position

Press "nozzle position" button.

Wand position can move forth and back by 5 gears.

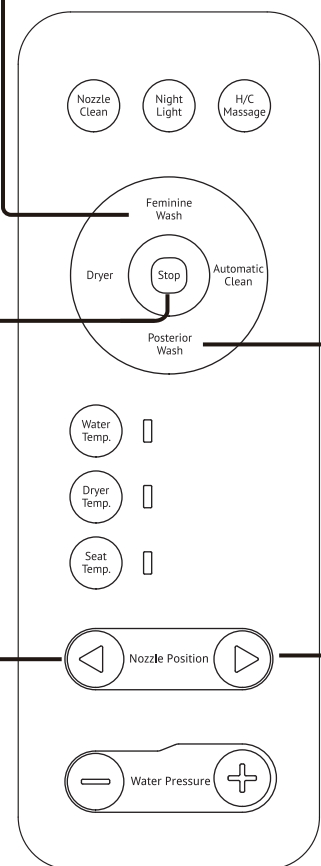

PRODUCT OPERATION

BASIC FUNCTIONS (cont.)

■ Water Temp

Press "Water Temp" button.

Press the button once,the current temperature will be shown.Press the button again,then you can switch the temperature and choose an appropriate one.

- ※ Switch the display of 「OFF」, 「High」, 「Middle」, 「Low」.
- ※ Default drying temperature is middle level.


■ Seat Temp

Press "Seat Temp" button.

Press the button once,the current temperature will be shown.Press the button again,then you can switch the temperature and choose an appropriate one.

- ※ Switch the display of 「OFF」, 「High」, 「Middle」, 「Low」.
- ※ Default drying temperature is middle level.

!

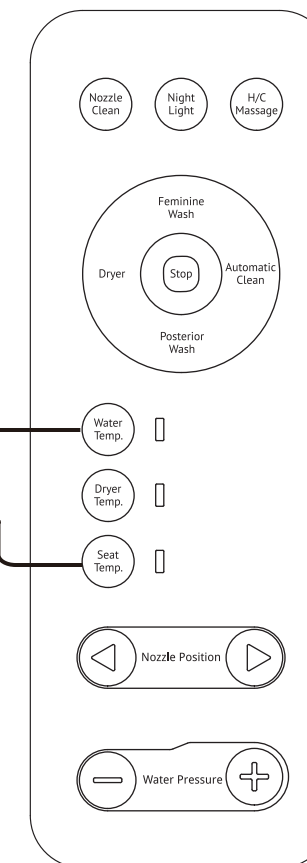

PRODUCT OPERATION

DRYER

■ Nozzle cleanse

Press "Nozzle cleanse" button.

Wand will extend without spraying. it is for manually clean the wand.
※Only available when sensor isn't covered by human body or other things.

■ Dryer

Press "Dryer" button to dry your front and rear.

Press the button once, the current temp will be shown in light. Press the button again, the temp level will be switched. Choose an appropriate temp for you.

- ※Switch the display of 「OFF」 、 「High」 、 「Middle」 、 「Low」 .
- ※Default drying temperature is middle level.
- ※DRY stops automatically after 4mins.

■ Night Light

Press "Night Light" button.

Turn on/off the night light.

■ H/C MASSAGE


Press the button to turn on/off the H/C massage function.

While washing, press the button to start the cold and warm water in turns.
※Only available when doing wash function.

■ AUTO

Press "Auto" button.

When seat & press the auto posterior wash, the bidet will start posterior wash 90s and then dryer 4 mins. If press the button again during the 90s, it will skip to drying.
※Automatic functions like posterior wash and drying are particularly suited for kids and elders.

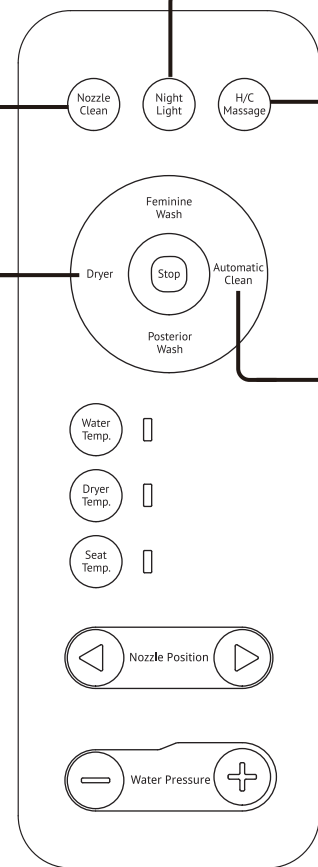

WARNING

FCC Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .This equipment should be installed and operated .

Note : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.