

User Manual

Model name: RC13



FRONT

Press to activate the oscillating front wash.

Press again to turn o oscillation.

REAR

Press to activate the oscillating rear wash.

Press again to turn o oscillation.

STOP

Press to stop any operations.

DRYER

Press to activate the warm air dryer.

Press again to adjust the fan speed.

AIR TEMP | WATER TEMP. | SEAT TEMP.

Press the corresponding buttons to adjust the temperature settings on each feature.

- Low - Blue
- Medium - Purple
- High - Red

WATER THERAPY

Press during a wash to quickly alternate between hot and cold water.

This feature assists in stimulating bowel movements.

NIGHT LIGHT

Press to turn the night light on/o .

WATER PRESSURE

The water pressure starts o low. Press the + or - buttons to adjust the water pressure accordingly

FCC Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. To maintain compliance with FCC exposure compliance requirement, please follow operation instruction as documented in this manual.

Note : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.