


Remote Control

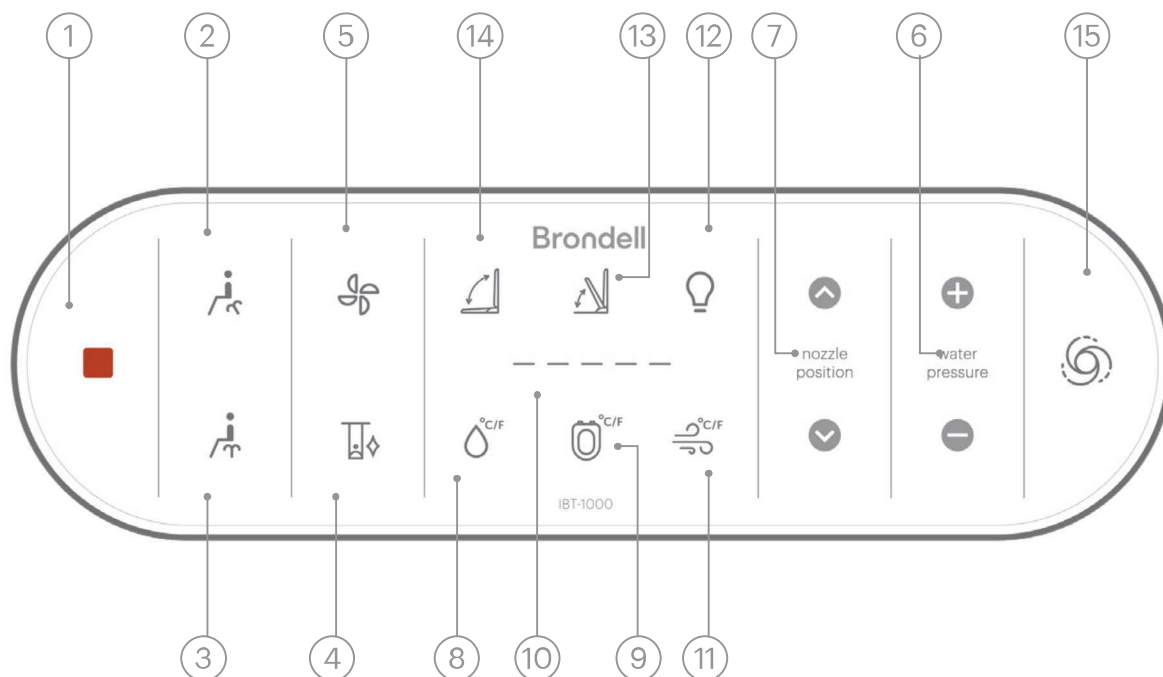

1. Insert the AAA Batteries.
 - a. Open battery compartment cover on backside of remote control by pulling down on the tab to release the cover.
 - b. Insert two AAA batteries (included), ensure batteries are installed correctly.
 - c. Replace battery compartment cover.
2. Mount the Remote (optional)
 - a. Identify a location in the bathroom for the remote control that is visible and reachable from the toilet.
 - b. Use the included mounting screws or peel off the double-stick tape on the back of the wall mount and press firmly to the wall to ensure that it does not fall and damage the remote control.

NOTE: The remote control is paired to the product by default at the factory. If the remote control is not working properly, double check the batteries or re-pair the remote using the remote pairing instructions below.

Remote Pairing Instructions

1. Unplug the unit.
2. Hold the Stop button on the remote until the LED indicator lights on the remote start to flash.
3. While the lights are still flashing, plug the unit back into the GFCI outlet.
4. The lights will stop flashing, and the remote is now paired with the unit.

Remote Control (Cont'd)

- 1. Stop Button**
Press to stop all operating functions.
- 2. Rear Wash / Move Button**
Press once to initiate a four-minute rear wash. Press again to initiate nozzle oscillation (repetitive forward and backward nozzle movement).
- 3. Front Wash / Move Button**
Press once to initiate a four-minute front wash. Press again to initiate nozzle oscillation (repetitive forward and backward nozzle movement).
- 4. Nozzle Cleaning Button**
Press to initiate a 1-minute automatic nozzle cleaning when not sitting, or when the seat sensor is deactivated. For more nozzle maintenance instructions, see page 26
- 5. Advanced Air Dryer Button**
Press once to initiate a four-minute warm air dry cycle. Press again to adjust between three fan speed settings (low, med, high). **NOTE:** the unit will auto-flush when you initiate the warm air dryer. To deactivate the auto-flush before dry, go to page 20
- 6. Water Pressure Button**
Press for five adjustable water pressures during wash. Settings will be saved for the next use.
- 7. Nozzle Position Button**
Press to adjust the nozzle position forward and backward during a wash cycle. Settings will be saved for the next use.
- 8. Water Temperature Button**
Press to adjust the outgoing water temperature to one of six settings (OFF, Level 1 = 87.6°F / 31°C, Level 2 = 90.5°F / 32.5°C, Level 3 = 94.5°F / 34.7°C, Level 4 = 98.0°F / 36.7°C, Level 5 = 102.0°F / 39°C). Settings will be saved for the next use.
- 9. Seat Temperature**
Press to adjust the seat temperature to one of six settings (OFF, Level 1 = 86.0°F / 30°C, Level 2 = 89.6°F / 32°C, Level 3 = 93.2°F / 34°C, Level 4 = 96.8°F / 36°C, Level 5 = 100.4°F / 38°C). Settings will be saved for the next use.
- 10. LED Indicator Lights**
Indicates Water Pressure, Nozzle Position, Water Temperature, Warm Air Dyer Temperature, and Seat Temperature settings.
- 11. Dryer Temperature Button**
Press to adjust the warm air dryer temperature between six levels. Settings will be saved for the next use. **NOTE:** The dryer temperature will vary depending on the surrounding air temperature of the room.
- 12. Nightlight Button**
Press to turn the toilet bowl nightlight on or off. **NOTE:** This unit has an auto-sensing nightlight that will automatically turn on or off depending on the sensitivity of light in the room.
- 13. Open/Close Lid Button**
Press this button to open the lid. Press again to close. If both the lid and seat are up, pressing this button will close both the seat and lid and the toilet will flush. **NOTE:** The unit comes defaulted with an auto-opening lid when you approach the seat. To deactivate this feature, go to page 22
- 14. Open/Close Seat Button**
Press this button to open the lid and seat. Press again to close the seat only. The lid and/or seat will close automatically after 90 seconds when it no longer detects a user within a 3 feet radius.
- 15. Flush Button**
Press this button to flush the toilet. Note: The toilet will automatically flush 6 seconds after you leave the seat.

FCC Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

ISED RSS Warning/ISED RF Exposure Statement

ISED RSS Warning:

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

ISED RF exposure statement:

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement.

Le matériel est conforme aux limites de dose d'exposition aux rayonnements énoncés pour un autre environnement. Ce dispositif a été évalué à satisfaire l'exigence générale de l'exposition aux rf.