
Sensor user manual

usage method:

1.Insert the sensor charging base into the 5V USB output port and snap the sensor onto the charging base. At this time, the indicator light of the sensor will flash repeatedly

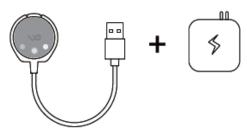

Quantity of electricity





2. When the sensor is fully charged, three indicator lights will be on, At this time, the sensor can be removed and the wristband can be put in;







Connection: the indicator light in the middle of the sensor will flash slowly to turn on the Bluetooth search of the mobile phone;



Waiting for connection











Connection successful

Wake up and connect







Shake to wake up TRACKER

Dormant

Wake up (three flashes)

Firmware update



Firmware updating

Sensor installation instructions

Put the sensor product into the corresponding middle frame with bandage and wear it on the leg or arm, as shown in the figure below $\frac{1}{2} \left(\frac{1}{2} \right) = \frac{1}{2} \left(\frac{1}{2} \right) \left(\frac$

Watch strap









Hamstring

 






Magnetic fastener seat







This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCCID:XXXXXXXXX

FCC statement

This equipment has been tested and found to comply with the limits for a Class B digitaldevice, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmfulinterference in a residential installation. This equipment generates, uses and canradiate radio frequency energy and, if not installed and used in accordance withthe instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particularinstallation.

- If this equipment does cause harmful interference to radio or televisionreception, which can be determined by turning the equipment off and on, theuser is encouraged to try to correct the interference by one or more of the following measures:
- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment andreceiver.
- —Connect the equipment into an outlet on a circuitdifferent from that to whichthe receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help.

RF exposure warning

The equipment complies with FCC RF exposure limits set forth for anuncontrolled environment.

The equipment must not be co-located or operating in conjunction with anyother antenna or transmitter.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this devicemust accept any interference, including interference that may cause undesired operation of the device.

Le pr é sent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radioexempts de licence. L'exploitation est autoris é e aux deux conditions suivantes : (1) l'appareil nedoit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillageradio é lectrique subi, m ê me si le brouillage est susceptible d'en compromettre le fonctionnement.

IC RF Exposure statement

Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

D é claration d'exposition aux radiations:

Cet é quipement est conforme aux limites d'exposition aux rayonnements IC é tablies pour un environnement non contrôl é . Cet é quipement doit ê tre install é et utilis é avec un minimum de 20cm de distance entre la source de rayonnement et votre corps.

Manufacturer: WONDERCISE LIMITED

Manufacturer address: 15/F LOCKHART CTR 301-307, LOCKHART RD., WANCHAI, HK

WONDERCISE

Product Name: Wondercise Tracker Product Number: TR-01

Made in China Input Voltage: USB5V = = =

Input Current: 400mA (max)



FCC ID: 2AQIRWDCTR-01 IC: 24078-WDCTR-01







