
User Guide

EYES 8

PÓUT

O1. Product Diagram

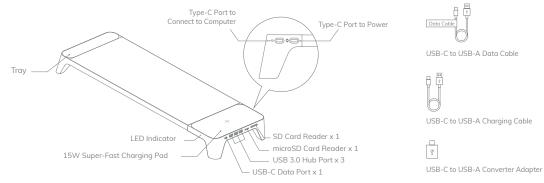


Model	POUT-02001
Size	W 563mm x L 200mm x H 57mm
Weight	1,340g
Material	E0 MDF, ABS, TPE
Rated Power Input	5V 3A / 9V 2A / 12V 1.5A (Max)
Rated Power Output	Wireless Charging Pad: 5W / 7.5W / 10W / 15W (Max) Port 1-6: Power source from USB-C to USB-A input
Total Power	24W
Operating Temperature	-0°C ~ 40°C
Storage Temperature	-10°C ~ 50°C

02. What is in the box?



 
O3. Instructions for use





① Connect the included 'USB-C to USB-A Charging Cable' to the device.
② Connect the other side of 'USB-C to USB-A Charging Cable' to an available fost charge adapter. To ensuring fast charging, you should use a fast charge adapter instead of charging through your computer. ("For best performance, please connect the included charging cable to the most appropriate fast charging adapter supporting QC3.0 or above)
③ Simply place your device on the charging area of this fast wireless charger.
Wireless charging will begin in seconds.

 USB HUBs



(1) Connect the included 'USB-C to USB-A Data Cable' to the device.

Connect the other side of 'USB-C to USB-A Data Cable' to an available USB port on your PC.
 (*To connect with USB-C port on your PC, please use the included 'USB-C to USB-A Converter Adapter')
 The operating system should detect the hub and card reader immediately and automatically install it.
 Connect your device(s) to the corresponding USB-C port (Port 1), USB 3.0 ports (Port 2, 3, 4) and microSD&SD slots.

04. GOOD TO KNOW


- USB-C Port (Port 1) is for data transfer only.
- The computer will automatically install the driver at the first time when connecting to the Hub. Please wait for approximately five seconds to allow the installation to complete automatically.
- To operate the product smoothly, please make sure that both the cables and adapter are completely plugged in when using the product.
- In order to enjoy the super speed of 5Gbps, your PC host and OS must fully support USB 3.0; otherwise it can only reach the speed of USB 2.0 standard.
- To prevent damage to the contents of the USB/memory/media card, please ensure you are following the correct procedure for removing storage from the operating system you are using.
- In a Windows® operating environment, when the USB/memory/media card is first connected, the Safely Remove Hardware icon will appear. Right-click on the icon, and select Safely Remove Hardware. When the Safely Remove Hardware window appears, select USB Mass Storage Device, then click on Stop. This will, in turn, open the Stop a Hardware Device window. Select the USB Mass Storage Device again, and click on OK, then wait for the operating system to notify you that it can now be safely removed.
- In a MAC OS operating environment, the added memory cards will appear on the desktop as disk drives. To safely remove the indicated drive(s), simply click and drag the icon to the Trash.

05. WARNING / CAUTION / NOTICE

Please read this manual before using the device to ensure safe and proper use. Images may differ in It is a normal situation that magnetic field is transferring between a charging bad and a mobile deappearance from the actual product. Content is subject to change without prior notice. Appearances vice. Do not drop or cause an impact to the device. Handle and dispose of the device with care. Never and specifications are subject to change without prior notice. Failure to comply with safety warnings dispose of the device in a fire. Never place the device on or in heating devices, such as microwave and regulations can cause serious injury, property damage or death. This monitor stand securely ovens, stoves, or radiators, The device may explode when overheated. Follow all local regulations supports up to 9 kg (20 lbs). Do not place any monitors and devices heavier than the recommended when disposing of used device. Never crush or puncture the device. Do not disassemble, modify or weight limit. Do not use the device for anything other than its intended use. Your device may mal-repair your device. Any changes or modifications to your device can void your manufacturer's warfunction. Do not insert the device or supplied accessories into the eyes, ears, or mouth. Doing so ranty. If your device needs servicing, take your device to a Service Center. Do not use your device with may cause suffocation or serious injuries. Do not bite or suck the device. Doing so may damage the the back cover removed. Doing so may result in damage or malfunction. Do not drop your device or device or result in an explosion or fire. Children or animals can choke on small parts. If children use cause impacts to your device. Your device may be damaged or may malfunction. If bent or deformed, the device, make sure that they use the device properly. The device can be used in locations with an your device may be damaged or parts may malfunction. Do not touch the device, power cords, plugs, ambient temperature of 0°C to 40°C. You can store the device at an ambient temperature of -10°C to or the electric socket with wet hands or other wet body parts. Doing so may cause electric shock. Do 50°C. Using or storing the device outside of the recommended temperature ranges may damage to not pull the power cord excessively when disconnecting it. Doing so may cause electric shock or fire. the device or reduce the device lifespan. Do not use damaged power cords or plugs, or loose electrical. Do not bend or damage the power cord. Doing so may cause electric shock or fire. Do not use your sockets. Unsecured connections can cause electric shock or fire. Use manufacturer-supplied power device outdoor during a thunderstorm. Doing so may result in electric shock or device malfunction. cable, data cable, and converter adapter. Using other cable and adapter may shorten the life of your Please note that when removing USB/memory/media cards connected to the device, you are redevice or cause the device to malfunction. They may also cause a fire or cause the devise to explode. auired to properly remove/eject the device from within the operating system (i.e. in Windows, use Protect the device from damage. Avoid exposing your device to very cold or very hot temperatures. the Safely Remove Hardware function). Failure to remove devices properly can result in lost data, Extreme temperatures can damage the device and reduce the capacity and life of your device. Keep or permanent damage to the USB memory, Card Reader, or other devices, BROS&COMPANY INC. vour device dry. Humidity and liquids may damage the parts or electronic circuits in your device. Do not turn on your device if it is wet. There may be some events such as wireless charging begins after 4-5 seconds even though your device is positioned on a charging area properly.


highly recommends that you back up all data on your storage device before using the device. BRO-S&CÓMPANY INC. is not responsible for any data lost due to data transfer, formatting, partitioning or using a device. BROS&COMPANY INC. will not be held responsible for any damage to disk or hard disk data caused by improper use.

01.제품정보

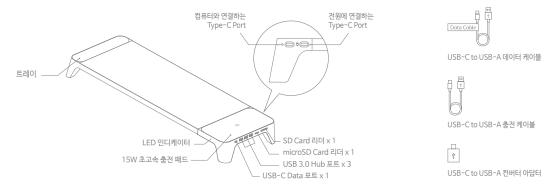

Model	POUT-02001	
Size	W 563mm x L 200mm x H 57mm	
Weight	1,340g	
Material	E0 MDF, ABS, TPE	
Rated Power Input	5V 3A / 9V 2A / 12V 1.5A (Max)	
Rated Power Output	Wireless Charging Pad: 5W / 7.5W / 10W / 15W (Max) Port 1–6: Power source from USB-C to USB-A input	
Total Power	24W	
Operating Temperature	-0°C ~ 40°C	
Storage Temperature	-10°C ~ 50°C	

02. 구성품

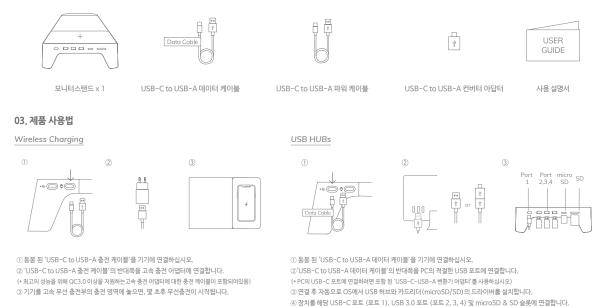

- 5 -

04. 주의사항

주의사항을 따르지 않아 발생한 부상 및 손해에 대해서는 책임 지지 않습니다. 제품을 원래 용도 이외 다른 용도로 사용하지 마십시오. 어린이나 유아 또는 애완동물이 제품을 빨거나 물어뜯 지 않도록 주의하세요. 손상된 전원코드나 플러그, 헐거운 콘센트는 사용하지 마세요. 제품에서 발명이 심하면 제품 사용을 잠시 중단하세요. 고객에 의한 과실 및 부주의(침수, 파손, 손상 등) 로 인한 분실 또는 고장 발생시 보증 서비스 제외됩니다. 제품을 임의로 분해하거나 변형, 수리하지 마십시오. 전기제품이므로 사용시 화기나 습기가 있는 곳은 삼가 해 주십시오. 제품이 물 또 는 알코움, 벤젠 등의 화학 약품에 닿았거나 화재 등의 위험에 노출되었을 경우 즉시 전원을 차단하고 안정성을 확보하고 난 이후에 재사용하여 주십시오. 높은 곳에서 제품을 떨어뜨리지 마 십시오. 젖은 손으로 제품을 사용할 경우 화재나 감전의 원인이 될 수 있으므로 절대 삼가해 주십시오. 적정 사용온도는 0도~40도이며, 적정 보관온도는 -10도~50도입니다. 적정 온도보다 높거나 낮은 온도에서는 제품이 손상되거나 제품의 수명이 단축 될 수 있습니다. 스탠드위에는 최대 12kg이 넘지 않는 물품만 올려주시고, 무거운 물품은 올리지 마십시오. 어린이가 사용시 에는 반드시 적절한 사용 가이드를 숙지 후 사용바랍니다. 반드시 제품에 포함된 아답터와 USB 3.0 케이블을 사용하시기 바랍니다. 검증되지 않은 아답터와 케이블 사용시 제품이 손상되거 나 제품의 수명이 단축 될 수 있습니다. 제품에 모려 카드, SD, 마이크로 SD카드를 꺼내실 때는 저장된 데이터의 손실을 막기 위해 반드시 OS의 "Safely Remove Hardware function" 제거 기능을 사용하시기 바랍니다. 행복의 안동 20 가드를 깨나질 때는 저장된 데이터의 손실을 막기 위해 반드시 OS의 "Safely Remove Hardware

WARRANTY

One Year Limited Warranty

EYES 8 – 3-in-1 Monitor Stand Hub with Fast Wireless Charging Pad
POUT-02001

BROS&COMPANY INC. sells its products with the intent that they are free of defects in manufacture and workmanship for one year from the date of original purchase. BROS&COMPANY INC, warrants that its products will be free of defects in material and workmanship under normal use and service. Please fill in the blank of warranty table below. This warranty does not cover any damage caused by misuse or abuse, accident, alteration to the product, improper installation, unauthorized repairs or momental conditions, or any other conditions whatsoever that are beyond the control of BROS&COMPANY INC. This warranty does not extend to the purchase of opened, used, repaired, repackaged and/or resealed products, including but not limited to sales of such products on Internet sites and/or sales of such products by surplus or bulk resellers. Any and all warranties or guarantees shall immediately cease and terminate as to any products or parts there of which are repaired, modified, or altered without any permission of BROS&COMPANY INC.

Copyright

Copyright © 2020 BROS&COMPANY INC. This manual is protected under copyright laws. No part of this manual may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission of BROS&COMPANY INC.

FCC Information to User

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful linterference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

· Reorient or relocate the receiving antenna.

· Increase the separation between the equipment and receiver.

 Connect the equipment into an outlet on a circuit different from that to which the receiver is con-nected.

· Consult the dealer or an experienced radio/TV technician for help.

Caution

Modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Compliance Information : This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

FCC RF Radiation Exposure Statement:

This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body. This transmitter must not be colocated or operating in conjunction with any other antenna or transmitter.