
User Guide **EYES 1**







01. Specification

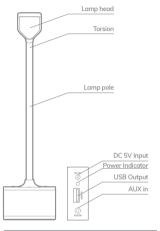

| Model | POUT-00101W |
|--------------|---|
| Size | W 290mm x L 105mm x H 380mm |
| Weight | 610g |
| Material | ABS, PP, Rubber |
| Power Input | DC 5V 2A Power Adapter |
| Power Output | LED Lamp: 3.5W Bluetooth Speaker: 2.5W v.1 |



M Lamp Light Mode Adjustment

Touch to adjust the lamp light mode: Three modes (Natural light –White light –Yellow light).

* Lamp On / Off

Touch to turn the LED Lamp on or off.
Touch and hold to adjust the lamp brightness.

►II Play/Pause

Touch and hold for two seconds to turn the Bluetooth speaker on and to enter Bluetooth pairing mode Touch and hold for two seconds to turn the Bluetooth speaker off. Touch to play or pause music.

- Previous Track / Volume Down (-)

Touch to skip to the previous song during music playback.

Touch and hold decrease the volume during music playback.

+ Next Track / Volume Up (+)

Touch to skip to the next song during music playback.
Touch and hold to increase the volume during music playback.

| Bluetooth Version | 4.2 + EDR |
|----------------------------|---------------------------------------|
| Impedance | 4Ω |
| Frequency Range | 100Hz – 20KHz |
| Bluetooth Connection Range | 10m |
| Light Source | Light Emitting Diode (LED) |
| Light Mode | Three modes (Natural-White-Yellow) |
| | |

O2. What is in the box?



Bluetooth speaker with LED Lamp x 1



3.5mm Audio Cable x 1



5V 2A Power Adapter x 1



User Guide

- 2 -













O3. Instructions for use

Connecting via Bluetooth

Pair the Bluetooth speaker with a mobile device. Once the devices are paired, the Bluetooth speaker will automatically connect to the mobile device whenever you turn on the Bluetooth speaker.

1. Bluefoofh speaker Touch and hold the Play/Pause button for two seconds to turn the Bluetooth speaker on and to enter the Bluetooth pairing mode. The indicator light will flash blue quickly.

2. Mobile device Activate the Bluetooth feature and search for Bluetooth devices.

Tap "POUT EYES1" from the list of available devices.

A If your phone requests a paring password, please enter 0000.

If the Bluetooth connection fails or the other device cannot locate the Bluetooth speaker, remove the device's information from the other device's list. Then, try to connect again.

Disconnecting or reconnecting devices

You can end the current connection by pressing and holding the Play/Pause button for approximately two seconds. You can also end the connection by turning off the Bluetooth speaker or deactivating the Bluetooth feature on the connected device. If the Bluetooth connection ends due to the distance between the devices, bring the devices closer together within a certainperiod of time. The devices will automatically reconnect.

Connecting to other devices

After ending the connection between the Bluetooth speaker and the mobile device, you can connect the Bluetooth speaker to other devices.

Connecting via an audio cable

Connect the Bluetooth speaker to a device via an audio cable. When the Bluetooth speaker is connected via an audio cable, you can only adjust the volume.

1. Bluetooth speaker Plug the audio cable into the audio cable jack.

2. Other device Plug the other end of the audio cable into the audio output jack.

If the Bluetooth speaker is simultaneously connected to a device via an audio cable and another device via Bluetooth, the Bluetooth speaker will only play audio from the device connected via audio cable.



Listening to music Listen to music played on the connected device. Touch the Play / Pause button to play music.

Pausing or resuming playback. Touch the Play / Pause button to pause or resume playback.

Adjusting the volume Touch and hold the (+) and (-) Volume button to adjust the volume during playback

Skipping to other songs Touch the Next / Volume (+) button to skip to the next song during playback.

Touch the Previous Volume (-) button to skip to the previous song during playback.

Adjusting the lamp brightness Touch and hold Lamp On / Off button to adjust the lamp brightness.

Changing the lamp mode Touch Lamp light mode adjustment button to adjust the lamp light mode:

Three modes (Natural light –White light –Yellow light).

Status Indicator light The indicator light alerts you to the Bluetooth speaker's status.

| Color | Status |
|---------------------------|---|
| Quickly flashes blue | The Bluetooth speaker is powering on and is in Bluetooth pairing mode |
| Status Indicator off | Powered off |
| Slowly flashes blue | Connected via Bluetooth |
| Continuously flashes blue | AUX is connected |

Power Indicator light The indicator light alerts you to the Power status.

| Color | Status Charging | |
|---------------------|-----------------|--|
| Continuously red | | |
| Power Indicator off | Disconnected | |



04. Troubleshooting

Your LED Lamp does not turn on

When it is out of power, your LED Lamp will not turn on. Reconnect the power adapter before turning on the LED Lamp.

Your Bluetooth speaker does not turn on

When it is out of power, your LED Lamp will not turn on. Reconnect the power adapter before turning on the Bluetooth speaker.

Your Bluetooth speaker freezes

If the Bluetooth speaker freezes or hangs, try to resolve it by turning off the Bluetooth speaker and then turning it on again. If the Bluetooth speaker is still unresponsive, end the Bluetooth connection and reconnect it. To do this, Touch and hold the Play / Pause button for approximately two seconds twice to turn it off and turn it on again. When the Bluetooth speaker enters Bluetooth pairing mode, connect the devices again, and then check the operation of the Bluetooth speaker. If the problem is still not resolved, contact BROS&COMPANY Service Center.

Your Bluetooth speaker cannot connect to another Bluetooth device

Ensure that your Bluetooth speaker and the other Bluetooth device are within the maximum Bluetooth range (10 m). On the device you want to connect with, disconnect all paired devices and try to connect gagin.

Bluetooth connection is often disconnected

If there are obstacles between the devices, the operating distance may be reduced. Ensure that your Bluetooth speaker and the other Bluetooth device are within the maximum Bluetooth range (10 m). When using the Bluetooth speaker with other Bluetooth devices, the connection may be affected by electromagnetic waves.

The Bluetooth speaker works differently as described in the manual

Available functions may differ depending on the connected device.

The Bluetooth speaker gets dirty

Gently wipe the Bluetooth speaker with a soft cloth. Do not use chemicals or strong detergents. Doing so may discolor or corrode the outside the device.



- 5 -

O5. Warning / Caution / Notice

Please read this manual before using the device to ensure safe and proper use. Images may differ in appearance from the actual product. Content is subject to change without prior notice. Before using the device, make sure it is compatible with your device. The supplied items are designed only for this device and may not be compatible with other devices. Appearances and specifications are subject to change without prior notice. Use only Manufacturer-approved accessories.

Using unapproved accessories may cause the performance problems and malfunctions that are not covered by the warranty. Use only Manufacturer-approved power adapter (more than 5V/2A for wired charging).


Unapproved power adapter can cause the device to explode or damage the device. Connecting the device improperly may cause serious damage to the device. Any damage caused by misuse is not covered by the warranty. If the device receives an unstable power supply while charging, it may not function. If this happens, unplug the power adapter from the device. While connected with power source, the device may heat up.

This is normal and should not affect the product's lifespan or performance.





01. 제품 사양 및 버튼 사용법

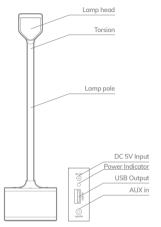

| 모델명 | POUT-00101W |
|------|---|
| 사이즈 | W 290mm x L 105mm x H 380mm |
| 중량 | 610g |
| 재질 | ABS, PP, Rubber |
| 정격전압 | DC 5V 2A Power Adapter |
| 정격출력 | LED Lamp: 3.5W Bluetooth Speaker: 2.5W x 1 |

버튼 별 사용 방법



- M 스탠드 조명을 전구색, 주백색, 주광색 3가지로 변경 가능합니다.
- 짧게 터치시 조명이 ON / OFF됩니다. 스탠드가 켜진 상태에서 1~2 초 이상 연속으로 누르면 조명의 밝기가 서서히 밝아지거나 어두워 집니다.
- + '+'버튼을 짧게 터치시, 다음곡으로 넘어가며, ' '버튼은 이전곡으로 곡이 돌아갑니다. 각 버튼을 1~2초 이상 눌러주시면 볼륨 조절이 가 능합니다.

| 블루투스 버전 | 4.2 + EDR |
|------------|---------------------------------------|
| 임피던스 | 4Ω |
| 주파수 범위 | 100Hz – 20KHz |
| 블루투스 연결 범위 | 10m |
| 광원 | Light Emitting Diode (LED) |
| 조명 모드 | Three modes (Natural-White-Yellow) |

- 7 -

02. 구성품







5V 2A 파워 아답터 x 1



(

- 8 -

03. 제품 사용법

1. 블루투스 스피커 연결(페어링)방법

스피커에 전원 연결 후, 재생 버튼을 2초 이상 누르면 "뚜두둥" 소리가 나면서 재생 / 일시정지 버튼 바로 위에 있는 파란색 LED 등이 빠르게 깜빡입니다. 그 상태에서 플레이어(휴대폰)에서 블루투스를 검색하여 'POUT EYES1'을 연결하면 됩니 다. 블루투스 연결 이후에는 파란색 LED가 전천히 깜빡이게 됩니다.

2. AUX 연결방법

제공해드린 AUX 케이블을 플레이어(휴대폰)의 이어폰 단자와 EYES1의 AUX 단자에 연결하면 자동으로 연결이 됩니다. 연 결 했는데도 소리가 안 나거나 '지지적' 거리는 소리가 난다면 휴대폰(플레이어)의 볼륨을 높이거나 케이블 연결이 제대로 되 았는지 확인 해 주세요. 간혹 휴대폰 케이스 때문에 케이블이 제대로 들어가지 않을 수도 있습니다. 정상적으로 연결이 되면 재생 버튼 위의 파란 LED의 볼이 깜빡임 없이 들어옵니다.

△ AUX 케이블이 연결된 상태에서는 블루투스 연결이 되지 않습니다.

3. 전원 연결

EYES1은 충전식 제품이 아닙니다. 반드시 전원 어댑터가 콘센트에 연결이 되어야 작동합니다.

4. 스피커 전원 끄는 방법

재생 버튼 위에 있는 파란색 I FD가 깜빡일 때 재생 버튼을 2초 이상 누르면 스피커 전원이 꺼진니다

5. 블루투스를 다른 플레이어(휴대폰)와 연결하는 방법

블루투스가이미,플레이어(휴대폰)와 연결되어있는 상태에서 재생 / 일시정지 버튼을 2호 이상 누르면 '띠당' 소리가 나면서 블루투스 연결이 끊기게 됩니다. 이후, 다시 한번 개생 / 일시정지 버튼을 2호 이상 누르면 '뚜두둥' 소리가 나면서 블루투스 연결 가능 사태가 됩니다. 이때 다른 기기와 연결하면 됩니다.

6, LED 조명의 수명

약 30,000~50,000시간 사용 가능합니다.

7. 블루투스 스피커가 작동하지 않을 시

만약 블루투스 스피커가 제대로 작동하지 않거나 '지지적' 하는 잡음이 들린다면, 블루투스 스피커를 껐다가 다시 켜주세요. 그리고 블루투스 스피커를 다시 한번 연결해 주세요. 또한, 블루투스 스피커 연결 범위가 10m 이내이기 때문에, 연결 기기와 의 거리도 확인 부탁드립니다. 이후에도 작동이 안 된다면 **브로스앤컴퍼니 고객센터(070-7703-0139)로** 진화해 주세요.

04. 주의사항

안전하고 알맞은 사용을 위하여 기기 사용 전에 매뉴얼을 읽어주세요. 사진과 실제 제품의 모습은 다를 수 있습니다. 또한, 제품의 사양은 별도 공지 없이 변경될 수 있습니다. 또한, 블루투스 스피커를 연결하여 사용하기 전, 본인의 기기와 연결이 가능한 제품인지 확인해주세요. 제조사에서 제공하는 승인된 액세서리를 사용해주세요. 승인되지 않은 다른 액세서리 사용 시, 발생하는 문제에 대해서는 보증할 수 없습니다. 제조사에서 제공하는 전원 어댑터를 사용하세요. (SV/2A 이상의 전원 연결 아답더) 승인되지 않은 어댑터 사용 시, 기기의 고장 또는 폭발을 유발할 수 있습니다. 사용 방법 미숙지로 인한 제품 불량은 보증할 수 없습니다. 만약 기기에 일정한 전원이 공급되지 않는다면, 기기가 작동하지 않을 수 있습니다. 이 경우, 전원 어댑터를 기기에 다시 연결해주세요. 전원 어댑터와 기기 연결 중에는 기기가 뜨거워질 수 있습니다. 이것은 정상적인 현상이면 기기의 작동 또는 수명에 영향을 끼치지 않습니다.

WARRANTY

One Year Limited Warranty

| Name of Product | EYES1 |
|---------------------|-------------|
| Model | POUT-00101W |
| Date of Purchasing | |
| Place of Purchasing | |
| Your name | |



BROS&COMPANY INC. sells its products with the intent that they are free of defects in manufacture and workmanship for one year from the date of original purchase. BROS&COMPANY INC. warrants that its products will be free of defects in material and workmanship under normal use and service. Please fill in the blank of warranty table below. This warranty does not cover any damage caused by misuse or abuse, accident, alteration to the product, improper installation, unauthorized repairs or modifications, improper use of power supply, dropped product, environmental conditions, or any other conditions whatsoever that are beyond the control of BROS&COMPANY INC. This warranty does not extend to the purchase of opened, used, repaired, repackaged and/or resealed products, including but not limited to sales of such products on Internet sites and/or sales of such products by surplus or bulk resellers. Any and all warranties or guarantees shall immediately cease and terminate as to any products or parts there of which are repaired, modified, or altered without any permission of BROS&COMPANY INC.

Copyrigh

Copyright © 2018 BROS&COMPANY INC. This manual is protected under copyright laws. No part of this manual may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission of BROS&COMPANY INC.



FCC Information to User

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is con-nected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution

Modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Compliance Information: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

FCC RF Radiation Exposure Statement:

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.