INSTRUCTION MANUAL BP1483 POWERED SPEAKER












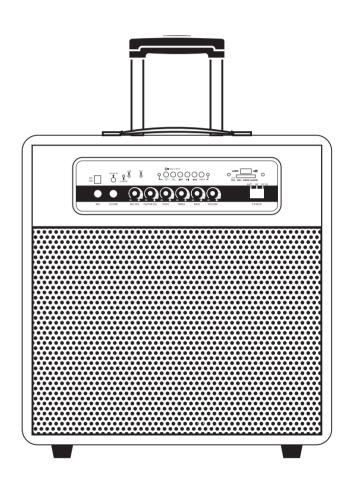

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body

TO CUSTOMER

Thank you for purchasing this drawbar active speaker system from our company. We have done lots of researches on the external design, manufacturing craft, operating convenient which can satisfy our customers. You can obtain our best service. At the same time, you can put forward your suggest and opinion. Please open the case carefully and check the accessories attached, preserve them in case losing.

Please spend a little time on reading this operation manual before your installation and operation, so that you can operate this system correctly and get the best enjoyment with it.

We suggest you preserve the carton and package materials, which are to keep for future moving.

If you find this system can't work correctly or has some brokenness, please inform your local sale's shop in which you buy it, and they will help you. If this system is sent you directly, please check if it is spoiled when it is hauled. Then please contact with the transport company quickly. Only the customers have the right for compensating on spoiled problems from the freighter.

To ensure operating this machine safely, please read the explantion carefully which as below.

WARNING



Pay attention

To ensure to operate safly, please read this explanation carefully.

Before using installation, please read over the safely operating notice item of page.

Warn

To avoid that fire and electric shock are danerous, do not make this machines get wet in the rain or is made moist!



Caution electric shock!

Must avoid to pull out or insert power supply/cord with wet hands. In order to avoid accident of electric shock, must use 110V~220V 50/60HZ power supply/cord that supplied with package.



Power cord protection!

Do not step or heavy load on power cord, and must avoid to pull power cord.



No press! It is hot!

This unit can not be pressed by weight. Must avoid to expose to the sun, and keep far away from any heat sources, such as stove, radiator, heat register, or other devices that produce heat.



Cabinet disassemble.

Must avoid to disassemble the cabinet, it has dangerous voltage inside the unit. Do not open the unit for non-professional people. Please contact professional technician who is qualified, or contact our company.



 
Do use duration!

Long time no use, please pull out the power plug from power source. Please charge the unit at least once a month.



Liquid vessel.


Keep the unit away from water drop or splash. Do not put liquid or liquid vessel on the top of the unit.



Firework is strictly forbade!

Do not put a fire and combustible material on the unit.

FRONT PANEL INSTRUCTION

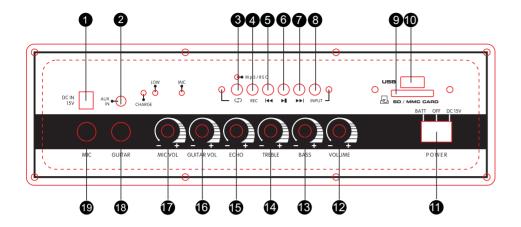

- DC 15V power input
- Record
- Next: To play next song
- USB input
- Main bass adjust
- Guitar volume adjust
- Mic Jack-input

- 2 AUX IN
- 5 Previous : To play previous song
- 8 INPUT: To select function
- Power switch
- Main treble adjust
- Micvolume adjust
- Repeat
 - Play/Pause FMradio station scan
 - SD card input
 - Main volume adjust

 - Micecho adiust
 - Guitar Jack-input

OPERATION

General Operation:

- 1. Connect the supplied DC power cord to the unit and AC to wall outler.
- 2. Press the power switch on the rear of the unit to BATTERY when no charge, and to DC 15V In when charging.
- 3. Press INPUT button on the front of unit repeatedly to select the input source as: USB/SD card mode, Line in mode, FM mode, Bluetooth mode.

Bluetooth Pairing:

- 1. Press INPUT button and select BT mode.
- 2. Enable the bluetooth feature on your audio device and set it to discover the wireless speaker.
- 3. Once the speaker apears listed under the newly found bluetooth devices (BP1483) of your wireless device. Clip to connect.

- 4. When pairing is successful, a tone will be heard through the speaker.
- 5. You can now start streaming audio through the speaker wirelessly from your favorite bluetooth enable devices.
- 6. The speaker will re-pair automatically with memorize devices after being turned off and on again.


FM (radio):

- 1. Press INPUT button and select FM mode.
- 2. Press ▶ button to search and stored the available FM station.
- 3. Press the ◀◀ or ▶▶ button to select and plays the desired stored FM station.

Line in:

- 1. Press MODE button and select AUX.
- 2. Insert one of the plug from the supplied audio connection cable (with 3.5mm stereo mini plugs) to the phone jack or other music play.
- 3. Play music file from your phone or other music player.

REMOTE CONTROL OPERATION

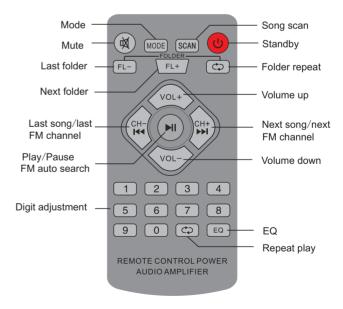


SYSTEM CONNECTION

Please connect the system as indicated below:

Attention:

- 1. Please firmly connect all the cables. Otherwise it will affect the sound quality.
- 2. Prior to connecting or disconnecting the system, please first pull out the power plug. Otherwise it will cause harm to the system.
- 3.Don't turn on or turn off the power frequently. Please wait for more than 3 seconds before you turn on or turn off the power again.

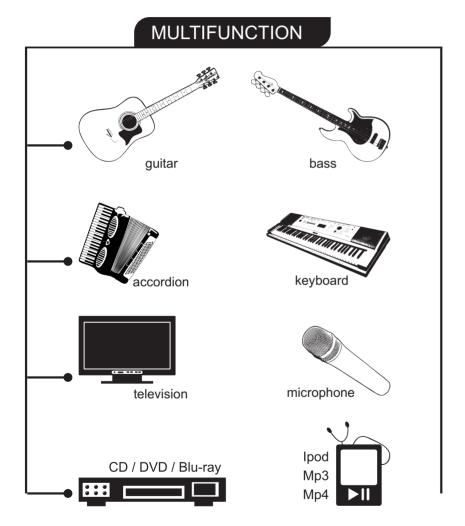

TROUBLESHOOTING

Please follow the instructions below if you meet the following problems. If the problem remains after you check it, please turn to our local distributor for help or contact our company.

Problems	Causes	Solutions
No display	Power plug is not properly plugged in 2.Power socket is broken	1.Reinsert power plug 2.Change the power socket
No sound	Incorrect speaker connection Wrong input mode Volume at lowest level	1.Check speaker connection 2.Choose the right input mode 3.Increase the master volume
Sound distortion	Master volume too high The speaker is damaged	1. Decrease the master volume 2. Check/replace speaker

SPECIFICATIONS

Main channel output power (4 Ω , 1 KHz,1% THD)
Main channel frequency response
T H D≤ 0.1%
S/N (Main channel)
Bass control
Treble control
Power supply AC 110-220V 50/60Hz
Dimensions

PACKING LIST

Speaker	1PC
Operation manual	1PC
Speaker cable	1PC
Remote control	1PC
Adapter	1PC