 


**D45**

**TRULY  
WIRELESS  
HEADPHONES**

**USER GUIDE (EN)**

# PACKAGE LIST

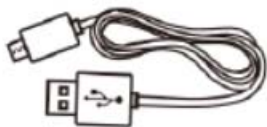

- Wireless Earbud \* 2
- Magnetic Charging Case \*1
- USB Charging Cable \* 1
- Ear tips \* 3 pair
- User manual \*1
- Gift Box \* 1

# IMPORTANT NOTES

- 1 Before using D45 wireless earbuds, please charge both the case and earbuds;
- 2 While you are trying to connect the earbuds to a new device, make sure the earbuds are not connected with any other devices;
- 3 We provide 3 pairs of ear tips (include one pair installed on the earbuds), please select the best one for different occasions;
- 4 A Key to sound quality in any earbud is the FIT of rubber ear tips to the listener. If you don't have a snug fit, you could lose up to 30-75% of the sound quality;
- 5 If the earbuds cut in and out frequently in routine use, it should be a defective item. Feel free to contact us. We would help to solve your issue within 8 hours normally.

 
# CONNECT SETTINGS FOR STEREO MODE

Stereo Mode (Dual Mode: The left and right earbud as a whole)  
as a whole)

Follow the tips to connect your earbuds:

## Step 1: Power on

The earbuds will power on **AUTOMATICALLY** when you remove the earbuds from the charging case with a voice prompt of "POWER ON". (Or you can also press the power keys on both earbuds up to one time to turn them on manually).

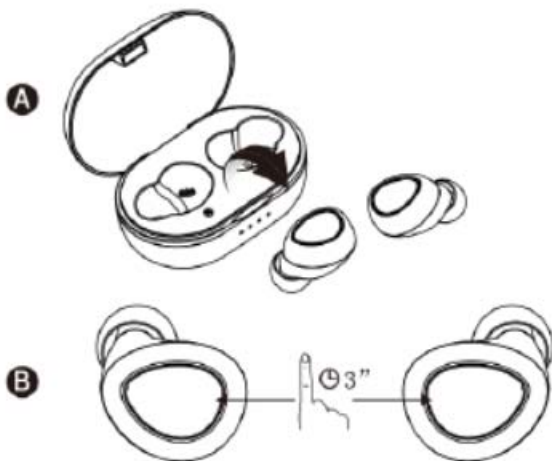

## Step 2: Pairing

When both earbuds are on, the left and right earbuds will connect with each other **AUTOMATICALLY** with a voice prompt of "DU" from each earbud.

Once the two earbuds are connected, the right earbud (master device) will enter the pairing mode **AUTOMATICALLY** with a voice prompt of "PAIRING";



## Step 3: Connected

Search and select "D45-R" on your smart phone to finish your settings, with a voice prompt of "CONNECTED" from the left earbud.



## Step 4: Power off

Return to the charging case or press the power key on either one of the earbuds up to 4 seconds to turn off the earbuds.



# CONNECT SETTINGS FOR MONO MODE

 
**Mono Mode** (Single Mode: The left or right earbud as a separate item)

Follow the tips to connect only the **LEFT** earbud:

***NOTE:** Make sure that the right earbud keeps off throughout the whole process.*

## Step 1: Power on

The left earbud will power on **AUTOMATICALLY** when you remove it from the charging case with a voice prompt of "POWER ON". Or you can also press the power key on the earbud up to 3 seconds to turn it on manually.

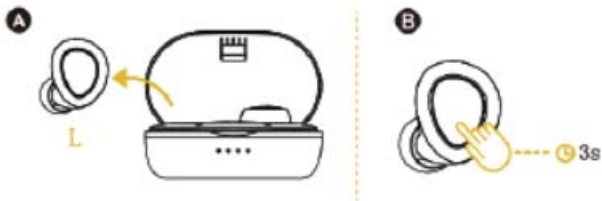

## Step 2: Pairing

When the earbud is on, it will enter pairing mode **AUTOMATICALLY** with a voice prompt of "PAIRING" from the left earbud within 20 seconds.



 
## Step 3: Connected

Search and select "D45-L" on your smart phone to finish your settings, with a voice prompt of "CONNECTED" from the left earbud.



#### Step 4: Power off

Return the left earbud to the charging case or press the power key up to 4 seconds to turn it off.

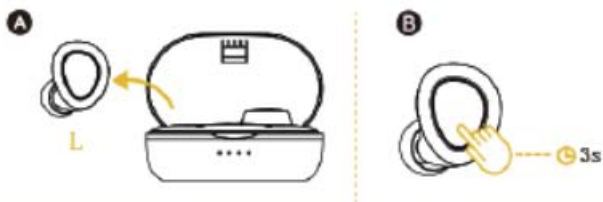

*Note: The above steps are also applicable to the RIGHT earbud.*

#### ATTENTION:

If you want to switch to Stereo Mode, either way would be helpful below:

- (1) Clear "D45" on the Bluetooth list of your smartphone;
- (2) Turn on the RIGHT earbud first, then the LEFT earbud subsequently.

If the above ways don't work, switch to the "FQA" about "How to back to stereo mode".




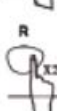





## Controls



### AUDIO PLAYING

	Press	Play/pause
	Press and hold the power key of the RIGHT earbud up to 1 seconds	Next track
	Press and hold the power key of the LEFT earbud up to 1 seconds	Previous Track
	Double press the right earbud	Volume+
	Double press the left earbud	Volume-

*Note: Above Volume control is not available for Mono Mode.*



## AUDIO PLAYING

L/R



Short Press

Answer/End call

L/R



Press and hold for 2 second

Reject call



## VOICE ASSISTANT

L/R



Triple click the power key  
on the either one of the  
earbuds

Active Siri  
/ other voice  
control software

 
*Note: please make sure your mobile device supports this function.*



## CHARGING


(1) Charging the Earbuds:

The earbuds will charge automatically when you return them to the charging case;

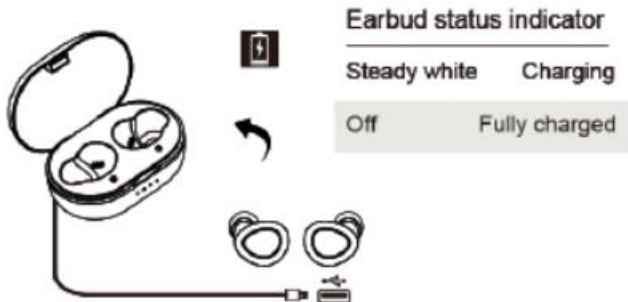

## (2) Charging the Case:

 Use 5V adapter (not included) to charge the case. The white LED indicators are blinking while charging. All of them keep on when fully charged.

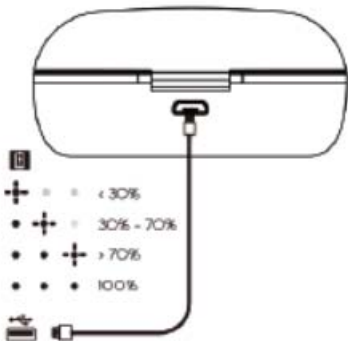


*Note : Charge the charging case before first use of earbuds. Place the earbuds in the charging case before you start charging.  
Clean the charging pin on regular basis to prevent poor connection.*

### (3) LED Battery Indicator:

 Trigger this function by any one of the following actions:

- Option 1. Open the cover of the case;
- Option 2. Pick up the earbud from the case;
- Option 3. Put back the earbud in the case;

The four LED indicators correspond to different battery levels:

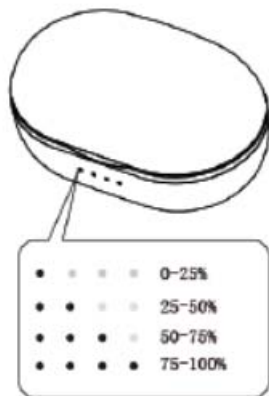

# RESET

Reset your earbuds if you can't go back to the stereo mode or if you can only hear sound on either side:

**Step 1:** Clear up "D45-L" and "D45-R" on the Bluetooth list of your cell phones;

**Step 2:** Turn off the Bluetooth in your cell phones;

1

2



3 Turn off

Return to the charging case or press the power key on either one of the earbuds up to 4 seconds to turn off the earbuds.

**Step 3:** Press and hold the power keys 5 seconds until the left and right earbud blinks white and blue alternately.

## ❶ Reset



**Step 4:** Turn on both earbuds and keep the two earbuds "within 5 cm" during the whole process the most important key to back to stereo mode;

## ❷ Turn on



**Step 5:** After 5 seconds, they would be back to stereo when the right earbud blinks white and blue alternately, and the light of left earbud is off.

# FAQ

**Q:** How to back to stereo mode after faulty operation?

**A:** Either way would be helpful below:

- ①** Clear "D45-L" on the Bluetooth list of your smartphone;
- ②** Turn on the RIGHT earbud first, then the LEFT earbud subsequently. Make sure that do NOT select "D45-L" on your smart phone at any time if you want to go back to stereo mode.

**B:** If you still can't go back to stereo mode, try to reset the earbuds.

**Q:** Will there be latency when watching a video from your laptop or cell phone?

**A:** Generally, there are plenty of cables underlying in the place mentioned above, which are more likely to produce electro magnetic interference and result in signal interruption.

If the earbuds cut in and out frequently in routine use, it should be a defective item. Feel free to contact us. We would help to solve your issue within 8 hours normally.

**Q:** Why can't the earbuds power on/off automatically?

**A:** If the battery of charging case is low, the earbuds can NOT power on/off automatically. Please charge the case and try it again.

# SPECIFICATIONS

Bluetooth Version: 5.0

Support HFP, HSP, AVRCP APT-X

Support iPhone/iPad/Huawei Battery Indication

Range: 10M

Battery Capacity:

Earbuds: 60mAh each

Charging Case: 800mAh

Playing time: 6-8 hours

Voice Assistant: Siri

MADE IN CHINA



**RoHS**





This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

The device has been evaluated to meet general RF exposure requirement. in portable exposure condition without restriction.