

Mini TWS Earbuds
True Wireless, True Limitless


Quick Start Guide

MT-CT001 www.minthouz.com
support@minthouz.com

FCC ID: 2A9K8-D59

Introduction

With the True Wireless Stereo technology, MT-CT001 is compatible with all Bluetooth-enabled devices and its connection is easy and simple. Its ergonomic and lightweight in-ear design makes it fit comfortably and securely in your ears, letting you enjoy your favourite music for long hours without any ear discomfort whenever you are jogging, running, doing gym workouts etc. Also, it provides dynamically balanced audio, and unpleasant noises are reduced for improved call quality.

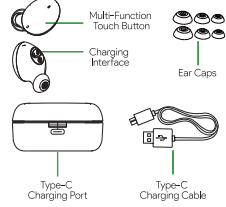

Specification

Color: Black
Weight: 0.07 lbs
Model: MT-CT001
Material: ABS+PC
Speaker: Ø6mm, 16Ω
Bluetooth Version: V5.0
Talk time: 6.5 hours

Play time: 7 hours
Charging time: 2 hours
Standby time: 120 hours
Earbud battery capacity: 50mAh
Battery capacity of charging case: 400mAh
Range of use: Radius 10M
(when there are no obstacles)
Size: 2.43*1.33*1.22inches (charging case)
0.96*0.83*0.85inches (earbud)

In the Box

- 1 x Type-C Charging Cable
- 1 x Quick Start Guide
- 1 x Mini TWS Earbuds
- 3 x Ear Caps

Features

- Bluetooth 5.0 & IPX5 Waterproof Technology
- Invisible in-ear design offers a convenient fit and a comfortable feel.
- Its pocket-sized charging case will charge as you go.
- The low latency enhances the experience of watching videos and playing games.

Operation Instructions

Before the First Use
Before using this product for the first time, please make sure that the battery is fully charged.

Power On

- The earbuds will power on automatically when being taken out from the charging case.
- Press and hold the multi-function touch button on both L and R earbud for 4 seconds simultaneously, the earbuds will power on.

Power Off


- Automatically power off after putting the earbuds into the charging case.
- Automatically power off in 5 minutes after the earbuds are disconnected from Bluetooth.

Bluetooth Pairing

- Turn on the Bluetooth on mobile phone.

How to wear

- The earbuds are equipped with three of ear caps (large, medium and small as shown in figure below) Select the right ear cap to wear.
- The earbuds are marked with "L" and "R". Please wear the earbuds marked with "L" on the left ear, and the earbud marked with "R" on the right ear. Then, rotate to fit firmly and comfortably.



Touch controls

Pause/Play	1 tap (left/right earbud)
Prev/Next song	2 tap (left/right earbud)
Lower/Raise the volume	long press (left/right earbud)
Reject call	hold 1 sec. (left/right earbud)

Answer/End call 1 tap (left/right earbud)

Turn on/off voice assistant 3 tap (left earbud)

Gaming-mode 3 tap (right earbud)

Normal mode/Bass-boost mode 5 tap (left earbud)

Notes:

- There are two different sound effects: normal mode and bass-boost mode. Normal mode is suitable for people who like bright sound and crisp high pitch. Bass-boost mode is suitable for people who like heavy bass.
- The gaming-mode is turned off by default every time it is turned on.

Earbuds Charging

When your earbud battery level is low, you will hear a voice reminder, and please put the left and right earbuds into the charging case.

Charged the Charging Case

- Please use the Type-C charging cable to plug the charging case into the power supply and start charging.
- The indicator light stays on and flickers while charging, and the four levels of the battery consumption will be displayed on the charging case to show the remaining power. The four levels of indicator light will be on when it is fully charged.

Restore Factory Setting

- When it cannot match with your smartphones or has connection problems, press the left and right headphones for 8 seconds under the charging state until the indicator light stays on.
- Double-click left and right headphones within 10 seconds.
- After resetting the TWS successfully, take the earbuds out of the charging case, and the left and right earbuds will connect to and pair with your device automatically.

Attention

- Do not remove or refill the earbuds for any reason, or the earbuds may break down and burn down, and the manufacturer will not guarantee the damage caused.
- Please do not put the equipment in contact with corrosive liquid, or it will cause serious damage to the equipment. The manufacturer will not guarantee the damage caused.
- Please do not put the equipment in an environment with too high or too low temperature (below 0 or above 45 degrees).
- Please do not use the equipment in thunderstorm weather. Thunderstorm may cause abnormal operation of the equipment and increase the risk of electric shock.
- Do not use chemical detergents to clean your device, use a soft dry cloth.
- Please do not expose the product to intense sunlight, and please do not burn or throw it into the fire to avoid explosion.

FAQ

Q1. Why does the charging box cannot be charged?
- Please check whether the interface is properly connected or try another power supply.

Q2. Why does the earbuds cannot be charged?
- Please check the remaining power of the charging case, and then wipe the charging interface between the earbuds and the charging case to prevent improper charging contact caused by dust.

Q3. Why does the earbuds cannot be turned on?
- Please check the remaining power of the earbuds and you can try to press the multi-function touch button on either earbud for 4 seconds and try to put it into the charging case again to start up.

Q4. Why will there be some signal interruptions in some places, such as railway lines, airports, etc.?
- There are usually multiple underground cable lines in the above locations, which may produce electromagnetic interference and lead to signal interruption.

Q5. Will Bluetooth mouse cause signal interference?
- This may happen when your Bluetooth mouse and TWS earbuds are connected to the same device.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and installation. If this equipment does cause harmful interference to can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

名称: MT-CT001 英语说明书 minthouz-E1	
成品尺寸: 60 x 90mm	展开尺寸: 420 x 90mm
材质工艺: 105g铜板纸 四色双面印刷+对折	
修改时间: 2022. 1. 4	
设计: 唐文彩	备注: