



# TRUE WIRELESS STEREO EARPHONES



ENACFIRE E60 INSTRUCTION

# Customer Support

---

support@enacfireglobal.com (US/CA)

moongu@enacfireglobal.com (UK)

desupport@163.com(DE)

esenacfire@163.com (ES)

enacfirefr@163.com (FR)

itenacfire@163.com (IT)

We will reply to you within 24 hours and 100% solve your issues

# Packaging List

---



Earphones x1



Charging Case x1



Eartips x3



USB Type-C  
Charging Cable x1



Manual x1

 
 


Warranty Card x1

---

## Product Overview

1. Charging Case LED Light
2. Charging Port
3. Multifunctional Button
4. Earphone LED
5. Magnetic Charging Pin
6. L / R Logo

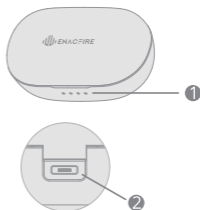

# Power On & Pairing

---

## Approach 1 - With Charging Case

**US:** Take out earphones from the charging case

**DE:** Entnehmen Sie die Kopfhörer aus der Aufladebox

**ES:** Saque los auriculares del estuche de carga

**IT:** Estrarre gli auricolari dalla custodia di ricarica



**US:** Select 'ENACFIRE E60' from Bluetooth list

**DE:** Wählen Sie „ENACFIRE E60“ aus Ihrer Bluetooth Liste

**ES:** Selecciona "ENACFIRE E60" de la lista de Bluetooth

**IT:** Seleziona 'ENACFIRE E60' dalla lista dei dispositivi Bluetooth



---

## Approach 2 - Without Charging Case

**US:** Power On: Touch the earphones for 2 seconds Prompt sound 'Power on'

Pairing: Right earphone Blue and White light flash

Select 'ENACFIRE E60'

**Note:** Right earphone is the master earphone

**DE:** Anschalten: Berühren Sie die Kopfhörer für zwei Sekunde und die Benachrichtigung „Power on“ hören.

Paaren: Die Kopfhörer verbinden, der rechten Kopfhörer ein weißes und blaues Licht blinkt

Wählen Sie „ENACFIRE E60“

**Hinweis:** Der rechte Kopfhörer ist der Hauptkopfhörer.

**ES:** Encender: toque el auricular durante 2 segundos, el sonido de aviso "Power on"

Emparejamiento: la luz azul y la luz blanca del auricular derecho parpadean

Selecciona "ENACFIRE E60"

**Nota:** El auricular derecho es el auricular maestro

 
---

**IT:** Accensione: tocca l'auricolare per 2 secondi, il suono del messaggio "Power on"

Accoppiamento: la luce blu e bianca dell'auricolare destro lampeggia

Seleziona 'ENACFIRE E60'

**Nota:** L'auricolare destro è l'auricolare principale

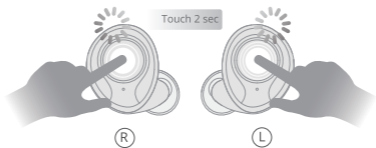

# Incoming call

---

## **US: Answer call/End call**

Tap the Left / Right earphone once

## **DE: Anruf annehmen/beenden**

Drücken Sie den linken/rechten Kopfhörer ein mal

## **ES: Responder a la llamada/finalizar la llamada**

Toca el auricular izquierdo/derecho una vez

## **IT: Rispondere alla chiamata / terminare la chiamata**

Toccare una volta l'auricolare sinistro / destro

## **US: Reject call**

Touch the Left / Right earphone for 2 seconds

## **DE: Anruf ablehnen**

Drücken Sie den linken/rechten Kopfhörer für zwei Sekunden

## **ES: Rechazar la llamada**

Toca el auricular izquierdo/derecho durante 2 segundos

## **IT: Rifiuta la chiamata**

Tocca gli auricolari sinistro e destro per 2 secondi

# Music

---

## **US: Pause / Play**

Tap the Left / Right earphone once

## **DE: Pausieren/Abspielen**

Drücken Sie den linken/rechten Kopfkörer ein mal

## **ES: Pausa/ Reproducir**

Pulsa el auricular izquierdo / derecho una vez

## **IT: Pausa / Riproduzione**

Premere l'auricolare Sinistro / Destrouna volta

## **US: Voice Assistant**

Tap the Left / Right earphone 3 times

## **DE: Sprachassistent**

Drücken Sie den linken/rechten Kopfhörer drei Mal.

## **ED: Asistente de voz**

Toca el auricular izquierdo/derecho 3 veces

## **IT: Assistente Vocale**

Premere l'auricolare Sinistro/Destro per 3 volte



---

**US: Change Song**

Double-tap the Left/Right earphone

**DE: Lied wechseln**

Drücken Sie den linken/rechten Kopfkörer zwei mal

**ES: Cambiar canción**

Haga doble clic en el auricular izquierdo / derecho

**IT: Cambia canzone**

Tocca due volte l'auricolare sinistro / destro

**US: Adjust Volume**

Touch and hold the Left/Right earphone

**DE: Lautstärke anpassen**

Drücken und halten Sie den den linken/rechten Kopfhörer

**ES: Ajusta el volúmen**

Mantenga pulsado el auricular izquierdo / derecho

**IT: Regola il volume**

 
Tocca e tieni premuto l'auricolare sinistro / destro

# Power Off

---

## Mode 2-Without Charging Case

- US:** Turn off Bluetooth to disconnect the earphones  
Touch either one earphone for 8 seconds to power off both earphones
- DE:** Schalten Sie Bluetooth aus, um die Kopfhörer von Gerät zu trennen.  
Drücken Sie acht Sekunden lang einen der Kopfhörer, um sie auszuschalten.
- ES:** Apaga el Bluetooth para desconectar los auriculares  
Toca uno de los auriculares durante 8 segundos para apagar ambos auriculares
- IT:** Disattivare la funzione Bluetooth dal dispositivo per disconnetter gli auricolari  
Per spegnere gli auricolari, premere uno dei 2 auricolari per 8 secondi

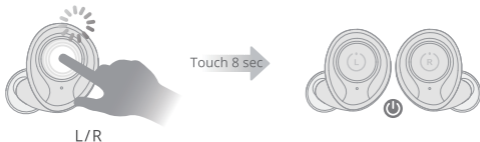

# Single Mode

---

Single Mode	Earphone
Without Charging Case	<p><b>US:</b> Turn off both earphones Touch the Left / Right earphone for 4 seconds enter pairing mode. Select 'ENACFIRE E60' from Bluetooth list</p> <p><b>DE:</b> Ausschalten die beide Kopfhörer. Berühren Sie den Linken/Rechten Kopfhörer für vier Sekunden, um ihn einzuschalten. Wählen Sie „ENACFIRE E60“ in der Bluetooth Liste aus</p> <p><b>ES:</b> Asegúrate de que ambos auriculares estén apagados Toque el auricular izquierdo/derecho durante 4 segundo para encenderlo Seleccione "ENACFIRE E60" de la lista de Bluetooth</p> <p><b>IT:</b> Spegnerne entrambi gli auricolari Toccare l'auricolare sinistro / destro per 4 secondi per accedere alla modalità di associazione Selezionare "ENACFIRE E60" dall'elenco Bluetooth</p>

# Game Mode

---

**US:** Game Mode On: Tap Left / Right earphones 4 times with prompt sound: Game mode  
Game Mode Off: Tap Left / Right earphones 4 times with prompt sound: Game off

**DE:** Spielmodus ein: Drücken Sie die linken/rechten Köpffhörer für vier mal und die Benachrichtigung: Game Mode  
Spielmodus aus: Drücken Sie die linken/rechten Köpffhörer für vier mal und die Benachrichtigung: Game off

**ES:** Modo de juego activado: toque los auriculares izquierdo / derecho 4 veces con sonido de aviso: modo de juego  
Modo de juego desactivado: toque los auriculares izquierdo / derecho 4 veces con sonido de aviso: juego desactivado

**IT:** Modalità gioco attiva: premi rapidamente l'auricolare sinistro / destro 4 volte: modalità gioco  
Modalità gioco disattivata: premere rapidamente l'auricolare sinistro / destro 4 volte: il gioco è disattivato

# Charging

---

## Earphones:

**US:** Earphones white LED Light on/off: Charging/Fully Charged

**DE:** Weißes LED bei Kopfhörern leuchtet/ Licht aus: aufladen/ vollständig aufgeladen

**ES:** Luz LED blanca de auriculares encendida / apagada: cargando / carga completa

**IT:** Luce LED bianca delle cuffie on / off: carica / carica completa

**Note:** It takes about 1.5 hours to fully charge the earphones

## Charging Case:

**US:** Lights on charging case stand for the remaining battery capacity

**DE:** Die Lichter auf der Aufladebox zeigen die verbleibende Aufladung an

**ES:** Las luces en el estuche de carga representan la capacidad restante de la batería

**IT:** Il LED della scatola di ricarica indica la carica residua della batteria

**Note:** It takes about 1.5-2 hours to fully charge the charging case



- ● ● ● 1/4 Battery Left
- ● ● ● 2/4 Battery Left
- ● ● ● 3/4 Battery Left
- ● ● ● Fully charged

# Safety Instruction

---

Using earphones at high to moderate volumes for extended periods of time will result in permanent hearing damage. It is advised that you keep volume levels moderate to low at all times for your safety.

Do not use while driving, cycling, operating machinery or performing other activities that require hearing surrounding sounds.

Do not use earphones in thunderstorm weather, the earphones may not work properly in the bad weather condition, and may increase the risk of being hit by lightning.

Earphones may not work properly under high temperature or high humidity conditions.

Do not use any corrosive cleaner/oil to clean the earphones. If the earphones come in contact with liquids, quickly wipe away. If submersed in the water, do not turn the earphones on until it is completely dried.

**Tips: Man-made damage and lost are not covered under warranty.**

**Keep the earphones and the packaging out of reach of children.**

# FCC Statement

---

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

---

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference
- (2) this device must accept any interference received, including interference that may cause undesired operation

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.