

Gamepad S1

User Manual

BEFORE USE

Check out this manual before using Gamepad S1. Charge Gamepad S1 fully before using it for the first time.

 
CONTENTS




Gamepad S1



USB Dongle



Charging Cable
(PC connectivity)

 


Bracket



User Manual

 CONTROLLER BUTTONS

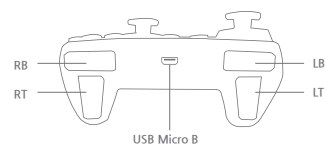

TECHNICAL SPECIFICATIONS

 
- Product : Gamepad S1
- Connectivity : 2.4GHz Wireless Gamepad & USB Dongle
- Frequency Band : 2400 ~ 2483MHz
- Output Power : Class 2
- Transmission Range : 7~10 M
- Supported Profiles : HID
- Operating Time : Max 8h
- Charging Time : 1h
- Size : 153 mm (W) x 110 mm (L) x 58 mm (H)
- Weight : 200 g

CONNECTIBLE DEVICE

- Android Smartphone
- Android TV Set-top Box
- Windows PC

Usage of Android Smartphone

- 1 Connect a correct USB-OTG gender & USB dongle to Gamepad S1.

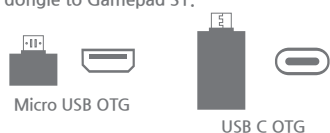

- 2 Plug connected OTG device into phone.
- 3 Press on the Gamepad S1 for 1 second.
- 4 Press and hold for about 5 seconds when all 4 LEDs flash slowly.
- 5 Press USB dongle button when all 4 LEDs flash quickly.
- 6 You can use Gamepad S1 when 1st LED lights up.

- 7 You can play up to 2 Gamepad S1 controllers. When they connect, 1st or 2nd LED will light up.



Usage of Android TV Set-top box

- 1 Connect USB dongle to USB-port on TV.
- 2 Press on the Gamepad S1 for 1 second.
- 3 Press and hold for about 5 seconds when all 4 LEDs flash slowly.



- 4 Press USB dongle button when all 4 LEDs flash quickly.

- 5 You can use Gamepad S1 when 1st LED lights up.

- 6 You can play up to 2 Gamepad S1 controllers. When they connect, 1st or 2nd LED will light up.



Usage of Windows PC

- 1 Connect USB dongle to PC.
- 2 Press on the Gamepad S1 for 1 second.
- 3 Press and hold for about 5 seconds when all 4 LEDs flash slowly.



- 4 Press USB dongle button when all 4 LEDs flash quickly.

- 5 Press [LB] and [Select] button for 3 seconds when 1st LED lights up.



- 6 Gamepad S1 is ready to use when 1st and 2nd LED light up with message display of "XBOX 360 For Windows" on PC.



TURN OFF/RECONNECT

- To save energy, Gamepad S1 switches off automatically after 5 minutes of inactivity. Press to reactivate it.

- When reconnecting the USB dongle, Gamepad S1 switches to the 'Android Mode'.

- If you want to use Gamepad S1 on Windows PC, please follow the steps previously described for "Usage of Windows PC".

BATTERY CHARGE

- If the 1st or 2nd LED flashes continuously while in use, Gamepad S1 needs to get recharged.

- Since Gamepad S1 requires 5V charging voltage, it is recommended to connect USB Micro B port between [LB] & [RB] button to KC-certified Power Adapter or PC using the supplied charging cable.



FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference
- 2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution : Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Product Warranty

Model Name : Gamepad S1

Product warranty Period: 1 year from the date of purchase

Purchase Date :

Phone No of A/S : +82-70-7542-6699

Address of A/S:

A-706, 53, Seonggogae-ro, Uiwang-si, Gyeonggi-do, Republic of Korea

※ When repair service is needed, this warranty card, which shows the date of purchase, must be provided.

1. The free warranty for this product is covered as described in this product warranty.

2. Since the warranty period is calculated from the date of purchase, the purchase date must be stated. The warranty period is calculated based on the purchase receipt or purchase statement. If there is no proof of purchase, the standard for resolving the consumer dispute can be applied based on the production date.

3. Quality assurance product range is limited to basic components such as Gamepad S1 gamepad and USB dongle. Any damage that occurs under normal use within the warranty period is free of charge, and repair costs must be paid by the customer in the event of failure or damage caused by user's negligence, even if the warranty period has expired or is within the warranty period.

4. If you use this home product as a business purpose or means, or use it in an unusual environment, the warranty period will be shortened to 50%.

5. This warranty cannot be reissued.

6. In the case of supply under a separate agreement, the warranty shall be applied in accordance with the main contract.