

尺寸：560x70mm
材质：157g铜版纸，白底黑字，双面印刷



产品规格

- 产品名称：M7
- 蓝牙版本：5.0
- 电源输入：DC 5V
- 灵敏度：100±3DB
- 耳机电池容量：3.7V/50 mAh
- 充电盒电池容量：3.7V/500mAh
- 充电时间：约60分钟
- 通话时间：5小时
- 听歌时间：6小时
- 待机时间：约150小时
- 频率范围：20-20KHz
- 支持协议：HSP/HFP/A2DP/AVRCP

包装明细
蓝牙耳机主机（左右）
耳机充电盒
USB充电线
使用说明书
精美包装盒

 
操作使用

R：短按 | 播放/暂停 接听/挂断
R：长按1秒 | 开机状态下：呼唤Siri
R：长按6秒 | 耳机关机

R：双击：下一曲
 三击：音量+

L：双击：上一曲
 三击：音量-

佩戴示意图

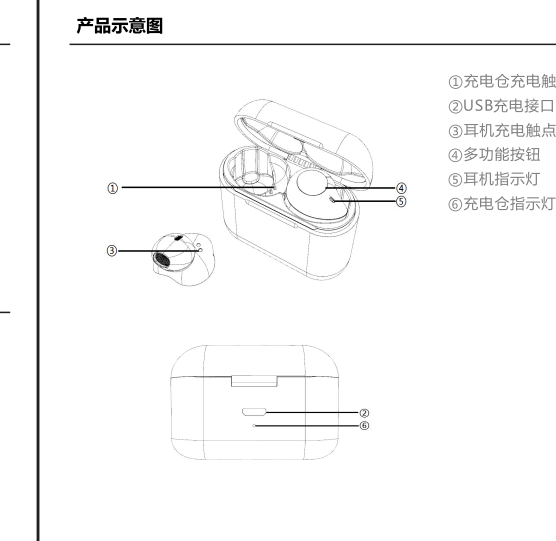

充电盒
充电时：红灯常亮
满电：蓝灯常亮
充电时长：约1.5小时

耳机
充电时：红灯常亮
满电：红灯熄灭
充电时长：约1小时

注：给本产品充电时，请使用5V/1A的充电器。特别注意：不要使用超过5V/1A的快充充电器，以免对充电盒造成损坏。

充电盒说明
自带500MAH充电盒，能为耳机至少充电5次，满足长时间外出听歌需求。
充电过程中左右耳机两个指示灯亮红灯，充电完成后红灯熄灭。

双耳使用说明：
取出自动开机配对
1. 耳机从充电盒取出，放入充电盒进行充电激活。
2. 从充电盒中同时取出两只耳机，左右耳机会自动配对。配对成功后，左耳LED指示灯会红蓝灯交替闪烁，进入蓝牙配对状态。
（不用触发按键）
3. 开启手机蓝牙，在设备上找到M7的蓝牙配对名，点击连接。连接后有语音提示连接成功。手机会出现蓝牙耳机连接的状态标志。

（第一次连接正常后，建议手动关机一次。保存数据，方便下次耳机从充电盒里拿出来，自动回连手机。）

关机
长按左右耳耳中任意一只耳机多功能键6秒，红灯闪烁三次后关机。对耳关闭任意一只耳机，另外一只也会同时关机。直接放入充电盒充电，耳机也会关机。（耳机不连接状态五分钟，自动关机）

两个耳机分别可以单独使用
连个耳机可以单独连接两台手机。取出任意一只耳机后，3秒耳机自动进入配对状态，与手机连接后可以正常使用。

常见问题

手机无法搜索到蓝牙设备
将手机存储的所有蓝牙配对资料清除掉，然后重新打开手机蓝牙并搜索设备。

耳机只有单边有声音？
①判断两个耳机是否有电
②判断两个耳机是否都开机
③判断两个耳机是否配对成功
④恢复出厂设置

耳机在通话或者听歌有卡顿或者断开现象
①蓝牙耳机电量不足
②手机与蓝牙耳机的距离超过10米以上
③手机与蓝牙耳机之间存在大面积的信号遮挡物体，例如墙体。
④左右耳配对不同步，建议关机后左右耳重新配对连接。

蓝牙耳机的音质不够理想？
新耳机需要一个煲机过程，建议播放音乐循序渐进，一段时间后耳机各个音频段的音质都会得到提升。

恢复出厂设置：
耳机关机状态下，长按左右耳耳功能键25秒左右后放入充电盒，左右耳均会恢复出厂设置。再同时把两个耳机从充电盒拿出来放在一起5秒左右后手动进行蓝牙连接

产品质量保修卡

顾客姓名：_____ 联系电话：_____

联系地址：_____


产品型号：_____

问题简述：_____

保修说明：
感谢您购买本公司产品，为了确保您的合法权益，请仔细阅读以下事项：
本卡为产品保修凭证，产品需要进行维护时，请将本卡与产品一起提供给本公司售后。

本卡片仅对以下保修范围内的产品有效使用，详见如下：
1. 通过合法、正规渠道获得的本公司产品；
2. 人为损坏的产品，包含但不限于私自拆卸、使用不当、自然灾害等情况下不在保修范围内；
3. 未超过保修期的产品。

*** 注意事项包含但不限于以上。
* 本公司保留最终解释权。**

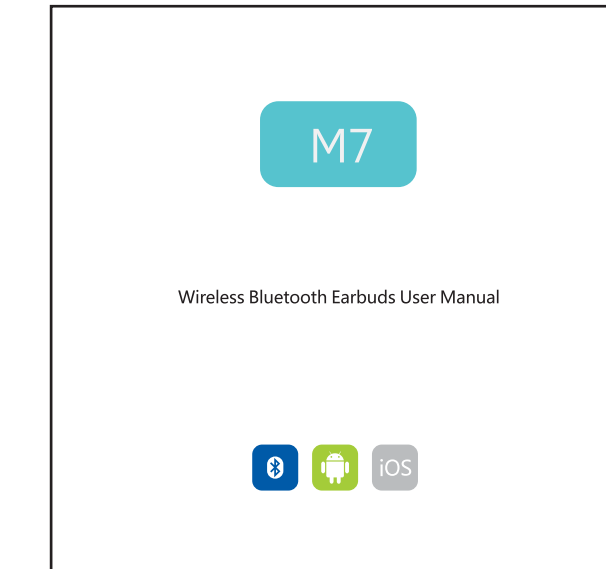

Product specification

Product model no.: M7
Bluetooth version: 5.0
Power supply: DC 5V
Sensitivity: 100dB
Battery capacity of each earbud: 3.7V/ 50mAh
Battery capacity of charging box: 3.7V/500mAh
Charging time: around 1 hour
Talk time: 5 hours
Play time: 6 hours
Standby: 150 hours
Frequency response: 20-20kHz
Supported protocol: HSP/HFP/A2DP/AVRCP

What's in the box
Bluetooth earbuds (left & right)
Charging box
User manual
USB charging cable
Gift box


Operation instructions

R：Press | Play/Pause Answer/Hang up
R：Press and hold for 1s | Wake up Siri when your iPhone powers on
R：Press and hold for 6s | Earbuds shutdown

R：Double clicks: Next song
 Three clicks: Volume+

L：Double clicks: Last song
 Three clicks: Volume-

 How to use

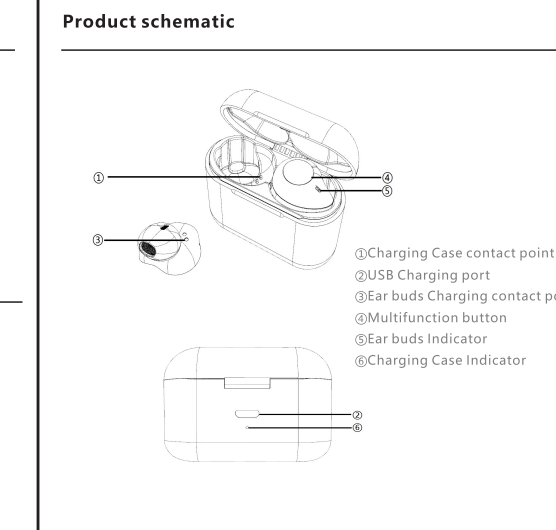

Charging box
Charging status: always red light
Fully charged: always blue light
Charging time: about 1.5 hours

Earbuds
Charging status: red light
Fully charged: red light disappeared
Charging time: about 1 hour

Tips: Please use 5v/1A charger to charge for this product, please DO NOT use quick charger which is exceeded 5V/1A to avoid damage on charging box.

Charging box
The charging box's battery capacity is 500mAh, it can charge for earbuds at least 5 times to meet your long-time outing. During the charging, the indicator on earbuds is always red on, after fully charged, red light disappeared.

Operation guide for both ears
Auto on and auto-pairing
1. Take out from the charging box, put back to charge and activate the two earbuds.
2. Take out the two earbuds at the same time, left and right will auto-pairing, after pairing successfully, earbuds will enter into pairing status with Left LED flashing red and blue light alternate;
3. Turn on Bluetooth on your device, click the pairing name M7, connected with voice prompt, and the Bluetooth icon showed on your device.

After first time using, we suggest you to turn off the product by hand to save data and to smoothly reconnect to your mobile next time;

Turn off
Long press 6 seconds on multifunctional button of left or right earbud, turned off with red light flickering 3 times.
As long as one side is turned off, another side will also be off; Another way to turn off earbuds is to put them back into the charging box;
If no device connected within 5 minutes, the earbuds will be turned off automatically.

Mono-use of either earbud
Long press for 25 seconds on both the two Multifunctional-buttons, then put back into the charging box, the earbuds will recover to factory default setting, thereafter, take out the two earbuds again, and connect Bluetooth devices by hand.

FAQ
Mobile can't search out the Bluetooth earbuds
Reply: cancel out all the Bluetooth names, turn on your mobile Bluetooth to search again.

Only one earbud is hearable?
① check if both the earbuds is power on or not
② check if both the earbuds is low power
③ check if both the earbuds is pairing successfully
④ recover to the factory default settings

Stuck or disconnected during phone call or music
① please check if it is low battery
② distance between mobile and earbuds is over 10m
③ there is large blocking or barrier like wall between mobile and earbuds
④ left and right earbud pairing is not synchronized, please turn off and restart again.

The sound quality is not very satisfied?
Usually every new earphone/headphone need a period of running-in, we suggest you to play some appropriate songs by alternate and evolutionary method, the earphone performance of every frequency band will be enhanced after this process.

Recover to factory default setting
Long press for 25 seconds on both the two Multifunctional-buttons, then put back into the charging box, the earbuds will recover to factory default setting, thereafter, take out the two earbuds again, and connect Bluetooth devices by hand.

Product Quality Guarantee Card

Customer name: _____ Contact No.: _____

Contact Address: _____

Problem description: _____

Warranty instructions: _____

Thank you for purchasing our products. To ensure your legitimate rights and interests, please read the following carefully:

This card is the warranty certificate of the product. If the need of maintenance arises, please provide this card together with the product to our company for after-sales service.

This card is only valid for the products under warranty, as shown below:
① The company's products obtained through legal and regular channels;
② Non-human damaged products. Those damaged under circumstances including but not limited to unauthorized disassembly, improper use, natural disasters and other circumstances are not covered by the warranty.
③ Products under warranty.

***Precautions include but are not limited to the above.
*The company reserves the right of final interpretation.**

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
— Reorient or relocate the receiving antenna.
— Increase the separation between the equipment and receiver.
— Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
— Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Product Quality Guarantee Card

Customer name: _____ Contact No.: _____

Contact Address: _____

Problem description: _____

Warranty instructions: _____

Thank you for purchasing our products. To ensure your legitimate rights and interests, please read the following carefully:

This card is the warranty certificate of the product. If the need of maintenance arises, please provide this card together with the product to our company for after-sales service.

This card is only valid for the products under warranty, as shown below:

- ①The company's products obtained through legal and regular channels;
- ②Non-human damaged products. Those damaged under circumstances including but not limited to unauthorized disassembly, improper use, natural disasters and other circumstances are not covered by the warranty.
- ③Products under warranty.

★Precautions include but are not limited to the above.

★The company reserves the right of final interpretation.