

# **BLUETOOTH SPEAKER**

**FB01**



# **USER MANUAL**

## **WARNING**

**This product is not a toy, an outdoor game or a sports article. Keep out of reach of children.**

**Product for indoor use only.**

**Refer to user manual for a proper use of this product.**

# Table of Contents

1	Safety Precautions.....	4
2	Control Functions.....	8
3	Key Features.....	9
4	Get Started.....	10
5	Bluetooth Mode.....	11
6	How to get into AUX Mode.....	12
7	How to get into TF Card Mode.....	12
8	How to get into Radio Mode.....	12
9	Battery Power.....	12
10	Contain.....	13
11	Specification.....	13

# 1 SAFETY PRECAUTIONS

Read these safety instructions before using your device and store them for possible future reference.

- ◆ If the cord is damaged, have it repaired by the manufacturer, its service or a similarly qualified person in order to avoid any hazard.
- ◆ The cord should always be readily accessible.
- ◆ The device is not intended for use by persons (including children) with reduced physical, sensory or mental capacity. Persons who have not read the manual, unless they have received explanations by a person responsible for their safety and supervision should not use this unit.
- ◆ Children should be monitored to ensure that they do not play with the device.
- ◆ The device should always be readily accessible.
- ◆ The device should not be exposed to dripping or splashing water.
- ◆ No objects filled with liquids such as vases shall be placed on the device.
- ◆ Always leave a minimum distance of 10 cm around the unit to ensure sufficient ventilation.

- ◆ Open flame sources, such as candles, should not be placed on top of the device.
- ◆ The device is intended for use only in a temperate climate.
- ◆ At full volume, prolonged listening to the portable audio device may damage the user's hearing and cause hearing troubles (temporary or permanent deafness, hearing drone, tinnitus, hyperacusis).

So we recommend not to listen to the portable audio device at high audio volume and no more than one hour per day at medium audio volume.

- ◆ **CAUTION:** Danger of explosion if battery is incorrectly replaced or not replaced by the same type or equivalent.
- ◆ The battery should not be exposed to excessive heat such as sunshine, fire or similar.
- ◆ Different types of batteries, new and used batteries should not be mixed.
- ◆ The battery must be installed according to the polarity.
- ◆ If the battery is worn, it must be removed from the product.

- ◆ The battery must be disposed of safely. Always use the collection bins provided (check with your dealer) to protect the environment.
- ◆ The battery can't be replaced by the user, but only by the maker of this product, the after sales department or a qualified person.

## **SWITCH OFF IN RESTRICTED AREAS**

Switch the mobile device off where the use of mobile devices is not allowed or where there is a risk of causing interference or danger, for example on board an aircraft, near medical equipment, fuel, chemicals or blasting sites.

## **ROAD SAFETY COMES FIRST**

Check the current laws and regulations regarding the use of mobile devices in the areas where you drive.

- ◆ Do not handle the mobile device when driving.
- ◆ Concentrate fully on the driving
- ◆ Use a hands-free kit whenever possible
- ◆ Leave the road and park up before making or receiving a call, if the driving conditions allow.

- ◆ Radio signals could affect some of the car's electronic systems such as the audio stereo and alarm systems.
- ◆ If the car is equipped with an airbag, do not hinder its deployment with fixed or wireless equipment. This could result in serious injury due to inadequate performance.

## **INTERFERENCE**

All wireless devices are susceptible to interference which may affect their performance.

## **AUTHORIZED PERSONNEL**

Only qualified people are authorized to install or repair this product

## **ACCESSORIES**

Only use batteries, chargers and other accessories which are compatible with this equipment. Do not connect incompatible products.

## **KEEP THE EQUIPMENT DRY**


This equipment is not water proof. Keep it dry.

## **CHILDREN**

Keep your mobile device in a safe place, out of the reach of young children. The mobile device


contains small parts that may present a choking hazard

## 2 CONTROL FUNCTION

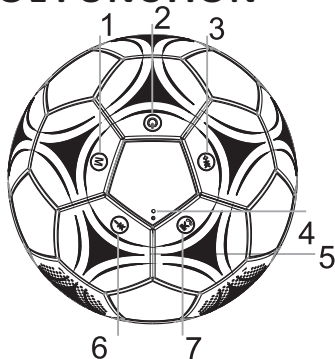

1. Mode select-short press to select mode from Bluetooth, TF card (can't select if TF not insert), FM radio  
Press& hold to disconnect the Bluetooth device.
2. Power on/off-press & hold to power on/off
3. Short press - next track/channel  
Press & hold -volume up
4. Built-in mic for hands-free speaking
5. Status LED
6. Short press - previous track/channel  
Press & hold -volume down
7. Short press - play/pause, to answer call



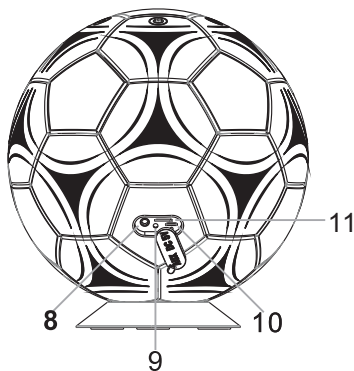

- 8. AUX in
- 9. Charging indicator
- 10. Power 5V power socket
- 11. TF card slot

### 3 KEY FEATURES

- ◆ SURFACE - Made by PU leather, feel like a real football.
- ◆ ICONIC PAIRING SOUND - Upon pairing your Football speaker will emit phrase "Connected".
- ◆ AUX - Hook up your speakers to your PC or external audio.
- ◆ TF CARD - Insert TF card can play MP3 in card.
- ◆ FM RADIO - Different channels for your choice.
- ◆ HANDS FREE -Your music automatically mutes when a call comes in.

- ◆ **TWO LOUDSPEAKERS** - Create loud clear and rich sound.

## **4 GET STARTED**

### **MAINS POWER**

Plug in the USB charging cable (10). The charging indicator will glow red (9) and when the speaker is fully charged, it glows green. Press & hold the power switch (2) to switch on the speaker. The speaker will emit phrase “Bluetooth mode” to confirm it is switched on.

### **AUX (8)**

Connect the speaker to your smartphone, tablet, PC, TV, laptop or games station using an AUX cable with 3.5 mm jack plug.

### **VOLUME CONTROLS**

To adjust the volume, press & hold the [volume up] or [volume down] button (3,6) to increase or decrease the volume level. There will be a beep sound to confirm when the volume reaches the maximum.

### **TRACK FORWARD/BACK**

To select the next or previous track, press the [next track] or [previous track] button (3, 6).

## 5 BLUETOOTH MODE

Note: The term mobile device refers to mobile phones/ tablets/ MP3 players, laptop or any other devices that was compatible Bluetooth function.

### HOW TO PAIR WITH THE SPEAKER

Press the button (1) to go into the bluetooth mode. The status LED (5) will flash blue quickly. The speaker is now in pairing mode.

When pairing with a mobile device the speaker will emit a pairing sound. The flashing status LED will turn a fixed blue LED.

When the speaker is powered on it will connect automatically with the last mobile device it was paired to.

### HOW TO UNPAIR FROM THE SPEAKER

If the speaker is already paired with a mobile device, press and hold Mode button (1) to disconnect. The status LED will flash quickly.

### PHONE ANSWERING

When your phone is pairing, with an incoming call, short press [answer/cancel call] button (7) to answer the call; press & hold to cancel. Double click to redial the call.

## **6 HOW TO GET INTO AUX MODE**

### **CONNECTING WITH AN AUX CABLE WITH 3.5 mm JACK PLUG**

When an AUX device is plugged in, the speaker will go into the AUX mode automatically. The status LED will flash blue.

Button [volume up/ down] available

[previous /next track] [play/pause] not available.

## **7 HOW TO GET INTO TF CARD MODE**

Insert TF card in card slot (11), the speaker will go into TF mode automatically. If TF card has inserted, press [ Mode] button (1) to select TF card mode.

## **8 HOW TO GET INTO RADIO MODE**

Press [ Mode] button (1) to select FM radio mode.

## **9 BATTERY POWER**

When battery below 20% power, the speaker will emit “Battery Shortage” sound until mains power is connected. It will be powered off automatically to protect the battery if the power reaches a very low level.

## 10 CONTAIN

- 1 Football speaker
- 1 AUX cable
- 1 USB charging cable
- 1 Pedestal
- 1 User manual

## 11 SPECIFICATIONS

- ◆ Compatible Bluetooth version: Jeili 4.0
- ◆ Distance stays connected :  $\geq 10\text{m}$
- ◆ Power max: 20W
- ◆ Battery type and capacity: Li-ion 7.4V 1500mAh
- ◆ Battery time: 2-6 hours
- ◆ Battery charge time: 2-4 hours
- ◆ Frequency response: 80HZ -20KHZ
- ◆ S/N:  $\geq 85\text{dB}$
- ◆ THD:  $< 1\%$
- ◆ Rated Voltage: 5V  $\approx$  2A
- ◆ Max. consumption : 11.1Wh

**FCC Caution:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.