

# DEDON

**OMBII**

USER MANUAL  
BEDIENUNGSANLEITUNG  
MANUAL DE USO  
MANUALE D'USO  
MANUEL D'UTILISATION

DEDON

EN

**IMPORTANT: READ CAREFULLY AND  
RETAIN FOR FUTURE REFERENCE.**

DE

**WICHTIG: LESEN SIE DIE ANLEITUNG  
SORGFÄLTIG UND BEWAHREN SIE  
DIESE FÜR ETWAIGE FRAGEN AUF.**

ES

**IMPORTANTE: LÉASE ATENTAMENTE  
ESTAS INSTRUCCIONES Y CONSÉRVE-  
LAS PARA FUTURAS REFERENCIAS.**

IT

**IMPORTANTE: LEGGERE  
ATTENTAMENTE E CONSERVARE PER  
EVENTUALI CONSULTAZIONI FUTURE.**

FR

**ATTENTION : LISEZ ATTENTIVEMENT  
LES PRÉSENTES INSTRUCTIONS ET  
GARDEZ-LES POUR UNE ÉVENTUELLE  
UTILISATION ULTÉRIEURE.**

## **IMPORTANT**

Read carefully and retain for future reference.

## **INTENDED USE**

Congratulations on choosing OMBII. This DEDON product has been tested to the highest quality standards and is fully suited for private and contract outdoor use. Please ensure that you use it according to its intended usage. Appropriate usage and regular care are important for the longterm maintenance of your product. Please refer to the paragraph "Maintenance".

## **GENERAL DISCLAIMER**

DEDON waives any responsibility for the misuse or inadequate installation of any products sold or distributed through it or any affiliate. The user assumes responsibility for any injuries received due to use, misuse, mishandling or the improper installation of the product and waives DEDON of any responsibilities. DEDON will not be held liable for any damages resulting from the use of this product.

## **SAFETY INSTRUCTION**

Installation by minors is not permitted. If the product is damaged or individual parts are missing or damaged, use is not permitted. Please use only the accessories and appropriate spare parts confirmed by the manufacturer. Use cutters or knives with care by removing the packaging without damaging the product. Do not make any modifications to the product. Do not immerse the product under water. Do not expose off the product to fire.

## **WARNING**

Risk of injury! Improper connection to the power supply can lead to electric shock. Only connect the appliance using the accessories supplied.


## **INITIAL INSTALLATION**

This document is the operating instructions for the OMBII luminaire. Please follow the instructions described here. Before using the product for the first time, check it for damage. Before using the luminaire for the first time, fully charge it as described under "Charging".

For other languages scan here:



## MATERIALS SUPPLIED

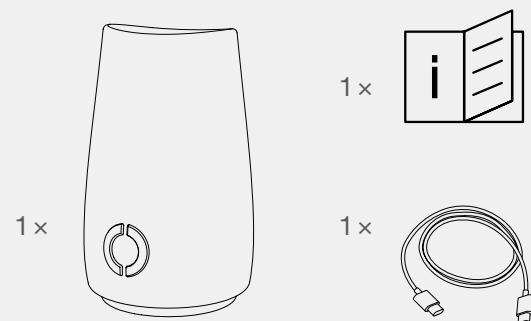

Item Code:

EU: CFE0317000CCN0  
US: CZF0317000CCN0

## TECHNICAL INFORMATION

- Dimensions: 143 x 140 x 220 mm / 5¾ x 5½ x 76"
- Max: 2W LED
- Power input: 5V — 2A Max: 10W
- Lithium battery 5200mAh, not exchangeable
- IPX4:
  - The product is suitable for all weather conditions and is resistant to heavy splashing.
  - However, it cannot withstand immersion.
- Recommended operating temperature: 0 to 40°C / 32 to 104°F
- Resistant to bumps and UV rays

The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.

## CHARGING

If the lamp flashes twice before it turns off, the battery is completely discharged. Charge your lamp by USB-C cable indoor only.

- Open the cover of the jack
- Plug in the cable
- Allow about 4 hours for the battery to fully charge

Blue indicator is on when charging and will turn off when battery is fully charged. When fully charged the battery run-time at maximum brightness will be up to 8 hours. Run-time is longer when light is dimmed.

Use only the supplied USB-C cable to charge the luminaire. Do not use wireless charging pads other than those provided by DEDON to charge the luminaire. Use your wireless charging pads exclusively to charge the OMBII light provided by DEDON.

## OPERATING INSTRUCTIONS

To switch on and off and to dim the light intensity, use the button with the sun symbol on the bottom of the luminaire. To adjusting the light temperature from warm to cold white, use the button with the thermometer symbol.




### light intensity dimming:

- click 1: ON / 25%
- click 2: 50%
- click 3: 75%
- click 4: 100%
- click 5: OFF



### light temperature dimming:

- click 1: 2700 Kelvin
- click 2: 4000 Kelvin
- click 3: 5000 Kelvin
- click 4: 6000 Kelvin

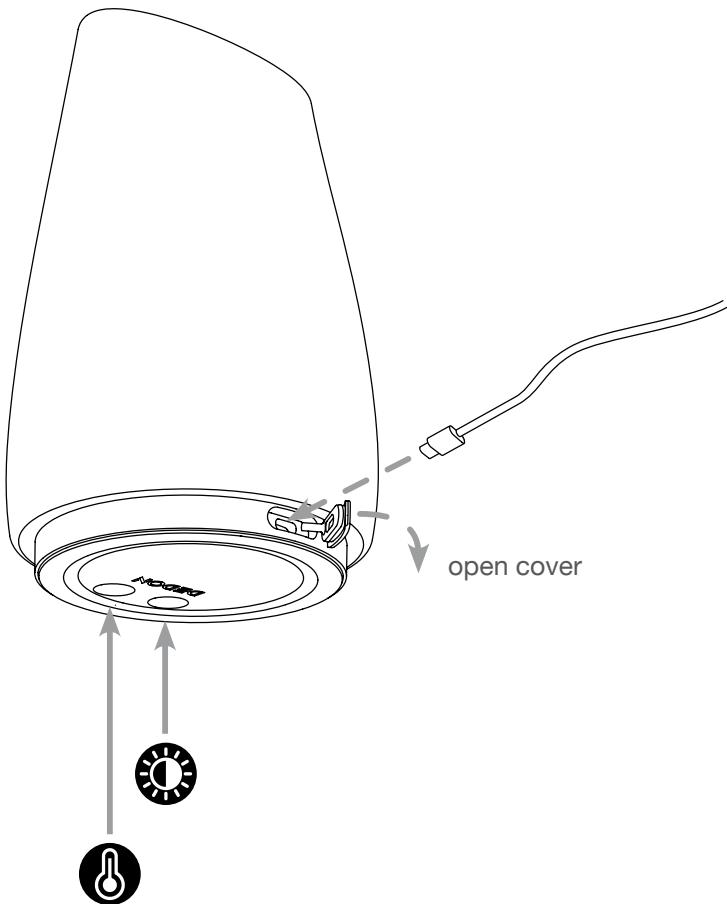

#### Follow these tips to get the best out of your lamp:

- Charge in cold environment – preferably less than 30°C / 86°F.
- Avoid charging near a heat source or in direct sun light.
- Ensure that you charge your lamp regularly to protect the battery.
- We recommend bringing lighting objects indoors during winter.
- The battery is not resistant to temperatures below 0°C / 32°F.

#### MAINTENANCE

- To clean a synthetic material surface, use a soft cloth, warm water and a gentle cleanser if needed.
- Do not immerse the product under water.
- Never use chemical detergent.
- Use a neutral pH soap if necessary.
- Store out of the reach of children.

#### TROUBLESHOOTING

If the luminaire does not work, check whether the battery is charged. If the battery cannot be charged, check that the cable and power adapter are working properly.

#### DISPOSAL



Batteries and rechargeable batteries must not be disposed of with household waste. Consumers are legally obliged to dispose of batteries and rechargeable batteries separately.

Batteries and rechargeable batteries can be handed in free of charge at a collection point in your municipality/district or at a retailer so that they can be disposed of in an environmentally friendly manner and valuable raw materials can be recovered. Improper disposal can release toxic substances into the environment that are harmful to humans, animals and plants.

If possible, batteries and rechargeable batteries contained in electrical appliances must be disposed of separately. Only dispose of batteries and rechargeable batteries when they are discharged.

If possible, use rechargeable batteries instead of disposable batteries.

Before disposing of batteries and rechargeable batteries containing lithium, tape the terminals to prevent an external short circuit. A short circuit can lead to a fire or explosion.

Batteries with a high level of harmful substances are also marked with the following symbols:

Cd = cadmium, Hg = mercury, Pb = lead



The symbol with the crossed-out wheelie garbage can means that electrical and electronic equipment must not be disposed of with household waste. Consumers are legally obliged to dispose of electrical and electronic appliances separately from unsorted municipal waste at the end of their service life. This ensures that recycling is environmentally friendly and conserves resources.

Batteries and accumulators that are not firmly enclosed in the electrical or electronic appliance and can be removed without causing damage must be separated from the appliance before it is handed in at a collection point and disposed of in a designated collection point. The same applies to lamps that can be removed from the appliance without destroying it.

 
Owners of electrical and electronic appliances from private households can hand them in at the collection points of the public waste disposal authorities or at the collection points set up by the manufacturers or distributors in accordance with the ElektroG. The return of old appliances is free of charge. Retailers with a sales area of at least 400m<sup>2</sup> / 4306 ft<sup>2</sup> for electrical and electronic appliances are obliged to take back waste. The same applies to food retailers with a total sales area of at least 800m<sup>2</sup> / 8611 ft<sup>2</sup> if they sell electrical and electronic equipment on a permanent basis or at least several times a year.

Distance sellers with a storage area of at least 400m<sup>2</sup> / 4306 ft<sup>2</sup> for electrical and electronic equipment or a storage area of at least 400m<sup>2</sup> / 4306 ft<sup>2</sup> are also subject to the take-back obligation.

Consumers have the option of returning an old appliance free of charge to a distributor obliged to take it back if they purchase an equivalent new appliance with essentially the same function. This option is also available for deliveries to a private household. In distance selling, the option of free collection when purchasing a new appliance is limited to heat exchangers, display screen equipment and large appliances with an outer edge of at least 50 cm / 20" in length. The distributor must ask the consumer about the intention to return the product when the purchase contract is concluded. Apart

from this, consumers can return up to three old appliances of the same type to a distributor's collection point free of charge without this being linked to the purchase of a new appliance. However, the edge lengths of the respective appliances may not exceed 25 cm / 10".

Electrical and electronic devices for information and communication technology, such as computers or smartphones, often contain personal data. Consumers are responsible for deleting this data themselves before returning the devices.



## WARRANTY

2 years

## SERVICE

If you have any problems with the product or if the product or packaging are damaged, please contact the dealer from which it was purchased.

## FCC warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Federal Communications Commission (FCC) Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## RF exposure warning

· This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

Assembly instruction  
available as softcopy

**DEDON GmbH**  
Zeppelinstrasse 22  
21337 Lüneburg / Germany  
Tel. +49 41 31 / 22 44 70  
Fax +49 41 31 / 22 44 7 630  
info@dedon.de  
[www.dedon.de](http://www.dedon.de)



**DEDON Inc.**  
877-693-3366  
[office@dedon.us](mailto:office@dedon.us)  
[www.dedon.us](http://www.dedon.us)



12.23\_v01

Art. No. 10115704