

User Manual

Chapter 1 System Introduction

1.1 Key Features

- Support many kinds of IPTV and OTT TV programmes.
- Support three main HD formats:VC-1,H.265,H.264,MPEG-2 and many other normal formats such as MPEG-1, MPEG-2, MPEG-4, VP9, DIVX, REALMEDIA and so on.
- Video formats include avi, mpg, vob, mmb, mkv, m2ts, ts and so on.
- Photo formats include JPEG, BMP, and PNG up to 80M pixels.
- Audio formats include MP3, WMA, WAV, AC3, DTS, AAC and so on.
- Support SD/SDHC/MMC cards.
- Support two USB 2.0 host connectors with maximum output current of 2A/5V.
- Support standard RJ45 cable network connection and wireless network connection.
- Support infrared remote controller operation.

1.2 Environment for System

Operation : Temperature limitation: 0~40°C; Humidity limitation: 20~80%
Storage : Temperature limitation:-20~50°C; Humidity limitation: 10~90%.

 
1.3 Package Contents

Accessories	Quantity
Power adaptor	1
Remote control	1
cable	1
User manual	1


01 |

Chapter 2 Remote Controller

2.1 Introduction of Remote

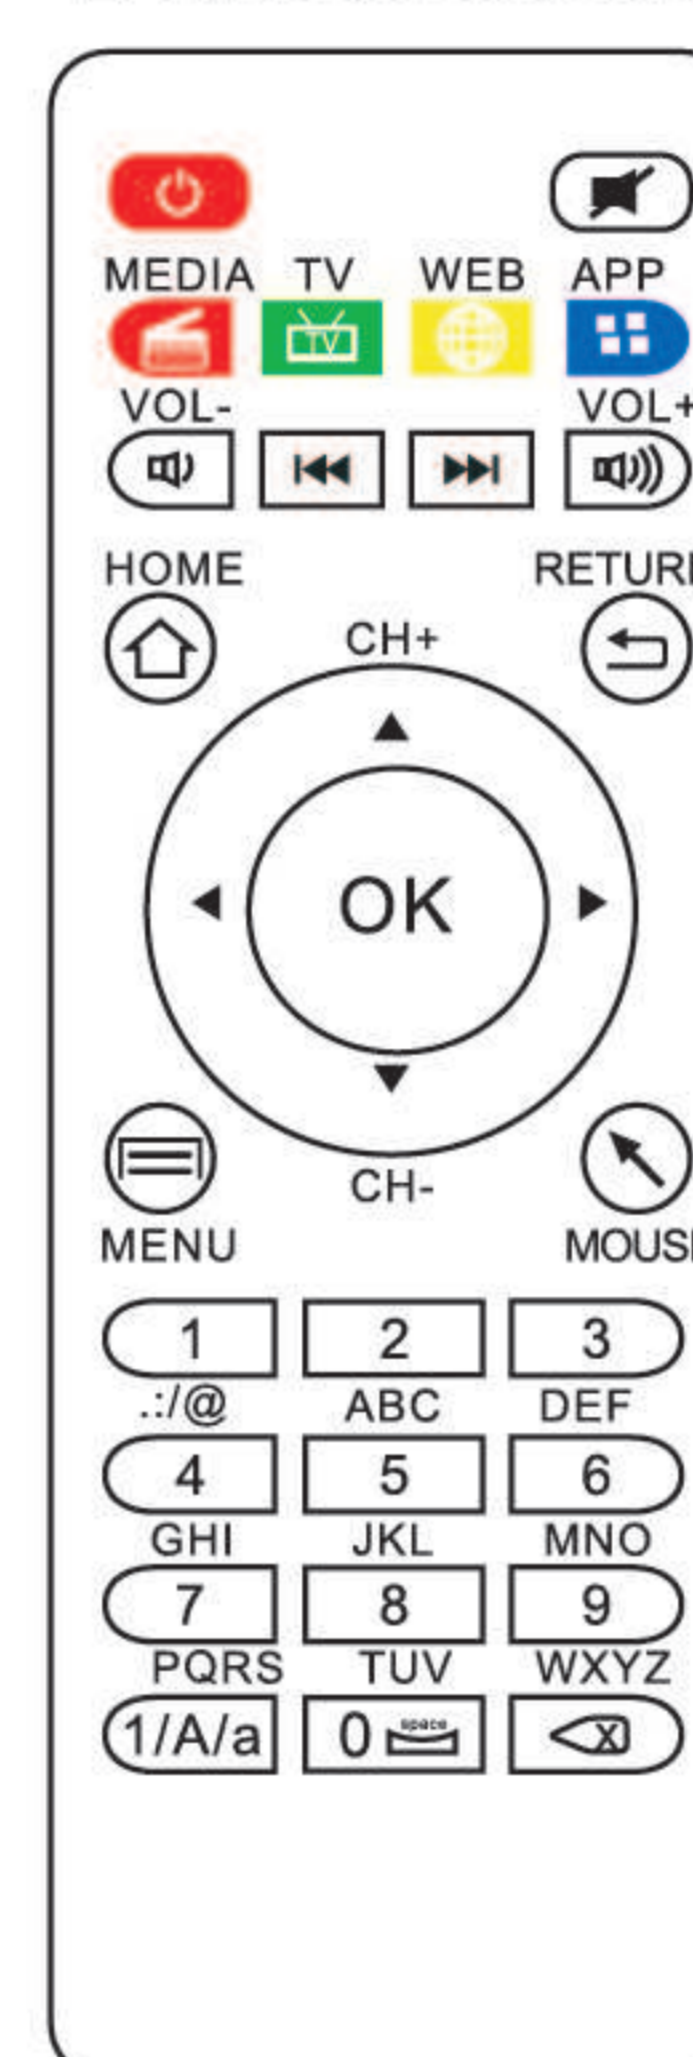


- POWER: Press to standby.
- MUTE: Press to turn down the volume.
- VOL: Press to increase/decrease the volume.
- Go to previous page or next page.
- RETURN: Press to return back to previous menu.
- HOME: Fast key to go back to main menu.
- Mouse : Press to switch Mouse mode or remote mode.
- MENU: Press to choose function menu of corresponding application in video, music, photo and website.
- 1/A/a Switch numbers and letters
- Space

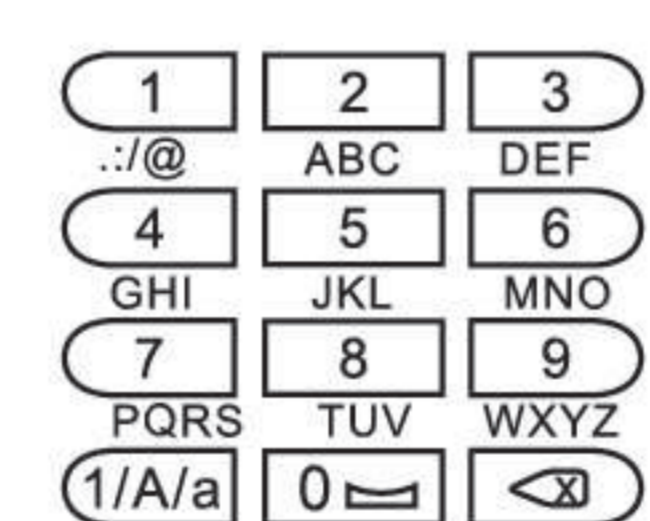 


- Navigation: Press to navigate left/right/up/down. Press ok to confirm your choice.
- Number and letter keypad
- Delete: Press to backspace the input.

02 |

 2.2 Introduction of Remote

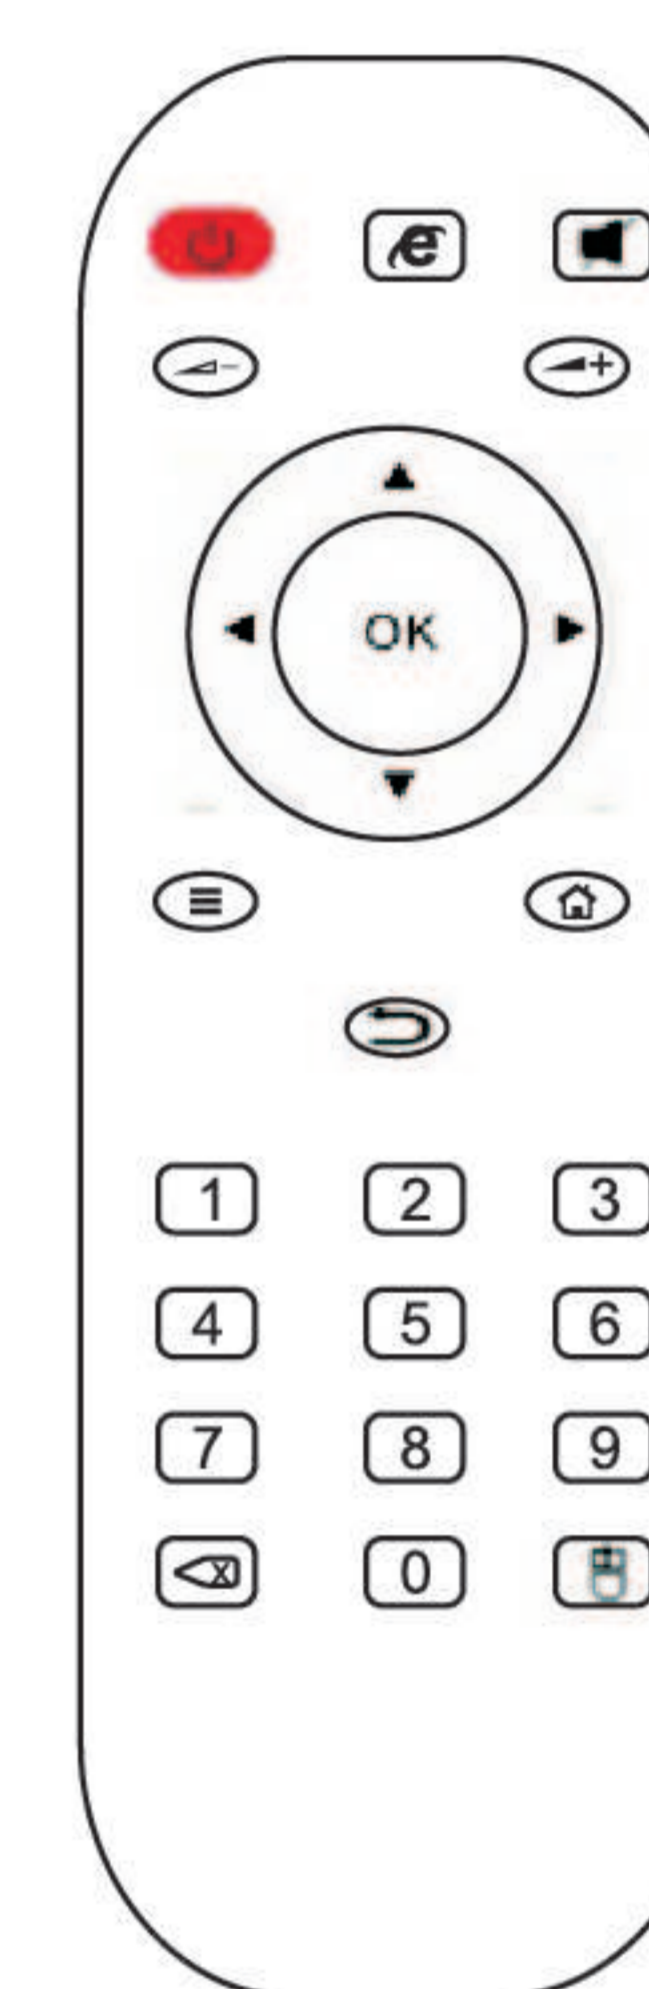

 - POWER: Press to standby.
- MUTE: Press to turn down the volume.
- RETURN: Press to return back to previous menu.
- HOME: Fast key to go back to main menu.
- MENU: Press to choose function menu of corresponding application in video, music, photo and website.
- VOL: Press to increase/decrease the volume.
- Visit internet

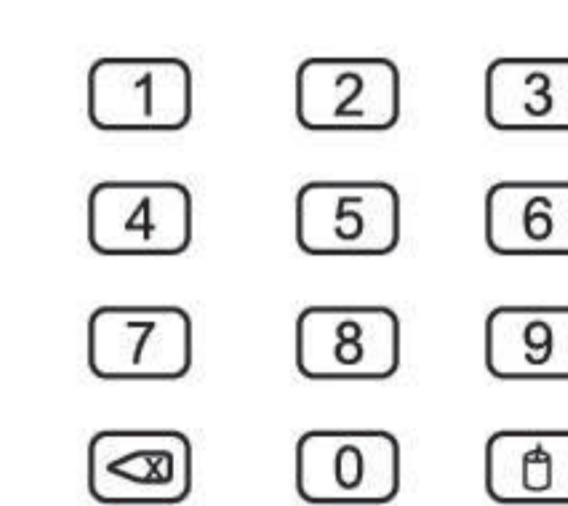


- Navigation: Press to navigate left/right/up/down. Press ok to confirm your choice.
- Number keypad 0-9: Press to input Arabic number.
- Mouse : Press to switch Mouse mode or remote mode.
- Delete: Press to backspace the input.

03 |

Chapter 7 System Connection

 Note: The connection diagram, each model to the actual material perspective

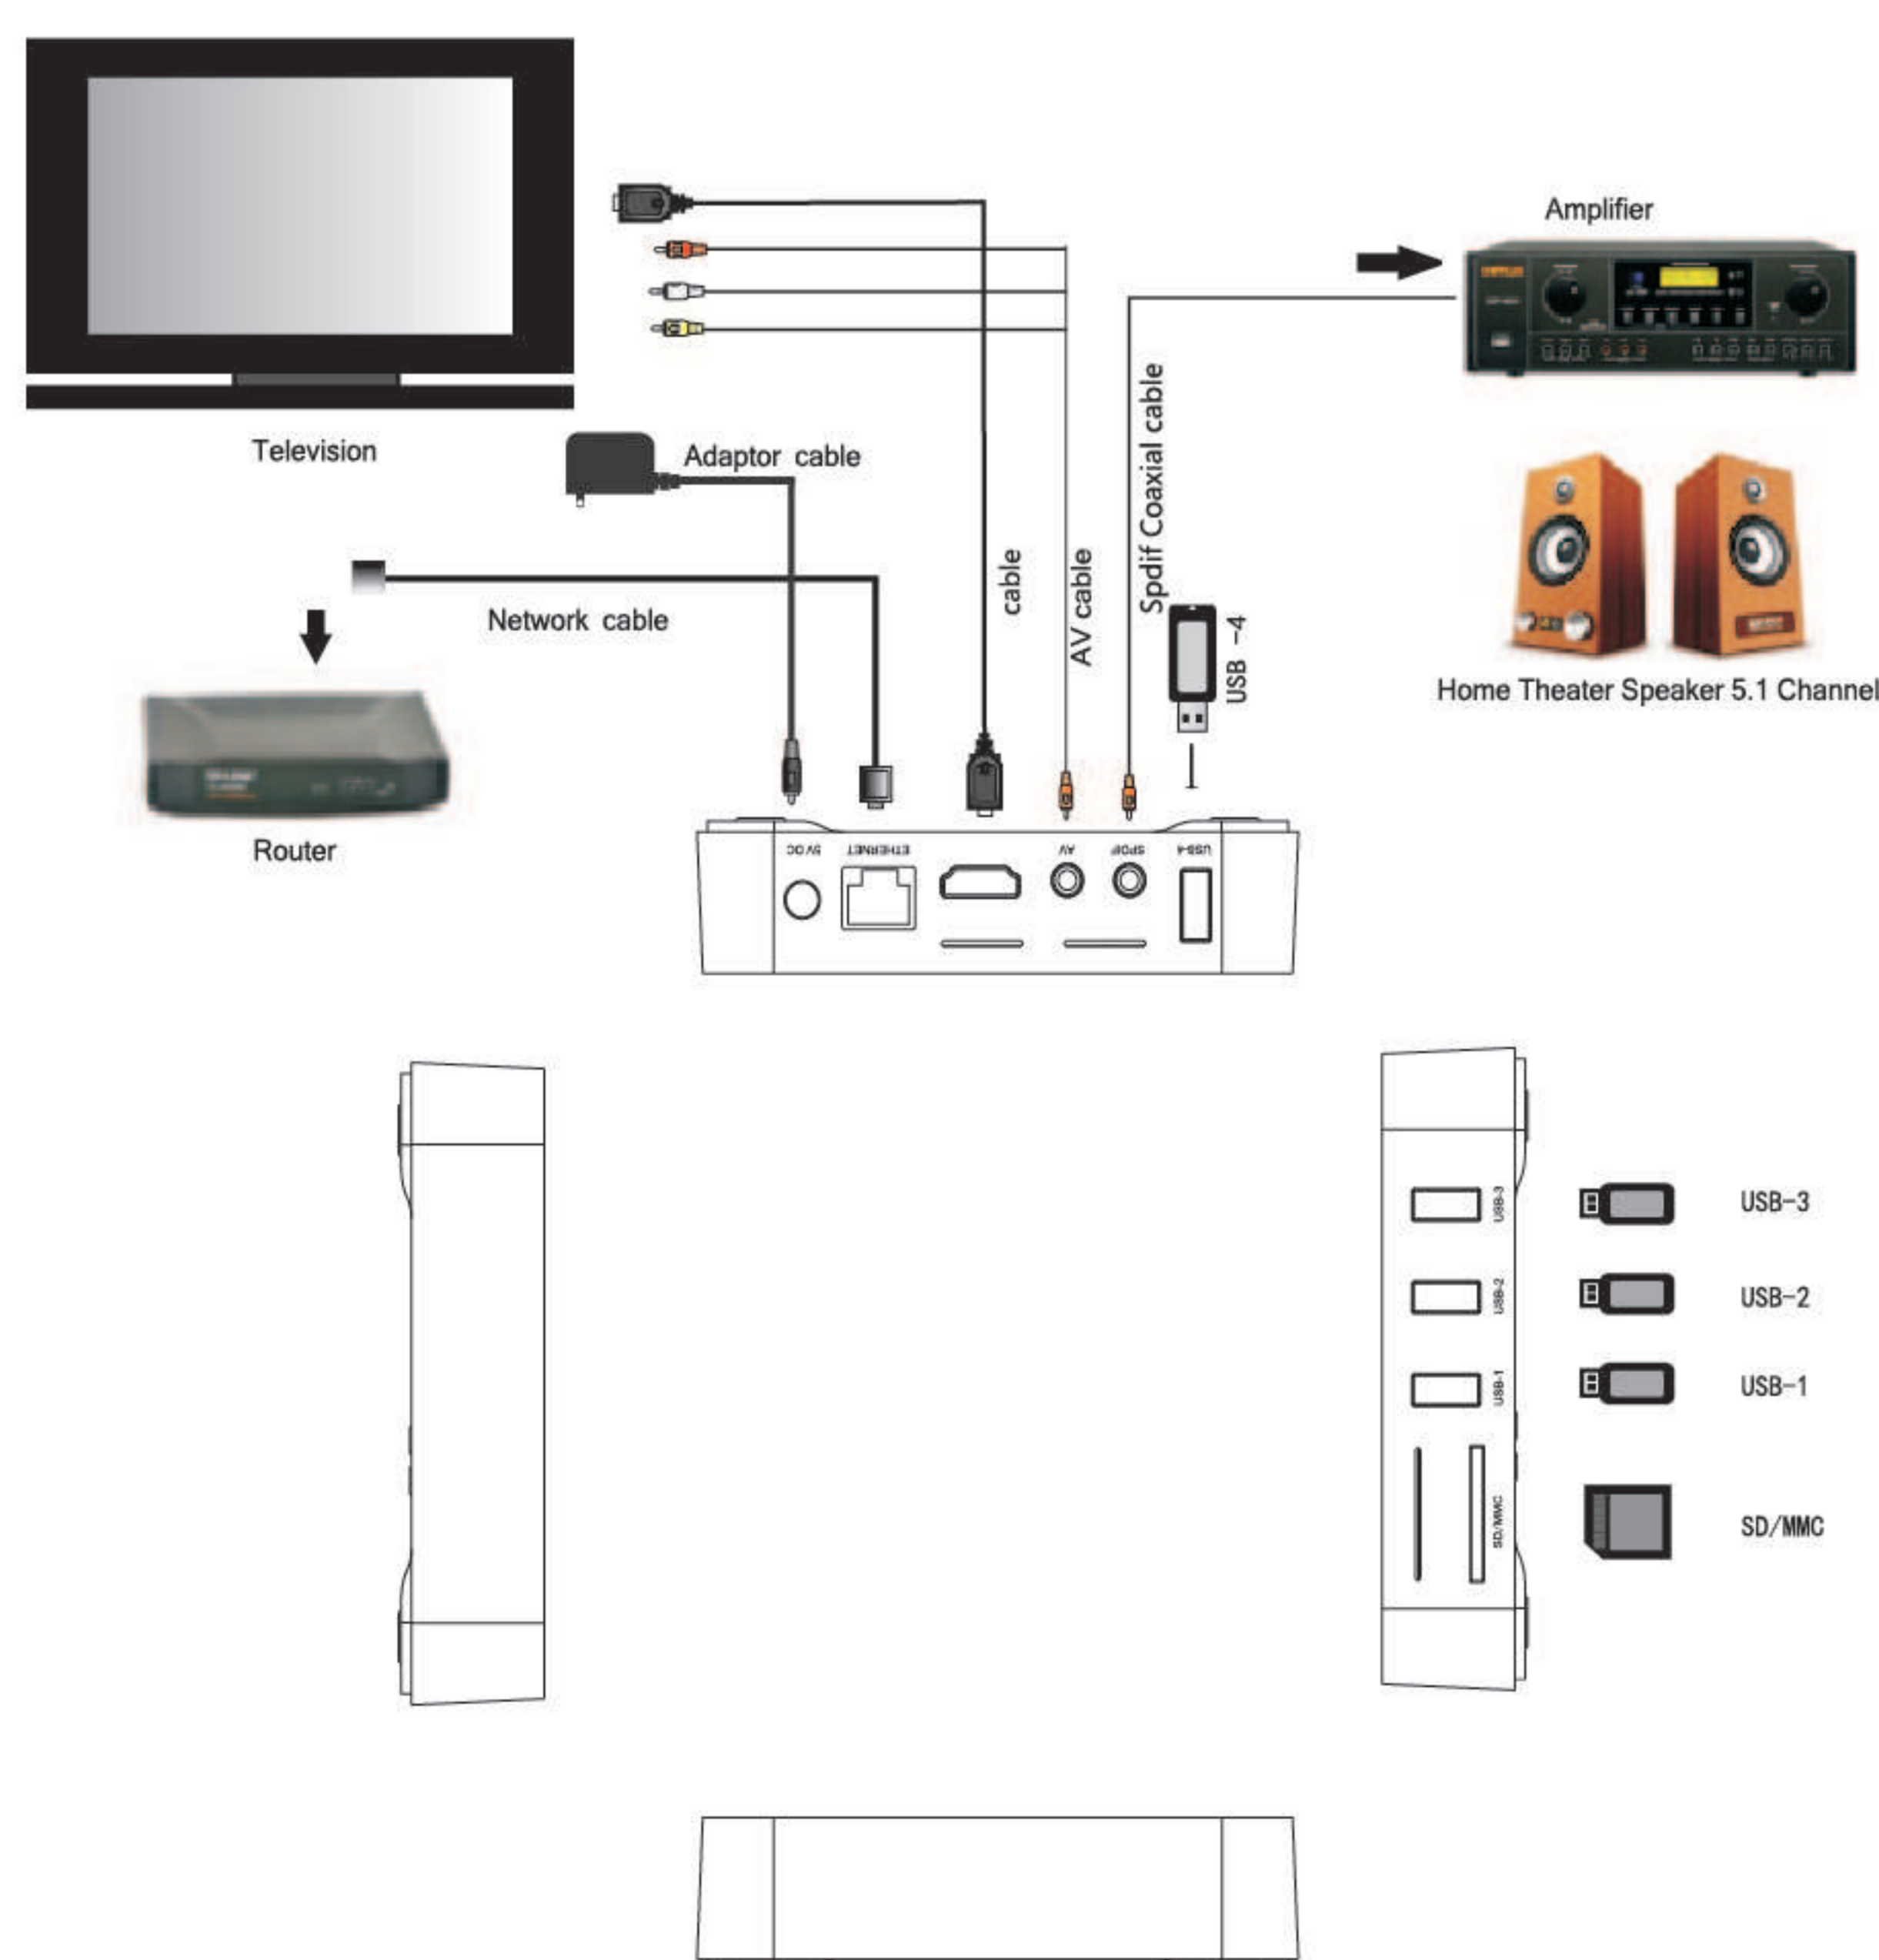

07 |

Chapter 6 Trouble Shooting

Under no circumstances should you try to repair the TV Box by yourself, as this will invalidate the warranty. Do not open the TV Box as there is a risk of electric shock. If a fault occurs, first check with points listed below before taking the TV Box for repair. If you are unable to remedy a problem by following hints, consult your dealer for help.

Problem	Solution
No power	-Check if the power adaptor is properly connected to the power and the TV Box. -Press the power on the remote controller to turn on the power.
No picture	-Reconnect with cable or AV cable. -Check if the TV is switched on.
No sound or distorted sound	-Adjust the volume. -Check that the speakers are connected correctly.
No audio or digital output	-Check the digital connections. -Check if your amplifier is set correctly.
The box does not respond to the Remote Control	-Aim the remote control directly at the sensor on the front of the TV Box. -Reduce the distance to the TV Box. -Replace the batteries in the remote control.
Player does not respond to some operating commands during playback	-Operations may not be permitted. Refer to the user manual. -Possibility of system halted, re-insert with power adaptor to restart.
No sound during movies playback	-The audio codec may not be supported by the TV Box. You can change to the supported audio on playing menu. -Check the volume.
The contents of the USB flash drive cannot be read	-The USB flash drive format is not compatible with the box. -If one of the USB can not be read, please turn off the TV Box for 30 seconds and restart the TV Box.
Slow operation of the USB flash drive	-Big file size or high resolution USB flash drive takes longer time to read and display on the TV screen.
No sound with connection	-Check the connection between the TV and the jack of box. -Check your TV system setup. -Check the volume.
The TV screen is blank and the player LED is blinking	-Turn off your TV Box, wait 30 seconds, turn it on again. -If under status, check if connection is correct or change another cable set the output resolution of this TV Box into 720p.

06 |

Chapter 5 Settings

5.1 Network

Wi-Fi
Select "Network" Click "OK", Select "Wi-Fi" Click "OK" to confirm.



5.2 Display

Move to "Display".
Here you can set wallpaper, audio output mode, turn on/off hide stat us bar, display position, choose the time of start screen saver.




05 |

Chapter 3 System

3.1 Startup

 Turn on the TV box while indicator light is blue. Enter into main menu at about 30 seconds.

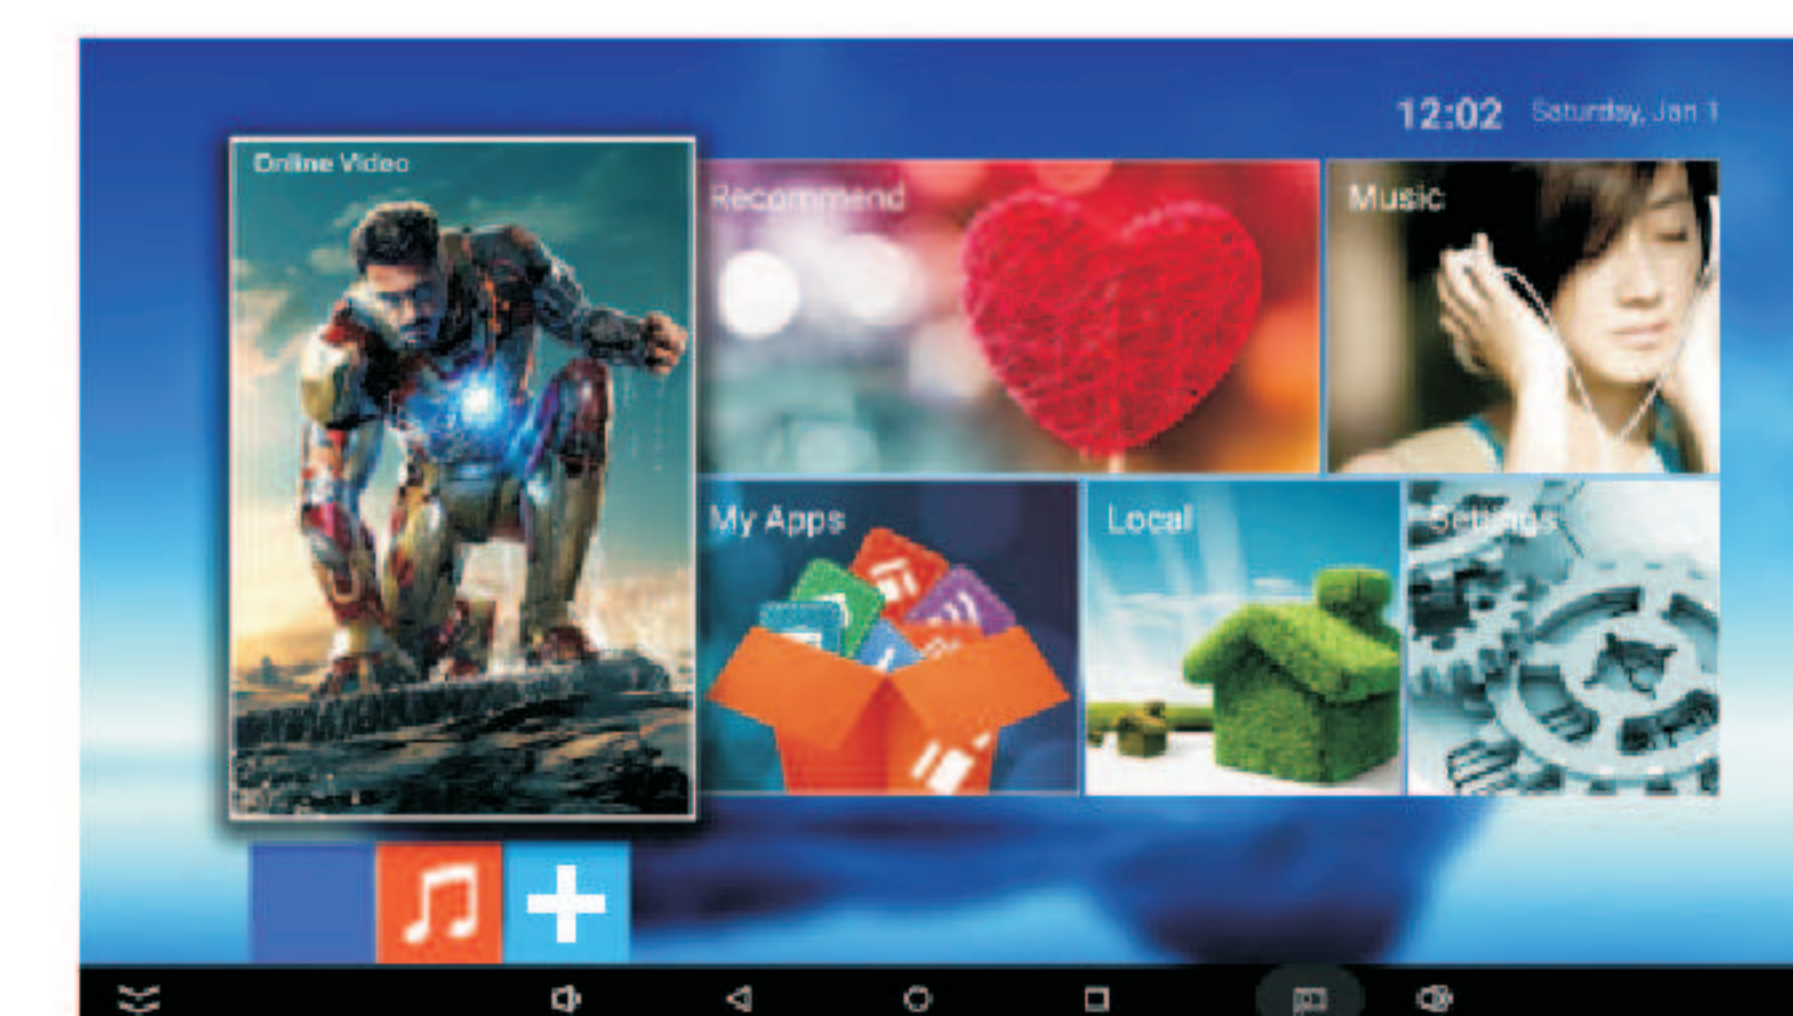

Chapter 4 Home

There are apps which you usual use.
You can add the apps according to your own preference.
Please tick the apps you need. Tick it again when you don't need it.



04 |

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

The equipment complies with FCC Radiation exposure limits set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.