 


MODENA

Digital Notebook folio

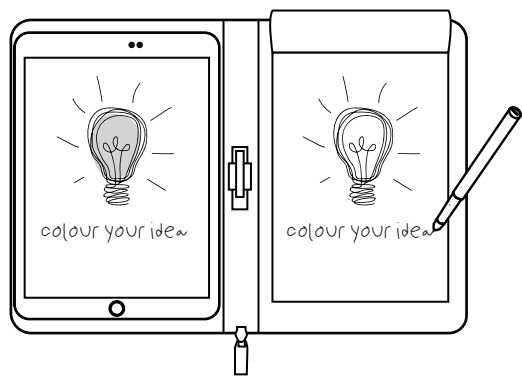 


User Manual 使用指南


Product Information 產品資料

MODENA Digital Notebook Folio MODENA 智能記事本:

Executive model 行政版:

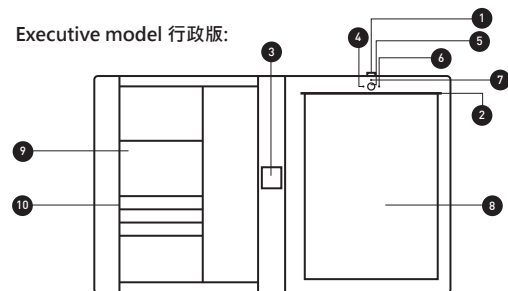


Essential model 基本版:

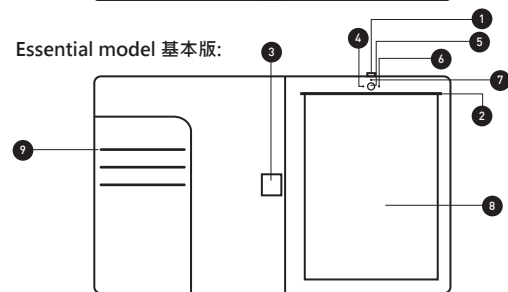 

- | | |
|--------------------------------|-----------|
| 1. Micro USB Charging Port | 充電USB接口 |
| 2. Fixed Note Pad Position | 記事簿插口位置 |
| 3. Elastic Pen Holder | 彈性筆插 |
| 4. LED Indicator A (Power) | 電源信號顯示燈 A |
| 5. Power Button | 電源開關按鈕 |
| 6. LED Indicator B (Operation) | 操作信號顯示燈 B |
| 7. Reset Button | 重置鍵 |
| 8. EMR Effective Area | 智能書寫感應區 |
| 9. Multi-Function Pockets | 多用途間隔 |
| 10. Tablet Pocket | 平板電腦袋 |


Product Information 產品資料

 Product and Accessories 產品及配件

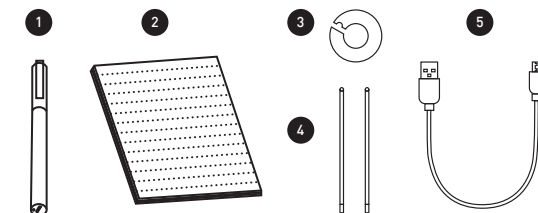

1. Digital Smart Ink Pen 智能記事筆
2. A5 Notepad x 2 A5記事簿 x 2
3. Nib Removal Ring 筆尖更換圈
4. Ball Pen Refills x 2 備換筆芯 x 2
5. USB Charging Cable USB充電線

 Digital Smart Ink Pen 智能記事筆

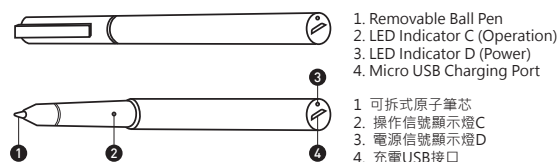

How to replace the ball pen refills 如何更換備用筆芯



Use the Nib Removal Ring to remove the ball pen and replace with a new one, then secure it by pushing inward on the nib.
使用筆尖更換圈取出已用完的筆芯，便可簡易地插入另一支新的筆芯，再於筆尖位置輕輕按壓便可繼續使用。

Go Start 開始體驗

MODENA Digital Notebook Folio allows you to write naturally with pen on any paper and in real-time, convert & enhance your handwritten notes or sketches into digital files allowing you to easily store or share as an electronic file.

MODENA Digital Notebook Folio將傳統書寫樂趣與現代電子功能結合，可以在任何紙張上隨意書寫，利用手機程式即時把手寫文字及圖畫，同步顯示在手機或平板電腦上，並可即時進行編輯、存檔及分享。

Download Free App 免費應用程式下載



Google Play 安卓版 (code: 870017)



App Store 蘋果程式

Instructions 使用方法

1. Charge your MODENA Digital Notebook Folio & Digital Smart Ink Pen by using the provided USB cable to connect the USB power source, the Power LED Indicator will turn off when it is fully charged.
2. Download the "IDNBook" app from your app store (Available on Android or iOS).
3. Activate Bluetooth on your smartphone or tablet.
4. Press the Power button for 5 seconds to power on the MODENA Digital Notebook Folio and the LED lights will light up.
5. Go to the "IDNBook" app to commence the pairing.
 - (A) Press the Search Button → Click on "DGIDN" icon → Input the Code: 870017 → Pairing is completed and the LED lights turn off (For Android).
 - (B) Press the Setting Button → Connect New Device → Search Button → Click on "DGIDN" icon → Pairing is completed and the LED lights turn off (For iOS).
- *The pairing process will be completed automatically after the initial pairing, or repeat the above step if connection fails.
6. Fix the A5 Notepad on the EMR Effective Area and enjoy the new generation writing experience.
7. Press the Power Button for 5 seconds to turn off the power.

1. 首次做用MODENA Digital Notebook Folio，請先使用隨產品附帶的連接線為產品充電，充電完成後電源顯示燈會自動關閉。
2. 在智能手機或平板電腦的應用程式商店，下載 "IDNBook" 應用程式 (支援安卓及蘋果系統)。
3. 必須開啟智能手機或平板電腦的藍芽功能，進行配對。
4. 按下電源開關按鈕約5秒，以開啟MODENA Digital Notebook Folio，電源顯示燈亮起。
5. 開啟應用程式 "IDNBook" 進行藍芽配對。
 - (A) (只供安卓系統)：選擇 → 按 "DGIDN" → 輸入配對號碼: 870017 → 藍芽配對完成，操作顯示燈關上。
 - (B) (只供蘋果系統)：設定 → 連接新設備 → 選擇 → 按 "DGIDN" → 藍芽配對完成，操作顯示燈關上。
- *藍芽配對程序只需在初次使用產品是使用，再次使用時會自動完成藍芽配對，若自動配對失敗，可重覆以上步驟，再進行配對後使用。
6. 把A5拍紙簿置放於智能書寫感應區上，並固定位置，開始新世代手寫電子同步新感受。
7. 再次按下電源開關按鈕約5秒，以關閉MODENA Digital Notebook Folio，電源顯示燈熄滅。



MODENA

www.modena-stationery.com



FCC ID: 2AQN-L-MD1-MDNF
FCC ID: 2AQN-L-MD1-MDSP



Warning:
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Manufacturer: Tung Shing Stationery Manufacturing Limited
Address: B6, 27th Floor, TML Tower, 3 Hoi Shing Road, Tsuen Wan, New Territories, Hong Kong

©copyright by Tung Shing Stationery Manufacturing Limited. all rights reserved
Made in China

Product Specification 產品規格

Operating Principle 工作原理	EMR+Smart ink pen+Bluetooth 電磁感應原理+電子墨水筆+無線藍牙傳輸技術
Resolution 分辨率	0.012mm (1 inch (25.4mm)/2048LPI
Tilt Angle 筆傾斜角度	Relative Vertical Board Within ± 45° 相對垂直板面±45°之內
Positional Deviation Of Pen Tilted 筆傾斜時的位置偏差	±2mm
Response Height 入筆高度	5 to 10mm from the surface of the effective area 距離感應面5至10mm
Pressure Induction 筆感應壓力	>15g
Sample Rate 採樣速率	>138 pps
Pen Pressure Sensitivity 筆壓範圍	1024 levels @full scale 全筆壓1024級
Data Transfer Mode 數據傳輸模式	Bluetooth 4.0 (Power 6dBm max.) 藍牙 4.0 (最大功率 6dBm)
Writing Pad Power Supply 手寫板電源	Lithium Battery (3.7V, 950mAh) 5V === 500mA 鋰電池 (3.7V, 950mAh) 5V === 500mA
Power Consumption 手寫板耗電	<45mA
Pen Power Supply 電子筆電源	Lithium Battery (2.4V, 45mAh) 5V === 100mA 鋰電池 (2.4V, 45mAh) 5V === 100mA
Pen frequency band 電子筆頻率範圍	148.5KHz to 5MHz
Pen max. output power 電子筆最大輸出功率	-5 dBµA/m
Software version 軟件版本	1.0.01
Refills 筆芯	Ordinary Ballpen Core; 4.2.3 * 67mm. 普通圓珠芯; 4.2.3*67mm隨意更換

* This product APP is suitable for android 5.0 or above Or ios 8.0 or above.

*本產品APP適用於android 5.0以上 或iOS 8.0以上版本的手機

LED Indicator LED指示燈

Modena Digital Notebook Folio MODENA 智能記事本

Power ON 啟動	LED Light A & B turn ON 指示燈A和B亮起
Power Off (Auto OFF) 關機 (自動關機)	LED Lights A & B turn OFF (Auto Shut Down after 30 mins) 指示燈A和B熄滅 (開置30分鐘自動關機)
Battery Level ≤ 20% 電量 ≤ 20%	LED Light A will shortly start blinking blue 指示燈A閃爍
Bluetooth Paired 藍芽配對成功	LED Light B turn OFF 指示燈B熄滅
Charging Mode 充電時	LED Light A and B turn ON 指示燈A和B亮起

Digital Smart Ink Pen 智能記事筆

Power ON 啟動	LED Light C turn ON 指示燈C亮起
Power Off 關機	LED Light C turn OFF 指示燈C熄滅
Low Battery Indicated 低電量顯示	LED Light C changing Red color 指示燈C轉為紅燈
Charging / Battery Full 充電時 / 充電完畢	LED Light D turn ON in Red color / LED Light D turn OFF 指示燈D亮起紅燈 / 指示燈D熄滅

Default Setting 重置設定

If you are experiencing any issues with the equipment, we suggest you press the Reset Button to restore the default settings.

當使用本產品時發現有連接或任何不正常情況，可按重置鍵將本產品重設為原廠設定後再次使用。

Warranty 保養維修

TERMS AND CONDITIONS OF WARRANTY

The warranty period is only valid for 12 months from date of purchase. The warranty covers manufacturer's defects of the materials and workmanship under normal use. The warranty is limited to the repair or a new replacement of the product itself. Repair or replacement under the terms of the warranty does not provide right to the extension or renewal of the warranty period.

The product warranty does not apply:
A. To equipment or parts beyond the warranty period.
B. Due to improper use, handling or storage not compatible with the product's user manual & instructions.
C. Due to damage caused by user's own misuse (such as, scratches, drops, water damage etc.)
D. Due to any damage arising from external factors or natural disasters (such as earthquakes, floods, fires etc)
E. Wear and tear under normal circumstances, cuts or scratches, abnormal bending, damage caused by impacts or accidents
F. If the product in anyway has been previously repaired or dismantled by an unauthorized repairer.

Warranty service is only available in Hong Kong SAR. For other country, please kindly contact the local Authorized Distributor.
In case of disputes, we reserve the right to the final decision at any time.

保養條款

本產品有效保修期為自出售之日起一年內，在保養期限內正常使用和維護的情況下，無人為損壞，機器本身機件材料及功能出現問題，發生故障，無法正常使用，本公司將提供免費修理及更換零件。

本產品的保修不適用於：

- A. 設備、部件已超出保修期，無保養証及有效銷售發票
 - B. 用戶未按照說明書指南要求，錯誤操作及保管不當使設備故障或損壞
 - C. 因意外因素或人為原因 (包括如操作失誤、刮傷、跌落等) 導致的設備故障或損壞
 - D. 因自然災害等不可抗力 (如地震、火災) 原因造成的產品故障或損壞
 - E. 任何正常的耗損及身體壓痕、割痕、刮痕、不當的屈折、或因撞擊、意外引致的損壞
 - F. 非本公司授權修理者拆動過的
- 維修保養只適用於香港，其他地區請與當地的代理商查詢。如有任何爭議，本公司保留一切最終決定權。

Warning 警告

- Do not modify this product in any manner.
- Improper use of this product may result in product damage, excess heat, toxic fumes, fire or explosion.
- Be cautious of excessive drops, bumps, abrasions or other impacts to this product.
- Do not store this product in high temperature environment, including intense sunlight heat.
- Do not place this product in fire or other excessively hot environments.
- Do not expose this product to moisture or submerge it in liquid, keep it dry at all times.
- Do not attempt to open or disassemble the product.
- We, the manufacturer, are not responsible for any damages to any device incurred through use of this product.
- Children using this product should be under constant adult supervision

- 切勿以任何方式改裝本產品
- 不當使用本產品可能導致產品損壞、發熱、發出有毒煙霧、火災或爆炸
- 切勿讓本產品承受過度摔擊、碰撞、摩擦或強烈震動
- 切勿在高溫環境、強烈陽光下存放本產品
- 切勿將本產品扔進火中或放置於過熱的環境中
- 切勿將本產品暴露在潮濕環境或浸沒於液體中，經常保持乾爽
- 切勿嘗試拆開此產品
- 製造商將不會對因使用本產品而導致的任何損失承擔任何責任
- 小孩須由成人陪同及指導下使用本產品

Temperature Warning 溫度警告

Operating Temperature 操作溫度	0°C - 45°C
-------------------------------	------------