

THOMSON



START-UP GUIDE

Model No. VMHER04L328
FCC ID: J400GHER04

Important safety instructions

- This device must be used in a environment where the ambient temperature is between 32° and 104° F (0° and 40° C).
- Do not immerse the device in water or humidity, get away from liquids, if water is spilled, wipe up immediately and disconnect the unit immediately and wait until it is completely dry before turning it back on.
- Do not remove the device to under rainfall.
- Do not use strong solvents, liquid detergents or other chemicals on or near the surface of the device to prevent corrosion damage to the surface.
- Do not remove the device to strong magnetic fields.
- You can open the device through an approved X-ray distribution, however, it is recommended that you do not allow your device through the magnetic distribution portals or expose it to portable detectors.
- Do not clean any objects on the device.
- Do not place the device in an airplane or airside surface.
- Ensure that the device is protected from falls or other shocks that may damage it.
- Do not leave the device on or in a charger you, know, or any other part of you know to be a fire or electrical hazard.
- Turn off the unit before transporting or covering it with materials that do not allow for optimal ventilation.
- Do not use damaged power cords, accessories or other peripherals with your device.
- We recommend the exclusive use of the accessories (power supply, cables...) specified with the device.
- Use only original batteries. Replacing the battery with an incorrect battery can lead to an equipment fire.
- Do not disassemble, modify or repair the device yourself, otherwise the guarantee will be voided.
- Please use your equipment content responsibly to avoid data loss.
- Our company disclaims all responsibility for any loss or suppression of elements contained in the device due to improper use of the hardware or software, lack of maintenance or any other accident-related event.

CAUTION

WARNING: SHOCK HAZARD. DO NOT OPEN. RISK OF ELECTRIC SHOCK. NE PAS OUVRIRE.

CAUTION: TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK). IF THE UNIT REQUIRES SERVICE, CONTACT QUALIFIED SERVICE PERSONNEL.


- The light bulb (both symbol with an arrow in it) is equivalent to the light bulb intended to open the cover to the presence of an unqualified technician to disassemble or risk electric shock.
- In the documentation supplied with the device, the explanation point your equipment changes is provided to alert the user to the presence of important operating and maintenance restrictions.
- All full volume, prolonged listening on the portable audio device can damage the user's hearing.

Legal Disclaimer and Copyright Notice
This product has been manufactured and sold under the responsibility of Group SPT, THOMSON, and the THOMSON logo are trademarks of Technicolor (S.A.) or its affiliates and are used under license by Group SPT.
Any other product, service, company, trade or product name and logo mentioned herein are neither endorsed nor sponsored by Technicolor (S.A.) or its affiliates. Intel, Intel Atom and the Intel Atom logo are trademarks of Intel Corporation in the U.S. and/or other countries.
All other trademarks and logos are property of their respective owners unless indicated otherwise.
Made in China.
© 2014 Thomson Information Corp.
USA/Canada, All Rights Reserved.
SPT logo
NEW YORK, NY 20020

Package contents

- 1 x THOMSON laptop
 - 1 x detachable keyboard
 - 1 x charger
 - 1 x document set
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not properly used and in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.**The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.**
FCC ID: J400GHER04

Présentation de l'appareil

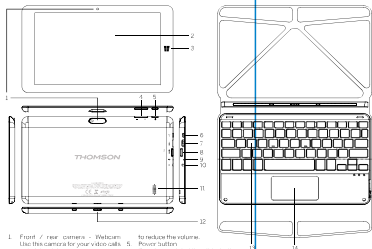

- Front / rear camera - Webcam
- Microphone
- Touchpad
- Microphone
- Microphone
- Microphone
- Microphone
- Microphone
- Microphone
- Microphone
- Microphone
- Microphone
- Microphone
- Microphone
- Microphone

- Hard disk, printer, The use of a USB Type-B device to connect the printer to the laptop (USB adapter (optional)) will be required to connect some printers. Print: Min: 1000 x 1000 dots, max: 12000 x 12000 dots (depending on the model). This port allows you to connect your tablet to an HDMI compatible device such as a TV, monitor or projector.
- Micro SD card reader always you to read or write on micro SD or micro SDHC memory cards.
- The microphone lets you use your laptop's voice commands, make an audio call, or make audio recordings.
- Headphones / microphone jack Use this port to connect external speakers or headphones to your tablet. You can also connect headphones with an external microphone.
- Speaker
- Headset connector
- The camera views the tablet to be connected to the keyboard
- Keyboard
- Touchpad
- The touch pad lets you enjoy the features of a mouse. It offers an intuitive interface thanks to the multi-gesture features.

Starting up

- Charge the battery of your device**
 - Plug the power adapter into a grounded electrical outlet.
 - Note: Charge your Thomson device before using it for the first time.**
- WARNING!** Please read the following instructions for the battery of your THOMSON device carefully:
 - Only a technician authorized by Thomson is authorized to remove and handle the battery.
 - Your Thomson battery may present a fire or both hazard if removed or disassembled.
 - Please observe the information on the battery warning label to prevent fire or explosion.
 - There is a risk of explosion if the battery is recharged by an incorrect method.
 - Do not throw the battery into the fire.
 - Do not attempt to disassemble the battery or reassemble the battery.
 - Store the battery in a cool place.
 - The battery and its components must be recycled or disposed of properly.
 - Keep the battery and its components out of the reach of children.
- Switching on / off your device**
 - Turn on your device by pressing the power button for a long time.
 - Turn off your device:
 - Open the Start menu.
 - Press the Sleep button.

Windows 10

Please find the Windows 10 manual on the Microsoft website:
<https://support.microsoft.com/en-us/products/windows10-windows-10>

Windows 10 help

- Home
- Getting started
- Windows 10
- Windows 10 updates
- Windows 10 apps
- Windows 10 settings
- Windows 10 security
- Windows 10 privacy
- Windows 10 accessibility
- Windows 10 network
- Windows 10 storage
- Windows 10 devices
- Windows 10 troubleshooting
- Windows 10 support

Windows 10 help

Windows 10 updates

Windows 10 apps

Windows 10 settings

Windows 10 security

Windows 10 privacy

Windows 10 accessibility

Windows 10 network

Windows 10 storage

Windows 10 devices

Windows 10 troubleshooting

Windows 10 support

THOMSON

Discover more features on the website:
<http://www.mythomson.com>