

# Wireless Headphones

Model: RX-650, NV-06055

## Instruction manual

### PACKAGE CONTENTS

Wireless Headphones  
USB Charging Cable  
Instruction Manual

### KEY FEATURES

Compatible with Bluetooth enabled devices  
FM Radio  
Built-in microphone  
Volume control & media controls  
Plays song with micro SD card (not included)

### SAFETY INSTRUCTIONS

Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.

Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and / or injury to yourself and damage to the unit.

Do not use the unit if it has been dropped or damaged in any way.

Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.

Do not puncture or harm the exterior surface of the product in any way.


Do not use this unit for anything other than its intended use or purpose. Doing so may damage the device.

This product is not a toy. Keep out of reach of children.

Do not use the unit at excessive levels as this may damage hearing.

Do not expose batteries, battery pack, or batteries to excessive heat, such as direct sunlight or open flame.

### FEATURES / PARTS

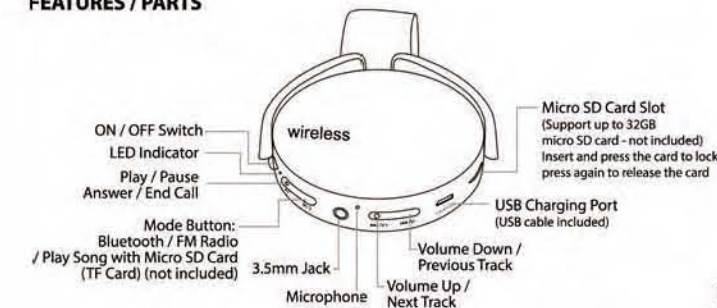

P 1

### CHARGING THE HEADPHONES

Turn off the headphones before charge.

The headphones come with a built-in rechargeable battery. Before using it for the first time, we recommend you charge the battery fully. Only use the supplied USB cable to charge the headphones.

Connect the USB cable to a computer USB port and the USB plug to the charging input on the headset. The red LED light will illuminate while the headphones are charging.

When the battery is fully charged, the LED light will turn off automatically. Disconnect the headset at this point. The headphones will then be ready for use. When the battery is low, it will have a warning "Battery is low". When this happens, charge your headset.

### PAIRING THE HEADPHONES

1. Ensure the headphones are turned off. If they are not, please turn off the headphones first before pairing.
2. Turn the headphones on, the LED indicator will keep flashing blue and red. This will indicate your headphones are now in pairing mode.
3. Place the headphones and the Bluetooth device to which you would like to pair it within the operating distance. We recommend keeping the two devices no further than 10 feet apart.
4. Ensure Bluetooth is enabled on your phone or music device. Refer to the manufacturer's instructions for how to enable Bluetooth on your device.
5. Once you have activated Bluetooth on your device, select the headphones "NV-06055" or "RX-650" from the list of available Bluetooth devices.
6. If pairing is unsuccessful, turn off the headphones first and repeat the aforementioned steps. Once you have paired the headphones with a device, the headphones will remember this device and will pair automatically when the device's Bluetooth is activated and in range. You do not need to re-pair any previously connected devices.

Note: Some phones or devices request a passkey or pin, enter 1234 or 0000 as your pin or passkey.

### LISTENING TO MUSIC

Once the headphones are paired to your device, you can stream music wirelessly to the headphones. Select the track you wish to listen to on your device to listen via headphones. If you encounter any problems while streaming, please refer to your device's user manual.

### LISTENING TO MUSIC THROUGH MICRO SD CARD (TF CARD) (NOT INCLUDED)

1. Turn off the headphones.
2. Prepare MP3 song in your micro SD card. (only support MP3 format file.)
3. Insert the card into the card slot correctly.
4. Turn on the headphones, it will start to play the music automatically.
5. Turn off the headphones before remove your micro SD card.

P 2

### USING HEADPHONES WITHOUT BLUETOOTH

Your headphones have a built-in audio input which will allow you to listen to music from non-Bluetooth devices using a 3.5 audio cable (not included).

1. Turn off the headphones.
2. Insert one end of the audio cable into the headphones audio input.
3. Insert the other end into your device's headphone jack.
4. Power on your device and begin playing music.

Microphone and function key may not be supported in this mode.

### LISTENING TO FM RADIO

1. Turn on the headphones and press "M" to switch the mode.
2. Press the play button. It will search the channel with fast flashing blue LED indicator automatically. Blue led indicator will become normal flashing after it finished.
3. If it does not receive an FM station, please move to other place or open area to get stronger radio signal and redo step 2.
4. You can short press V- or V+ button to change the channel. Long press for Volume down or up.

### MANUAL KEY FUNCTIONS

Your headphones are equipped with a few shortcut keys.

Please note the following functions.

1. Answering a Call  
When a call comes in, you will hear a ring tone. Press the Play / Pause Button to answer the call. Press the Vol- / Vol+ buttons to adjust volume on your call.
2. Ending a Call  
During talking, press the Play / Pause Button again to end or disconnect the call.
3. Redial  
To redial the last number you called, press the Play / Pause Button 2 times.
4. Reject a Call  
When receiving a call, press and hold the Play / Pause Button to reject it.
5. Volume Control  
When listening to music or on a call, you can adjust volume by holding the Vol + or Vol - button accordingly.
6. Next Track  
Press the V+ button to skip the current track.
7. Previous Track  
Press the V- button to go back to the last track played.

P 3

### CARE AND MAINTENANCE

- Do not expose the unit to liquid, moisture or humidity to avoid damage to the product's internal circuitry.
- Do not use abrasive cleaning solvents to clean the unit.
- Do not expose the unit to extremely high or low temperatures as this will shorten the life of the electronic device, destroy the battery, and/or distort certain plastic parts.
- Do not dispose of the unit in fire as they may explode or combust.
- Do not expose the unit to contact with sharp objects as this will cause scratches and damage.
- Do not let the unit fall from high places, as doing so may damage the internal circuitry.
- Do not attempt to disassemble the unit.

### TROUBLESHOOTING

1. If the Bluetooth does not function or powers off after powering on, the headset is low in power and needs to be recharged.
2. Headset and pairing device need to be within 16 feet of each other with no major obstacles in order to pair.
3. If the device paired successfully, but there is not sound,
  - a. Check to make sure the device and headset are connected correctly.
  - b. Check whether volume is set at minimum.
  - c. Delete all paired Bluetooth devices from your device and pair the headset again.
4. Your headset is making unwanted noises:
  - a. Make sure the devices are within effective operating distance and no obstacles are blocking the signal. If anything is blocking the signal, the sound may distort or be fragmented in your headset.
  - b. The constant beep may be the low battery warning.
5. Some mobile devices support Bluetooth communication, but do not support Bluetooth music streaming.

### BATTERY MAINTENANCE

1. In order to prolong battery life, turn off your headset when not in use.
2. If the headset is not in use for a long period of time, store it in a dry, safe location. The headset will need to be charged every 2 months to maintain battery life.

SPECIFICATIONS	
Bluetooth:	V 4.2
Operation Range:	Up to 33ft (10m)
Frequency:	100 Hz - 15 kHz
Impedance:	32 ohm

P 4

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

MANUFACTURE : SHENZHEN SHENYU ELRCTRONIC TECHNOLOGY CO., LTD  
MADE IN CHINA

P 5



Company: Max Sales Group

Name / Position: Jiten Kalwani/CEO

Tel: 323.722.4200 Fax: 323.722.4700

Mail: [info@maxsalesgroup.com](mailto:info@maxsalesgroup.com)

Address: 2331 S.Tubeway Ave. Commerce CA 90040 US