

未注公差尺寸	
<200	±1
200-500	±2
500-1000	±3
>1000	±5

版本	更改处数	修改内容	日期	签名	备注

Isometric View

Front View

1

CUTI
Intelligent Cash Drawer
CX-3001

Product Function Introduction
User Manual for CX-3001 Intelligent Cash Drawer

Emergency Opener (three bars) - No open

Lock

2

Method of Operation
How to Open and Lock the Cash Drawer

Manual Open Electrically Online Locked

3

The lock has three functions: electrically online, lock and manual open. Lift the lock and on the end of the cash drawer to access the emergency opener when needed.

Method of Operation
Drawer Removal (588C)

Usage of Cash Tray (588C)

4

Method of Operation
Drawer Removal (585C)

Usage of Cash Tray (585C)

5

Method of Operation
FCC Compliance

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1)This device may not cause harmful interference, and
(2)This device must accept any interference received, including interference that may cause undesired operation.
2.Changes or modifications not expressly approved by the party responsible for compliance could void the user's ability to operate the equipment.
NOTE:This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.
The distance between user and products should be no less than 20cm.

6

70 491 891 781" data-label="Complex-Block">

Method of Operation
Interfaces

Rear Side View

Rear View

7

Method of Operation
Interfaces

RS232 Interface
Version II

RS485 Interface
Version III

8

Method of Operation
Interfaces

RS485 Interface
Version IV

9

Method of Operation
Installation

The cash drawer is fitted with a standard 6-pin RJ11 plug for direct connection to any (POS/POS Printer, or POS equipment conforming to the Epson standard. (See figure below), when the printer finishes printing a receipt, it opens the cash drawer automatically.

Connection:

Interface from drawer Cash drawer Epson compatible POS Printer Receipt Printer

 
10

Method of Operation
Maintenance

The cash drawer slide should be periodically cleaned and lubricated. Frequency is dependent on use and the environment, but typical recommended frequency is every three months. Using a dry, lint free cloth, wipe out the old grease and debris from the inner and outer slides. Do not use water or any type of liquid cleaner. Using a clean applicator, apply a thin layer of lithium based bearing grease to the inner and outer slides. Cycle the slides several times to properly coat the Polyurethane rollers and to spread the grease evenly.

CUTI
Intelligent Cash Drawer

Perfection By Change



CASH DRAWER

尺寸：单面 105*140MM 展开 525*140MM
印刷：单色 正反面印刷
材质：157G铜板纸

厦门美勒科技有限公司				重量	数量	比例	157G铜板纸		说明书
设计	傅小伙		标准化				版本	视角	CX300-1
审核			批准					P	
工艺						1.0		共1页	第1页