

印刷品印刷要求

机型名: UDG50SR684UN 物料号: 39091233 设计师:刘昕 销往地:外销 日期: 2024-2-23
1004 GBOM

尺寸: 142x210mm

 
材质: 材质:封面封底128G铜版纸彩色印刷, 表面过PP膜; 内页70克书写纸双面黑白印刷;
骑马钉装订



RCA

TC-LE50K-GO2401

ULTRA HD SMART TV

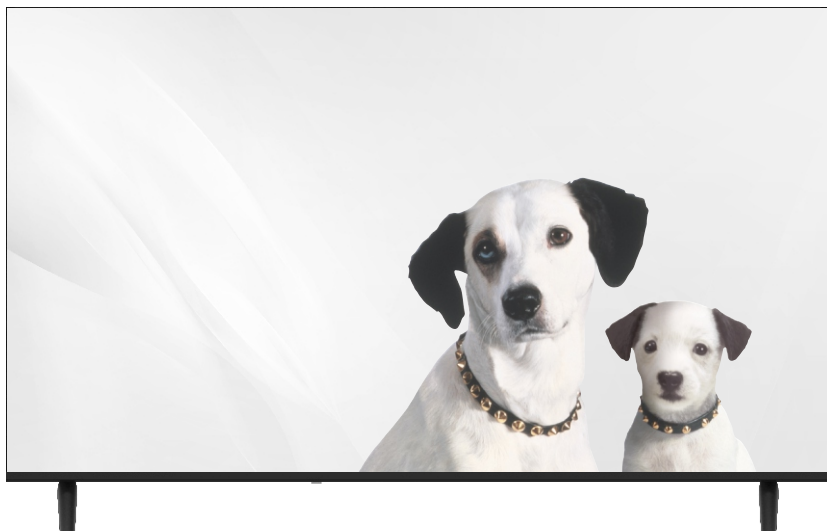

Quick Start Guide

Please read this manual carefully before TV operation.
Retain it for future reference.

PREFACE

1. Read this Quick Start Guide before starting Set-up.
2. Then, carefully follow the Instructions, heeding all Warnings.
3. Do Not remove the TV back cover or block the TV ventilation openings.
4. Do Not use the TV near water or a heat Source.
5. Do not pinch or cut the Power Cord.

Note:

The product and illustrations in this user's manual is only for explanation purposes and may vary depending on model.

WARNING

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls

If your existing television set is being retained and relocated, the same considerations as above should be applied.

The plug or appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

What You Will Need for Set-up (Not Included)

- Philips Head Screwdriver
- Internet Connection (Needed for Smart TV Streaming)
- Wireless Router (Needed for Smart TV Streaming)
- Computer, Tablet or Smart Phone (Needed for Smart TV Set-Up)

Safety information



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



ATTENTION: RISQUE DE CHOC ELECTRIQUE-NE PAS OUVRIR



This equipment is a Class II or double insulated device. It has been designed so that it does not require safety ground connection.

-This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

Caution: To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.

- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.



This symbol indicates important instructions accompanying the product.



This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.

WARNING

To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. The apparatus must not be exposed to dripping or splashing. Objects filled with liquids, such as vases or drinking glasses, must never be placed on the apparatus.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel.



Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15. This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance (www.eiae.org).
16. Minimum 5cm around the apparatus for sufficient ventilation;
17. Battery should be recycled or disposed as per state and local guidelines;
18. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.;
19. No naked flame sources, such as lighted candles, should be placed on the apparatus.

WARNING: The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

2. any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

 
Package Contents



TV x 1pcs



Quick Start Guide x 1pcs



AAA Batteries for Remote x 2 pcs



Remote Control x 1pcs


 


Table Stands x 2 pcs

 

Screws for Table Stands

Attach the Table Stands

How to assemble the stand

If you need to remove or assemble the stand please read the following instructions.

- Before attaching/detaching the stand, make sure to turn off the TV.
- Before performing work, spread cushioning over the base area to lay the LED TV on. This will prevent it from being damaged.

 
Assembling instruction:

Put the television on the table, fix the stands with screws given in the carton.

Step1: Fasten the base assembly with screws given in the carton.


Step2: Insert the assembled base into the hole, take out screws provided with TV set and tighten them into screw holes.

- To disconnect the stand from the TV, perform the above steps in reverse order.

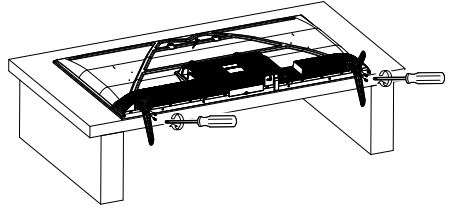


Front panel

 The buttons on the lower panel control your TV's basic features, including the on-screen menu. To use the more advanced features, you must use the remote control.

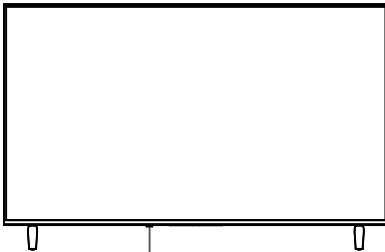

Remote Control Sensor

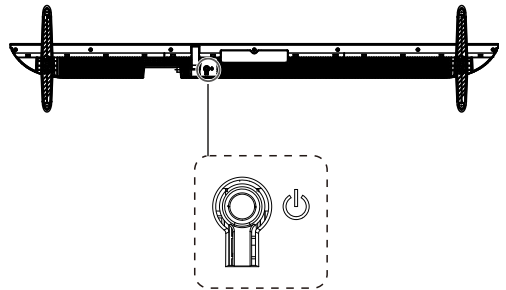 

POWER(In the standby mode, press to turn on the TV.
In the boot state, short press to shut down.)

Specifications

Model	TC-LE50K-GO2401	
Display size	50" Diagonal (max.)	
LED panel resolution	3840x2160	
Speaker output power	≥5Wx2	
Power supply	110-240V~, 50/60Hz	
Power consumption	110W	
Standby consumption	≤1W	
Antenna input	75 ohms	
Controller power	DC 3V (Two AAA size batteries)	
Dimensions (LxWxH)	TV with stand	1111x242.5x709.2mm
	TV without stand	1111x78.2x640.4mm
Weight (Net weight)	TV with stand	7.7kg
	TV without stand	7.6kg
Work temperature	0°C-40°C	

 
NOTES:

- Design and specifications are subject to change without notice.
- Weight and Dimension shown are approximate.

Connect The TV

 

 


 


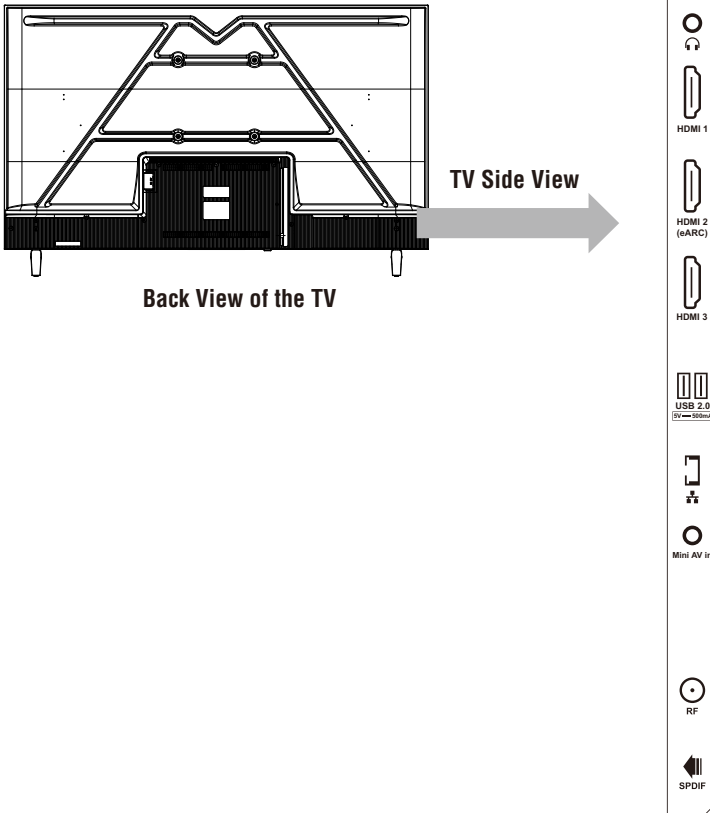


 




1. Insert the female end of the Power Cord into the back of the TV.
Then carefully plug the standard AC plug end into a 110-240V AC outlet.
2. If you are connecting other devices to the TV, utilize the appropriate optional cables and connect to the appropriate ports on the back or side of the TV.

Location of Connections



Note:

The product and illustrations in this user's manual is only for explanation purposes and may vary depending on model.

TV label		Cable	External Equipment
ANT/CABLE			 Antenna 
HDMI			VIDEO EQUIPMENT   Camcorder
AV IN	VIDEO	 Yellow	
	L	 White	
	R	 Red	
USB			
SPDIF			 Audio Receiver
HEADPHONE			
LAN			

 
The TV can be connected to the following devices: Cable Box, Satellite Box, Antenna, Video Game, Stereo System, Sound Bar, Headphones, Blu-ray Player, DVD Player, VCR, Streaming Box or Stick, Camcorder, etc.

Prepare The Remote Control


Remove the battery cover and insert the provided batteries. Then replace the battery cover.

Installing Batteries



- 1** Open the battery compartment cover on the back side.

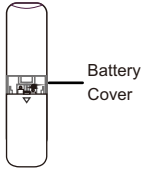

 - 2** Insert two 1.5V AAA size batteries in correct polarity. Don't mix old or used batteries with new ones.

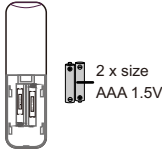

- 3** Closed the cover.

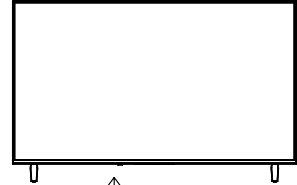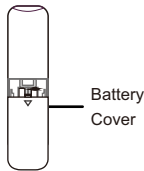  


- ✦ The remote control needs to be used within a range of 8 meters in a straight line and 6 meters in a controlled angle.
- ✦ Put the used batteries into the recycling bin since they can negatively affect the environment.
- ✦ Do not place anything (such as soundbar) near remote sensor to avoid interference.

Note:

- 1) Batteries should last approximately one year under normal use (actual use will vary).
- 2) If the TV will remain inactive for an extended period of time, remove the batteries from the remote control to avoid possible damage due to leakage.
- 3) Do not mix old and new batteries or different types of batteries.
- 4) Do not throw batteries into fire or water.
- 5) The batteries (battery pack or batteries installed) should not be exposed to excessive heat such as sunshine, fire or the like.

Remote Buttons

 1. **INPUT:** Press to open the input source list.
2. **POWER:** Turn the TV on and off.
3. **Profile:** Switch profile.
4. **Google Assistant:** Open Google Assistant.
5. **Settings:** Access the settings (direct or through the dashboard in GTV) from any place in the system.
6. **Arrow buttons ▲▼◀▶:** Use to select on-screen menu items and change menu values.
7. **OK:** Confirms selection.
8. **BACK:** Return to the previous menu.
9. **Guide:** Open Live TV EPG.
10. **HOME:** Display the HOME page.
11. **•••• Button:** Press to open virtual keyboard in DTV source.
12. **LIST:** Press to display the channel list.
13. **INFO:** Press to display the channel information.
14. **VOL+/- :** Press these buttons to adjust the volume.
15. **MUTE:** Press this button to cut off the sound of the TV set temporarily, press again to resume.
16. **CH ▲/▼ :** Press these buttons to change channel upward or downward.
17. **NETFLIX:** If network connects, press this key to view NETFLIX directly.
18. **YouTube:** If network connects, press this key to view YouTube.
19. **Disney+:** If network connects, press this key to view Disney+.
20. **Prime Video:** If network connects, press this key to view Prime Video.

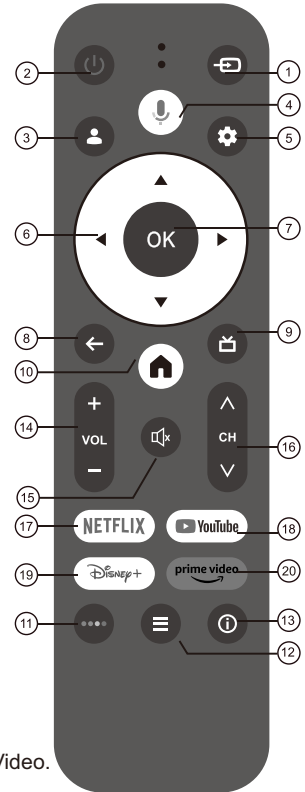

SET-UP THE TV (Using the Remote Control)

Initial Setup

1. Press the Power Button at the Top of the Remote.
Note: TV Controls on the TV are located on the bottom or on the side of the TV.
(If the TV is in Boot State, a long press on the Power Button under the TV might be necessary.)
2. You will need to Pair the Remote with the TV firstly. After the code is successful, you can use the Bluetooth remote control to operate the TV.
3. Press ▲/▼ to select the system language and press OK to confirm the language.
4. Press ▲/▼ to set up Google TV which need to sign in google account for Google service, or basic TV which not need to sign in google account.
5. Scan setup code to download Google home app on your phone to set up or press ▲/▼ to set up on TV.
6. Press ▲/▼ to select the wifi to connect, press OK and enter the password to confirm the connection is successful.
7. By accepting the Google Terms of Service to improve the product experience, select "Accept" to accept this condition.
8. Once the Set-up is finished, to exit Google TV and access another component such as a Cable Box, press the Input button.

Navigating the ON-SCREEN MENU

In the HOME interface, press the ▲/▼/◀/▶ key to select the icon of the circular settings menu, and press OK to adjust.

After finishing your adjustment, press BACK button to return to the previous menu.

Trouble Shooting

Having trouble?

Don't worry, it's usually an easy fix.

After Auto Tuning only some channels are available	Check your area is covered by Digital Video Broadcasts. Try re-tuning or manually tuning missing channels. Check that you are using the correct antenna type.
Channel cannot be selected	Check if the channel has been blocked in the main menu settings.
USB not playing	Please check connecting USB cable and power supply is connected. Hard drive has not been formatted. Please make sure USB disk is compatible and the multimedia data formats are supported.
Picture is distorted, macroblock, small block, dots, pixelization, etc	Compression of video contents may cause distortion especially on fast moving pictures such as sports and action movies.
Noise from speaker	Check cable connections, make sure a video cable is not connected to an audio input. Low signal level may cause sound distortion.
TV turns off automatically	Check if the Off Timer is set to On in the Setup menu. Sleep Timer may have been enabled. If there is no signal for about 10 minutes from an input, the TV will turn off.
TV turns on automatically	Check if the On Timer is set to On in the Setup menu.
Picture is not shown in full screen	Black bars on each side will be shown on HD channels when displaying SD (4:3) contents. Black bars on Top & Bottom will be shown on movies that have aspect ratios different from your TV. Adjust picture size option on your external device or TV to full screen.

Troubleshooting Tips

Your TV

1. Unable to connect network.(ONLY FOR SMART TV)

- Be sure the current network is normal and the password correct.
 - Disconnect the former network and re-start the TV, try to connect the network again.
-

2. Remote control is not working.

- Replace the remote's batteries if necessary and make sure that you're using it within its standard operating range.
-

3. No sound.

- Increase the volume.
 - Check whether the mute function has been activated on the Remote Control.
 - Make sure the audio device is working properly.
-

4. No picture.

- Make sure the unit is plugged in and turned on.
 - Make sure that the ATV mode is selected.
 - Try a new channel to check for possible station trouble.
 - Make sure the antenna is connected properly.
 - Make sure the antenna or video source device is working properly.
 - Make sure all cables are firmly connected.
 - Check for local interference.
-

5. Unable to turn on TV panel.

- Press panel function button or use remote control to turn on TV panel, to eliminate remote control damage or machine damage.
-

