 


120mm

正面

155mm

hugolog

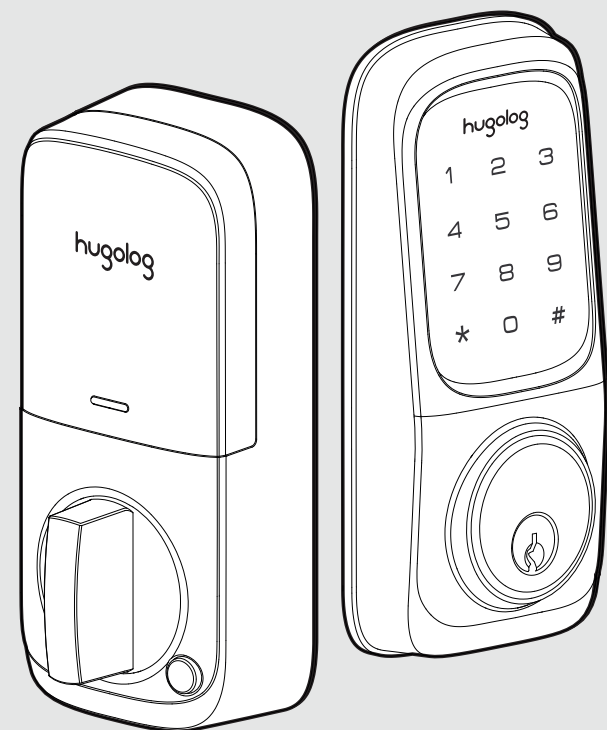

•HCD01 Programming Instructions

Information and Safety Warnings

- Failure to follow these instructions could result in damage to the product and void the factory warranty.
The accuracy of the door preparation is critical for the proper functioning and security of this product.
This lockset is designed to provide the highest standard of product quality and performance.


(▲ NOTE: Do not load batteries until lock is completely installed.)

- 1. Master PIN Code (4-10 digits): The default master pin code is "12345678", It's required that you change it to a code of your own before programming.
2. User PIN Code (4-10 digits): A total of 20 user codes (and one temporary one-time user code) may be programmed.
3. Neither master nor user PIN codes support the following combination of numbers.

Table listing prohibited PIN code sequences: Forward number sequence, Backward number sequence, Repeat number sequence, and sequences containing existing code sequences.

Parts Illustrations

Table with columns: ITEM, SPECIFICATIONS, REMARKS. Lists Exterior Assembly, Interior Assembly, and Battery specifications.

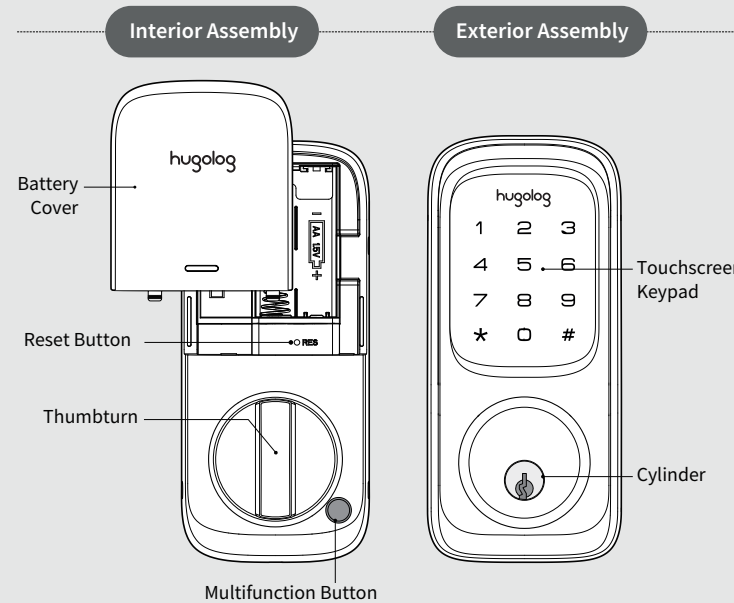

(▲ CAUTION: Master and User PIN code have 4-10 digits, the default master PIN code is 12345678. Please change it prior to programming of the lock)

Definitions

- Master Code: Required for programming and feature settings.
Auto Unlock: Automatically locks the deadbolt 30 seconds after unlocking.
Wrong Entry Limit: After 10 unsuccessful attempts at entering a valid PIN code, the unit will shut down for 3 minutes.
Silent Mode: The beep sounds when pressing keypad can be muted.
Vacation Mode: This is a security feature for you when you are leaving your home for vacation or long trip.
Unlock with Fake Code: User can prevent PIN code from exposure by entering random digits before after PIN code.
Privacy Mode: When the privacy mode is activated, the door cannot be opened from outside except with master PIN code.

背面

Factory Default Settings

Table with columns: SETTINGS, FACTORY DEFAULT. Lists Master code, Auto lock, Silent mode, Wrong code entry limit, and Shutdown time.

Restore factory default settings

- 1. Keep your lock in "unlock" status, insert 4AA batteries in battery pack.
2. Use the provided reset pin to press and hold the reset button for more than 5 seconds until hearing beep sound.
3. If reset is successful, the bolt will extend on its own to learn the orientation of the door.

Troubleshooting

- The lock can't be locked or unlocked by keypad?
The keypad doesn't respond when touched (no lights and no beeps)?
The hugolog logo on top of the keypad keeps flashing red?
Forgot the Master or user PIN codes

How to use?

- Unlock the door from outside: Master/User PIN Code, Backup Key.
Lock the door from outside: One-touch Locking, Enable Auto-lock.

- Unlock the door from inside: Rotate the thumbturn to vertical position.
Lock the door from inside: Rotate the thumbturn to horizontal position.

IC Warning

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation.

 
This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Lock Operation

The default master code is 12345678. It's required that you change it to a code of your own before programming.

When setting is unsuccessful, the indicator light will flash red.

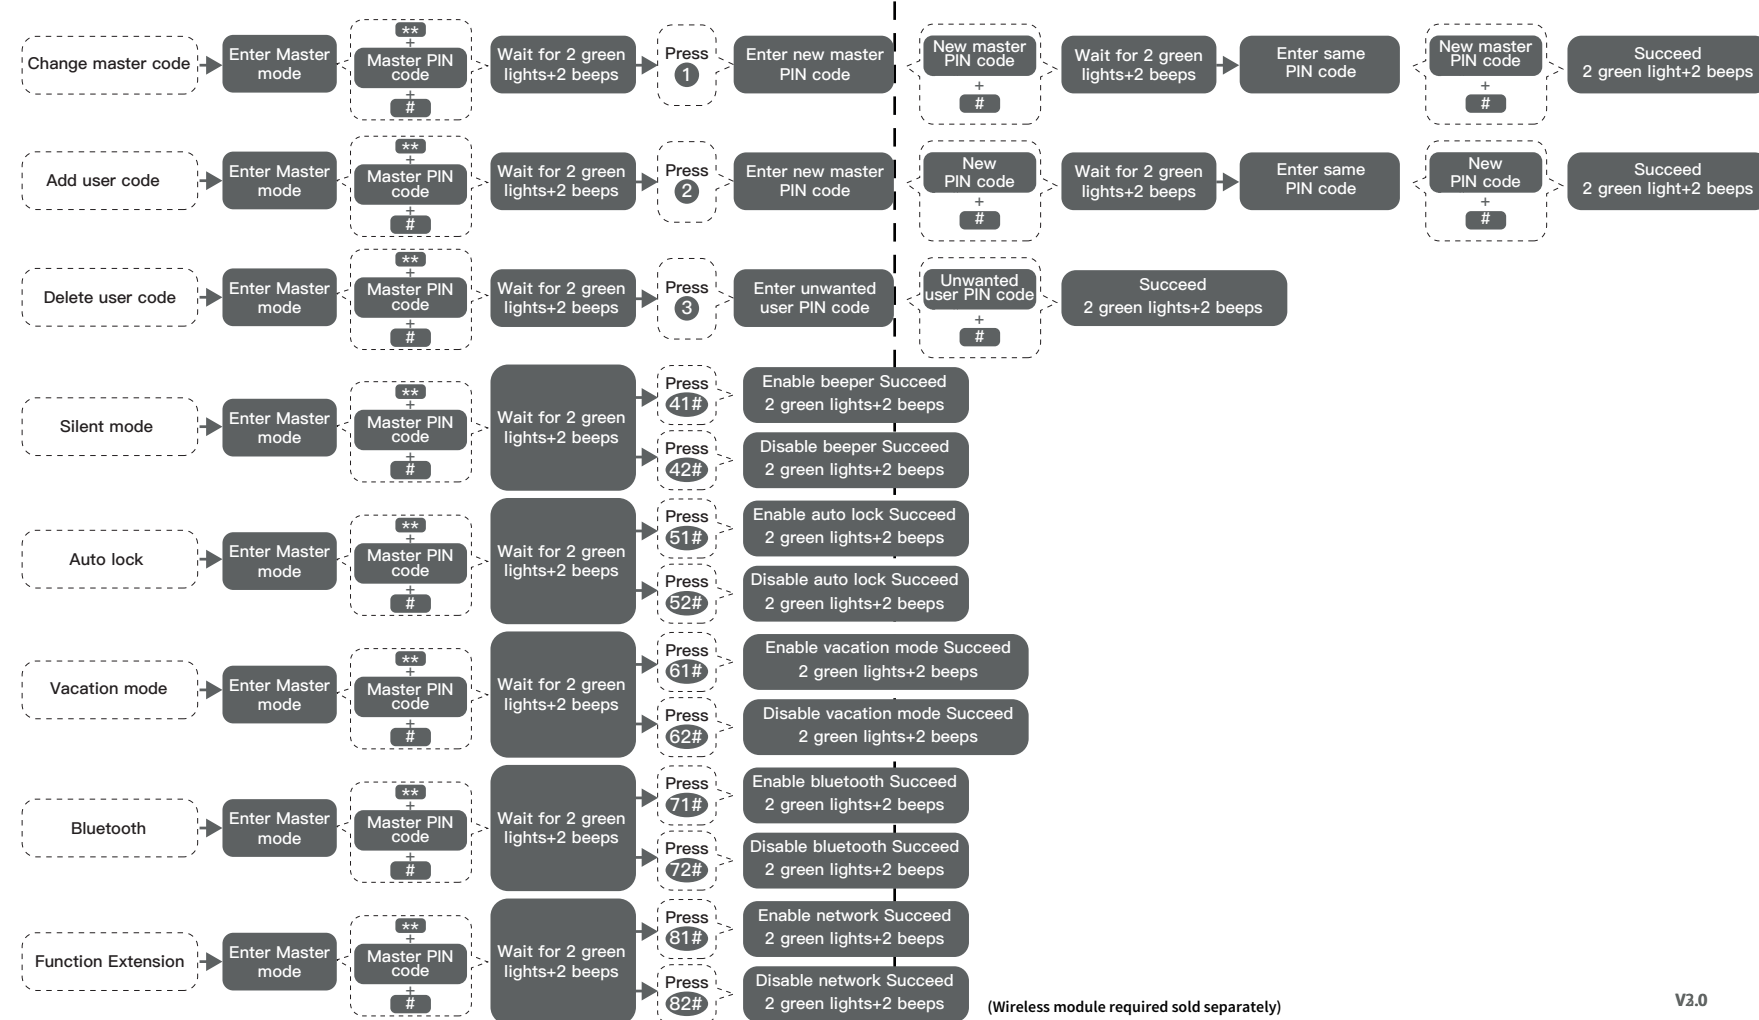

(Wireless module required sold separately)

V3.0

折后尺寸: 120x155mm

工艺: 折页

材质: 60g双胶纸

颜色: 单黑印刷

----- 折线

————— 切割线