


**HighQ**  
Learning Tab

Play Learn Create

Models: ELT0802H  
ELT0704H

**Quick Start Guide**  
**Guide de Démarrage Rapide**  
**Guía de Inicio Rápido**






**Before first use,  
we recommend  
charging the  
tablet for 6 hours.**

## 1. Turn Power On

Press and hold the **POWER** button for 3 seconds until the lighted screen appears.

## 4. Google Account

Sign in to your Google account or create a new one (see p.# of the User Guide for more details).




**Avant la première  
utilisation, nous  
recommandons  
de charger la  
tablette pendant  
6 heures.**

## 1. Mettre sous tension

Appuyez sur la touche **POWER** et maintenez-la enfoncée pendant 3 secondes jusqu'à ce que l'écran s'allume.

## 4. Compte Google

Connectez-vous à votre compte Google ou créez-en un nouveau (voir p.7 du Guide de l'utilisateur pour plus de détails).



**Antes del  
primer uso,  
recomendamos  
cargar la tableta  
por 6 horas.**

## 1. Encienda la tableta

Presione y sostenga el botón de **ENCENDIDO** durante 3 segundos hasta que aparezca la pantalla iluminada.

## 4. Cuenta de Google

Ingrese a su cuenta de Google o cree una nueva (vea la p.7 de la Guía de Usuario para obtener más detalles).

## 2. Language Selection

1. Scroll through the languages and highlight your preference.
2. Tap **Next**.

## 5. Kidomi Account

Set up a Kidomi account and get access to hundreds of games and reading activities.

## 3. Connect to Wi-Fi

1. Tap your Wi-Fi Network name.
2. If your Network has a password you will be prompted to enter it.
3. Tap **Connect**.

## 6. Have fun!

We hope you enjoy playing and learning on your new HIGHQ™ Learning Tab.

## 2. Sélection de la langue

1. Faites défiler les langues et mettez en surbrillance la langue souhaitée.
2. Appuyez sur Suivant.

## 5. Compte Kidomi

Créez un compte Kidomi et accédez à des centaines de jeux et d'activités de lecture.

## 3. Se connecter au Wi-Fi

1. Appuyez sur le nom de votre réseau Wi-Fi.
2. Si votre réseau a un mot de passe, vous serez invité(e) à le saisir.
3. Appuyez sur **Connecter**.

## 6. Amusez-vous!

Nous espérons que vous aimerez jouer et apprendre sur votre nouveau HIGHQ™ Learning Tab.

## 2. Selección de Idioma

1. Desplácese por los idiomas y seleccione el idioma de su preferencia.
2. Toque Siguiente.

## 5. Cuenta Kidomi


Configure una cuenta Kidomi y obtenga acceso a cientos de juegos y actividades de lectura.

## 3. Conectarse a Wi-Fi

1. Toque el nombre de su red de Wi-Fi.
2. Si su red tiene una contraseña, se le pedirá que la ingrese.
3. Toque Conectar.

## 6. ¡Diviértase!

Esperamos que se divierta jugando y aprendiendo en su nueva HIGHQ™ Learning Tab.

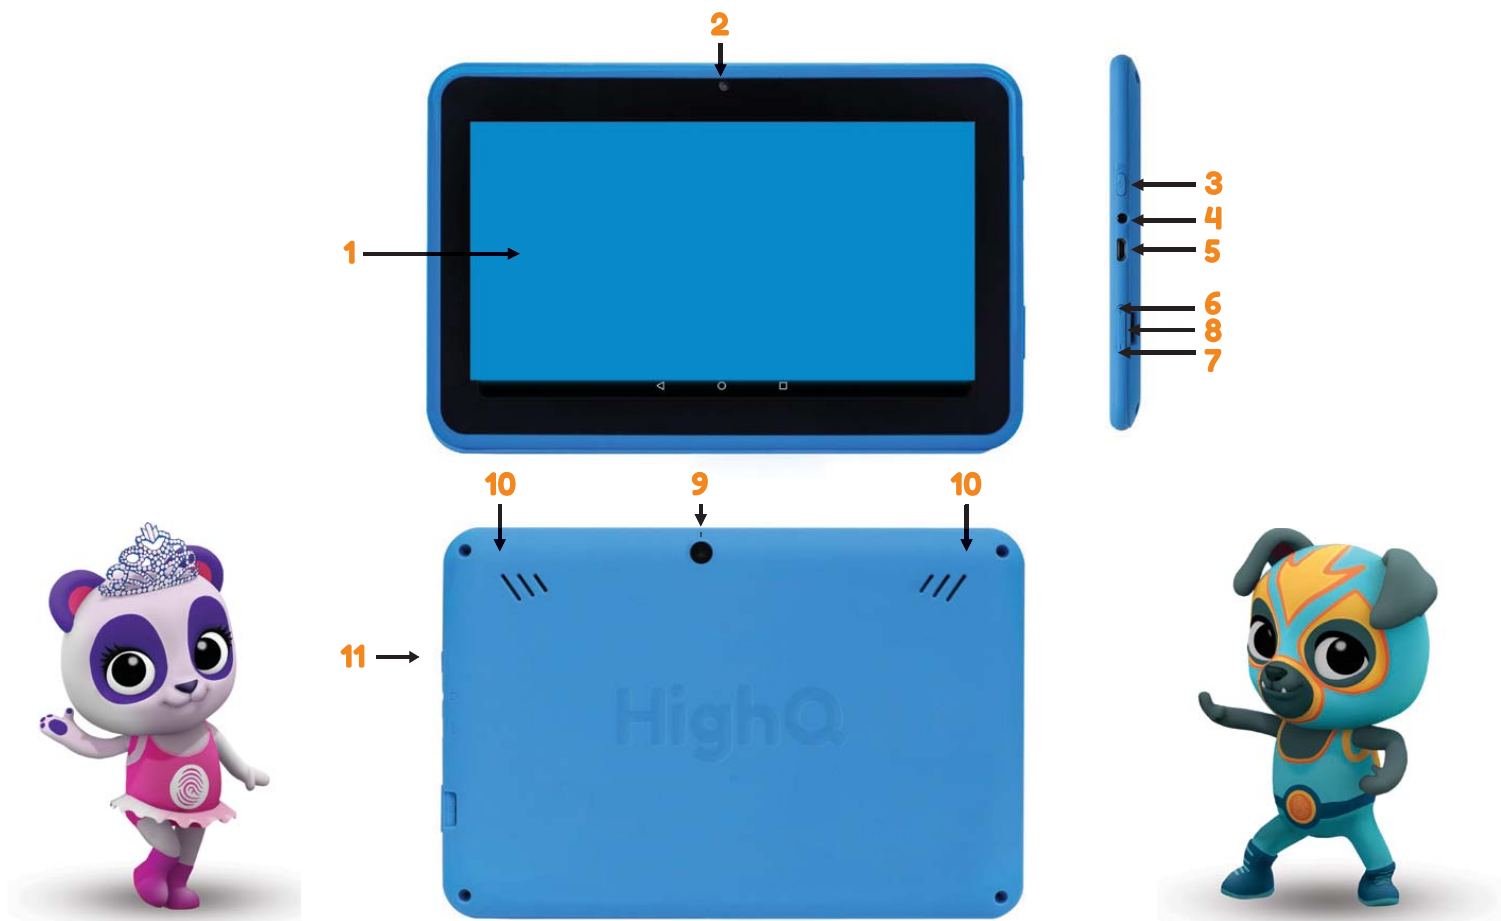

## Buttons and Ports

- |                   |                   |                              |
|-------------------|-------------------|------------------------------|
| 1. Touch screen   | 5. Micro USB port | 9. Rear camera               |
| 2. Front camera   | 6. Volume up      | 10. Speaker                  |
| 3. Power button   | 7. Volume down    | 11. Mic (under tablet cover) |
| 4. Headphone jack | 8. Micro SD slot  |                              |

## Touches et Ports

- |                                |                           |   |
|--------------------------------|---------------------------|---|
| 1. Écran tactile               | 5. Port micro usb         | 9. Caméra arrière                                 |
| 2. Caméra avant                | 6. Augmentation du volume | 10. Haut-parleur                                  |
| 3. Touche de mise sous tension | 7. Réduction du volume    | 11. Microphone (sous le couvercle de la tablette) |
| 4. Prise d'écouteur            | 8. Fente micro SD         |   |

## Botones y Puertos

- |                                |                         |  |
|--------------------------------|-------------------------|--|
| 1. Pantalla táctil             | 5. Puerto micro USB     | 9. Cámara trasera                              |
| 2. Cámara frontal              | 6. Subir volumen        | 10. Bocina                                     |
| 3. Botón de encendido          | 7. Bajar volumen        | 11. Micrófono (bajo la cubierta de la tableta) |
| 4. Conector para los audífonos | 8. Ranura para micro SD |  |

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: 2AQZL-ELT0704H