


## User Manual

Genie 10 True Wireless Earbuds

 


✉ [support.us@linklike-audio.com](mailto:support.us@linklike-audio.com)  
[support.uk@linklike-audio.com](mailto:support.uk@linklike-audio.com)

Contact us for any questions:

- Fit issue
- Pairing issue
- Cut-in/Cut-off issue
- Sound quality
- Call issue
- Battery/Charging issue
- Quality related issue
- Others

### PRODUCT OVERVIEW

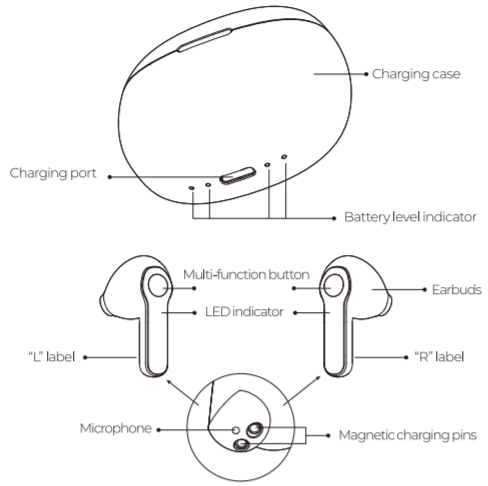


Charging case  
Charging port  
Battery level indicator  
Multi-function button  
LED indicator  
Earbuds  
"L" label  
"R" label  
Microphone  
Magnetic charging pins

### CHARGING

 Before the first-time using, please fully charge the earbuds and the charging case. Simply check the battery status of the charging case by the flashing of the LED indicators.


**Charging the Charging Case**  
To charge the charging case, connect the USB-C charging cable to the charging case and then to an adapter (not included). It takes approx. 1.5 hours to fully charge the charging case. When the charging case is being charged, battery level indicator on the charging case shows the charging case's battery level as below.

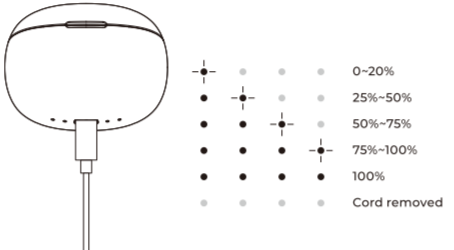

0-20%  
25%-50%  
50%-75%  
75%-100%  
100%  
Cord removed


### WEARING

 **Step 1** Please check the "R" and "L" label on the earbuds.  
**Step 2** Put the earbuds into the corresponding ears.  
**Step 3** Try rotating the pod to make sure the pod fits comfortably and securely in the ear canal. Otherwise, the pod can easily fall off during workout.

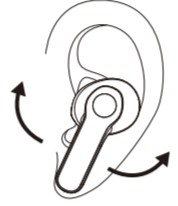

### POWERING ON/OFF

 **Power On**  
1. Open the charging case, the earbuds will automatically power on (the charging case must have battery).  
2. To manually power on the earbuds, press and hold the multi-function buttons on both earbuds for about 3 seconds.

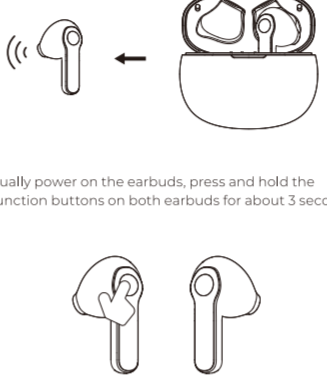

**Power Off**

- Put the earbuds back into the charging case and close the case, the earbuds will automatically power off (the charging case must have battery).
- To manually power off the earbuds, press and hold the multi-function buttons on both earbuds for about 6 seconds.
- The earbuds will automatically power off when connected to no devices for more than 5 minutes; Put the earbuds back into the charging case, close and then open the case, the earbuds will power on again.
- The earbuds will automatically power off when the battery is low.

### WARRANTY CARD

Buyer Name: \_\_\_\_\_  
 Phone Number: \_\_\_\_\_  
 Order ID: \_\_\_\_\_  
 Issue: \_\_\_\_\_  
 Date of Purchase: \_\_\_\_\_  
 Address: \_\_\_\_\_  
 Warranty Period: 12 Months

 
**Email us to enroll our VIP program and gain an extra half a year warranty.**


✉ [support.us@linklike-audio.com](mailto:support.us@linklike-audio.com)  
 ✉ [support.uk@linklike-audio.com](mailto:support.uk@linklike-audio.com)  
 Linklike is a trademark registered in the USA and other countries. All rights reserved.  
 Made in China

### PAIRING

**Initial Pairing**  
To pair smoothly, please connect the earbuds to your Bluetooth device within a 0.5 meters range. Before the first-time using, please ensure that the earbuds are kept in the charging case properly.

**Step 1** Take both earbuds (Binaural mode) or one earbud (Single-use mode) out of the charging case, the earbuds will automatically power on, and complete TWS pairing. And then, the earbuds enter into Bluetooth connection mode and can be paired to your Bluetooth device.  
**Step 2** Search and tap "Genie 10" in your device's Bluetooth Settings to connect.

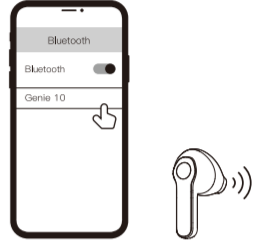



Linklike

Linklike (Shenzhen) Technology Co., Ltd.  
 ADD: RM7709, BLK C, Zhantao Technology BLDG, Minzhi Avenue,  
 Minzhi ST, Longhua DIST, Shenzhen, China

### Re-connection

- When you open the charging case, the earbuds will automatically power on and try to reconnect to the most recently connected Bluetooth device.  
 Note: The Bluetooth device must be powered on and within the Bluetooth transmission range (33 ft, or 10 m).
- When the Bluetooth device is beyond the transmission range for less than 5 minutes, the earbuds can complete auto re-connection. If the re-connection fails, please tap "Genie 10" in your device's Bluetooth Settings to connect.
- The earbuds will automatically power off when connected to no devices for more than 5 minutes.

### LED INDICATOR

Status	LED Indicator
Power on	Flash white for 3 times
Power off	Flash red for 3 times
Pairing mode	Binaural mode: Right earbud slow flash white and red, the left earbud not light up; Single-use mode: Slow flash white and red
Connected	LED Indicator lights off
Low battery	Flash red once every second

### TOUCH CONTROLS

Music	
Pause/Play	Tap the multi-function button once
Previous track	Double tap the multi-function button on left earbud
Next track	Double tap the multi-function button on right earbud
Volume down	Press and hold the multi-function button on left earbud for more than 1 second
Volume up	Press and hold the multi-function button on right earbud for more than 1 second
Calls	
Answer calls	Tap the multi-function button once
Hang up/Reject calls	Press and hold the multi-function button for about 2 seconds
Activate voice assistant*	Triple tap the multi-function button

\* Voice assistant feature only works for voice assistant enabled devices.

### RESET

Reset the earbuds if the earbuds cannot connect with each other properly or cannot connect with your device properly.

**Step 1** Clear the pairing history of "Genie 10" in your device's Bluetooth Settings.  
**Step 2** Press and hold the multi-function buttons on both earbuds for about 6 seconds to power off the earbuds.  
**Step 3** Press and hold buttons on both earbuds for about 10 seconds, and then put the earbuds back into the charging case and close the case, the reset will be done.  
**Step 4** Take the earbuds out of the charging case. Search and tap "Genie 10" in your device's Bluetooth Settings to connect.

### SPECIFICATIONS

Name	True Wireless Earbuds
Model	Genie 10
Bluetooth Version	5.0
Bluetooth Transmission Range	≤ 10 m (Open areas without obstacles or interruption)
Charging Port	USB-C
Input	5V = 0.5A
Charging Case Capacity	400 mAh / 1.48 Wh
Charging Case Charging Time	≈ 1.5 h
Earbud Battery Capacity	45 mAh / 0.166 Wh
Earbud Charging Time	≈ 1.5 h
Limited Charge Voltage	4.2 V
Working Temperature	0 °C - 45 °C
Storage Temperature	-10 °C - 60 °C

\* Based on the test results of Linklike Lab, for reference only.


### WARNING

1. Do not use corrosive detergent to clean this product.
2. Keep the product away from extremely high temperature or humid environment. Do not let this product be heated, close to a fire or placed in a fire, such as a cooking stove, to avoid fire hazards or explosion.
3. The product does not install any self-maintainable parts, do not remove or refill headset for any reason.
4. If you do not intend to use this product for a long period of time, please put the earbuds back into the charging case, and store it in dry environment, and charge the earbuds at least once a month to prolong its life.
5. Do not charge below zero degree Celsius. Charging below zero degree Celsius may damage the battery.
6. Do not use the device in thunderstorm weather. Thunderstorm may cause abnormal operation of the device and increase the risk of electric shock.
7. Permanent hearing damage may occur when the earbuds are used at high volume levels for long periods of time.
8. Do not use the product in situations which requires focused attention (e.g. When driving or performing skilled jobs).
9. Please purchase or use a charger that has obtained CCC certification and compliant with applicable country's safety standards.
10. In order not to affect the normal use of this product, please use a USB-C charging adapter that is compliant with applicable country's safety standards.
11. Keep the product, accessories and packaging parts out of reach of children and pets to prevent accidents and choking hazards.

### Battery Warning

1. Forbidden to disassemble, hit, crush or throw into fire. Do not place it in a high temperature environment.
2. If the battery is improperly replaced, there is a risk of explosion, and only the same or equivalent type of battery can be replaced.
3. The battery (battery pack or assembled battery) shall not be exposed to such an overheated environment as sunlight, fire and so on.
4. Forbidden to use the battery after soaking in water.
5. It contains lithium battery, please separate it from household garbage. In order to reduce pollution and protect the global environment to the greatest extent, please recycle it.
6. If the battery is used improperly, it may explode or leak, causing burns or other personal injuries. If the battery leaks, you should be careful and immediately dispose of the battery in accordance with local battery disposal laws and regulations.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

物料编码: LKPI01014A		物料名称: LinkLike Genie 10真无线耳机说明书		
结构部分	材 质: 105克哑粉纸	单 位: mm	平面部分	
	成型尺寸: 70*80mm	刀 线: _____		
	展开尺寸: 630*80mm	压 线: - - - - -		
	结构设计:	针 刀 线:		
	日 期:	刀线相交:		
	备 注:	坑 纹:		
		印刷颜色: 双面印刷, 单黑 <b>K</b>		
		表面工艺: 风琴折		
		平面设计: 骆起		
		平面修改:		
		日 期: 2020.11.25		
		备 注:		
		<b>LOFFAN DESIGN</b> 洛凡设计		
		