

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

POWER ACOUSTIK

PD-720B

In-Dash 7" Monitor
Touch Screen
DVD/CD/MP3/MP4
AM/FM Radio
With Bluetooth



Owner's Manual

Take the time to read through this owner's manual. Familiarity with installation and operation procedures will help you obtain the best Performance from your new DVD-receiver.

SIMPLE TROUBLE SHOOTING

PROBLEMS, CAUSES & SOLUTIONS
No power - Check and make sure the connecting wires are connected correctly - Check whether the fuse is blown. Replace with the proper value fuse if necessary.
No sound - Check and make sure the speaker wires are connected correctly.
No picture - Check whether the video wire is connected to the video device.
Unit hang-up - Press the RESET button to reset the unit to its default stage.
No function when pressing the buttons or TFT screen - Press the RESET button to reset the unit to its default stage.
Poor effect or unable to receive radio - Check whether the radio antenna is inserted or properly connected. - Antenna may not be the proper length. Make sure the antenna is fully extended. - Antenna may be poorly grounded. Check and make sure the antenna is properly grounded.
Stereo cannot be received under radio mode - Tune the radio frequency accurately. - The broadcasting signal is too weak, set the mode to MONO.
Disc inserted but cannot play - Check whether the disc inserted upside down. - Check whether the disc is dirty or badly cracked. - Lens is dirty. Clean lens by using the lens clean disc.
Picture without colour or no sound under disc - Improper setting of colour system. Set again to "PAL", "SECAM" or "NTSC". - The disc is dirty or damaged. Wipe the disc with a dry soft cloth or replace a new disc.
Abnormal moving, skipping or sound during playback - The disc is dirty or damaged. Wipe the disc with a dry soft cloth or replace with a new disc.
Remote handset does not work - Replace new battery of the remote handset. - Point the remote handset directly at the remote sensor of the main unit. - Clean the surface of the remote sensor.
Bluetooth not operated - check the devices are linked up correctly.

Note

After the above efforts, if the unit still cannot be worked normally, consult your service dealer. Never attempt to disassemble the unit by yourself. No service part inside the unit.

SPECIFICATION

GENERAL

Power Requirement:	DC 12 Volts, negative ground
Load Impedance:	4 Ohms
Maximum Power Output:	40 watts x 4 (RMS)
Tone Control - Bass (at 100 Hz)	+/- 8 dB
Treble (at 10 KHz)	+/- 8 dB

AM RADIO SECTION

Frequency Range	522 - 1620 KHz (Europe)
	530 - 1710 KHz (America)
Usable Sensitivity (-20 dB)	25 dB

FM RADIO SECTION

Frequency Range	87.5 - 108 MHz (Europe)
	87.5 - 107.9 MHz (America)
Usable Sensitivity (-20 dB)	15 dB
Signal to Noise Ratio	60 dB
Stereo Separation (at 1 KHz)	30 dB
Frequency Response	30 Hz - 15 KHz

DISC SECTION

Disc Play:	DVD / VCD / MP3/ CD
Mounting Angle:	+/- 30 degree

VIDEO SECTION

Video System:	NTSC / SECAM / PAL
Video Output Level:	1.0Vp-p 75 Ohms
Horizontal Resolution:	500

BLUETOOTH SECTION

Communication type:	V2.1
Maximum Distance:	5 meters

AUDIO SECTION

Maximum Output Level:	2 Vrms (+/-3 dB)
Frequency Response:	20 Hz to 20 KHz
Signal to Noise Ratio:	85 dB
Channel Separation:	80 dB

Note: Specification and design; functions and features; unit illumination; colour and display segment are subject to change without prior notice. Photos and drawings on gift box or operation manual might be varied from the exact unit. Depends on the input devices, operation might be varied from the operation manual described.

23. Touch to activate or close **BT PHONE BOOK SEARCH MENU** to search for the contact person or number.
Note 1: Available in English (for 1st letter only) and digit search only
Note 2: After input the English letter, list of contact with this English letter will appear, use page up / page down to search for the contact
24. Touch to input the digit or the letter for searching.
25. Touch to start / pause / resume music playback transmitted from the mobile phone.
26. Touch to select upward or downward track for playback.
27. Touch to turn off the screen. When the screen turned off, touch any portion of the screen to turn on the screen.
28. Touch to activate audio & visual setting for various audio & visual setup.
29. Touch to shift screen to **MAIN MENU**.

 
Remarks: Depends on the system language set on the unit, list of phone book / incoming call / dial out call / missing call will not be display correctly.

ON SCREEN – AUXILIARY INPUT OPERATION



At **MAIN MENU**, touch to shift to auxiliary input operation (provided an auxiliary video device had been connected). At auxiliary input operation, touch any portion of screen to activate **AV INPUT MENU** for operation.

AV INPUT MENU

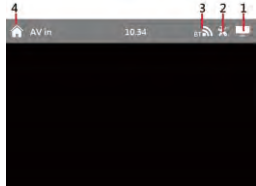

1. Touch to turn off the screen. When the screen turned off, touch any portion of the screen to turn on the screen.
2. Touch to activate audio & visual setting for various audio & visual setup (refer to ON SCREEN – AUDIO & VISUAL SETTING for details).
3. Touch to shift to Bluetooth mode for operation (available when a mobile one connected).
4. Touch to shift screen to **MAIN MENU**.

IMPORTANT NOTICE & PRECAUTIONS

Thank you for using our company multi-media player! To operate the unit correctly, please read the operation manual carefully before using. Keep this operation manual for further reference.

The unit is designed only for DC 12V negative ground operation system. Make sure your vehicle is connected to DC 12V negative ground electrical system. Be sure to connect the speaker (-) leads to the speaker (-) terminal. Never connect the left and right channel speaker wires together or to the vehicle body.

The normal temperature for operation is between -20 and +60 degree Celsius. Do not work in extreme high or low temperature and block vents or radiator panels of the unit, blocking them will cause heat to build up inside the unit and may cause damage or fire.

 
 
This unit can play the following discs (12 cm) and media files: DVD±R/RW / MPEG 4 / DivX / AVI / SVCD / VCD / MP3 / WMA / CD-R/RW / JPEG.

INSTALLATION


Accessories included in the package for installation




Mounting Method

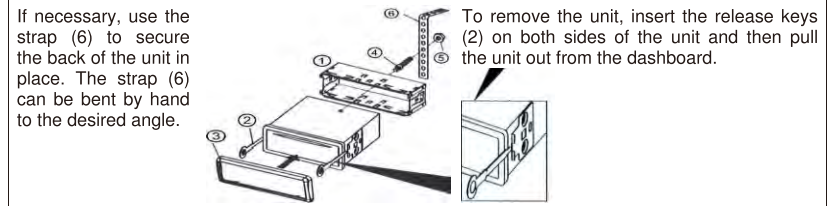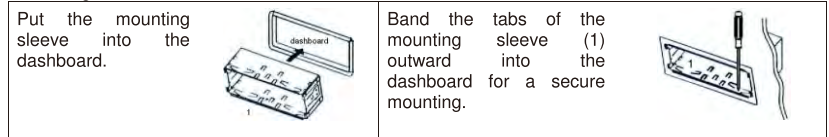

To Detach the Front Panel

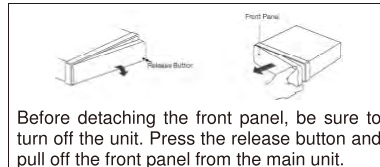 

To Replace the Front Panel

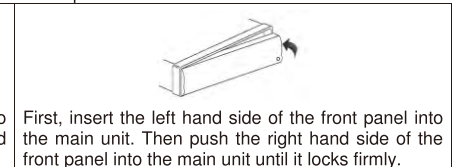 

WIRING CONNECTION

POWER ACUSTIK CD/DVD/Bluetooth/MP3/AM/FM-Stereo

PD-720B

CAUTION: + 12V DC Negative Ground

FM: 87.5-107.9MHz AM: 530-1710KHz

WIRING AND CONNECTION:

BACK OF MAIN UNIT

GPS
ANT
AUX-R V-IN R-CAM
AUX-R SW V-OUT
15A FUSE
POWER

CONNECTING SOCKET / JACKS:

POWER	CONNECTING SOCKET / JACKS:
Red	Ignition switch (B+) with 1A fuse
Black (Coarse)	Ground (B-)
(Fine)	Steering wheel control (ground)
Yellow	Memory back up (B+)
White	Front left speaker (+)
White / Black	Front left speaker (-)
Grey	Front right speaker (+)
Grey / Black	Front right speaker (-)
Green	Rear left speaker (+)
Green / Black	Rear left speaker (-)
Purple	Rear right speaker (+)
Purple / Black	Rear right speaker (-)
Blue	Auto antenna (B+)
Pink	Back sight (B+)
Grey	Steering wheel control (1)
Green	Steering wheel control (2)
Orange	Illuminate backlight (B+)
Brown	Brake (B-)
Red RCA Jack	Rear AUX right speaker output
White RCA Jack	Rear AUX left speaker output
ANT	Radio antenna
GPS	GPS antenna (for GPS version only)
AUX-R	Auxiliary right speaker input
AUX-L	Auxiliary left speaker input
V-OUT	Video output
SW	Sub-woofer
R-CAM	Back sight camera input
V-IN	Video input

LOOSE CONNECTING CABLE:
TV antenna input socket (for version with TV tuner)
iPod input socket (for version with iPod connection)
USB slot (for version with backside USB connection)

Note:
Wiring & connecting shows the full version of the unit and may not be available in the unit. Refer to the exact functions & features that applied. Due to the law of some countries, video playback is not allowed during driving. To allow video playback during driving, the brown wire (brake) should be connect to ground (B-) of the car battery.

Designed and Engineered in U.S.A., Made in China

BT INCOMING CALL MENU

BT CONVERSATION MENU

BT RECORD MENU

BT PHONE BOOK MENU

BT PHONE BOOK SEARCH MENU

BT MUSIC MENU

1. Touch to shift to **BT DEVICE MENU** to show the current status on connection.
2. Touch to shift to **BT DIAL MENU** for dial out of phone.
3. Touch to shift to **BT RECORD MENU** to show the record on incoming calls / dial out numbers / missing calls of the connected mobile phone.
4. Touch to shift to **BT PHONE BOOK MENU** to show the phone book of the connected mobile phone.
5. Touch to shift to **BT MUSIC MENU** for transmission of music playback from the connected mobile phone.
6. Touch to select the linked up device.
7. Touch to delete the linked up device.
8. Touch to input the phone number.
9. Touch to erase the digit input by error.
10. Touch to dial out after input the phone number or redial when no phone number input.
11. Touch to hang up or refuse an incoming call.
12. Touch to shift conversation between mobile phone & Bluetooth of the unit.
13. Touch to turn on or off of sound muting of the microphone.
14. Touch to input digit (for conversation that needs data input).
15. Touch to hang up or refuse an incoming call.
16. Touch to pick up an incoming call.
17. Touch to download incoming calls / dial out numbers / missing calls of the connected mobile phone.
18. Touch to show list of missing calls.
19. Touch to show list of incoming calls.
20. Touch to show list of dial out numbers.
21. Touch to shift page up or down.
22. Touch to download the phone book of the mobile phone to the unit.

21. Touch to select photo playback at **FOLDER PLAYLIST / PLAYLIST** provided the playback device recorded with photo files. (when the playback device recorded with photo files).
22. Touch to select video playback at **FOLDER PLAYLIST / PLAYLIST** provided the playback device recorded with video files. (when the playback device recorded with video files).
23. Touch to shift to **FOLDER PLAYLIST** or **PLAYLIST** to select desired folder or file for playback. To start playback, touch twice on the selected track.
24. Touch to shift to previous **FOLDER PLAYLIST / PLAYLIST** or beginning of the folder list / playlist.
25. Touch to shift page up or down.
26. Touch to erase the digit input by error.
27. Touch to confirm after input the number of track for playback.
28. Touch to shift back to PLAYBACK MENU.
29. At DVD playback mode, touch repeatedly to view the angle changes in sequential order (available for video recorded with multi-angle senses).
30. At DVD playback mode, touch to show the on - screen menu of the disc At VCD playback mode, touch to shift PBC on or off. At PBC on mode, touch to start the playback at the beginning in sequential order.

ON SCREEN – BLUETOOTH OPERATION



At **MAIN MENU**, touch on screen to shift to Bluetooth operation.

 


During unit operation, touch on screen to shift to Bluetooth operation.

LINK UP WITH MOBILE PHONE

To link up Bluetooth connection with the mobile phone, take your phone and follow the steps:

- set the mobile phone to Bluetooth state
- start to search new device
- after searched, new device (ST.8<W7SCA0B or similar) searched out, confirm the search
- in case of need, input default code "0000" or "8888" in the mobile phone
- at the same time, Bluetooth icon & **BT DEVICES MENU** appeared on screen
- connection succeeded and you can start using Bluetooth function

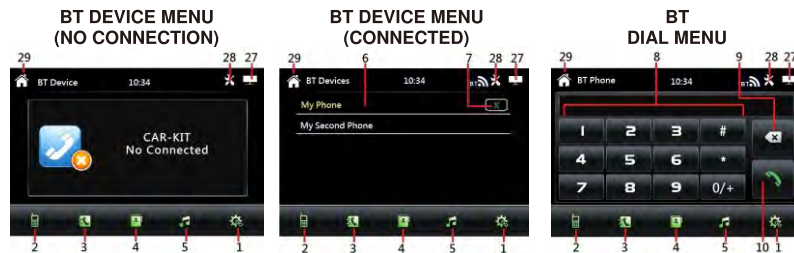

Symbol / Function

🔌 / SRC / 📶

SRC

IR

LCD DISPLAY

FUNCTION
CONTROL

USB

SD or 📁

AUX

DISC SLOT

▲ or EJECT

BND or BAND /



+▶▶ / ◀◀-

Operation & Controls

Power On/Off

When the unit is turned off, press to turn on the unit. When the unit is turned on, press & hold shortly to turn off the unit.

Press repeatedly to select the desired mode for operation.

Note: GPS mode cannot be selected by this control key

Bluetooth Mode (when a mobile phone connected)

Press to hang up or refuse an incoming call.

Remote control sensor (for signal reception from remote handset)

It shows the status of current operation of the unit.

Volume Control

Rotate to adjust sound output level.

Press to turn on or off of sound muting control.

Insert USB device to this slot for digital files playback.

Important: The USB port is intended only for data transfer only, other devices cannot be used with this USB connection. The use of USB extension cords is not recommended.

Insert SD / MMC card to this port for digital files playback.

Insert an external device to this jack in order to have output of the external device through the unit.

Insert or remove disc from this disc slot.

Disc Input Mode

Press to eject disc from the disc slot.

Bluetooth Mode

Press & hold shortly to disconnect the link-up with mobile phone (when a mobile phone has been connected with Bluetooth of the unit).

Radio Mode

Press repeatedly to select the desired radio band for broadcasting.

Disc / USB / SD Input Mode

Press repeatedly to select video system in PAL / NTSC / AUTO mode.

Bluetooth Mode (when a mobile phone connected)

When an incoming call received, press to pick up the call.

Press to dial out after input a phone number.

Press to redial the last dial out number.

Radio Mode – Auto Seek

Press to start automatic seeking frequency upward or downward to the next strong station received for broadcasting.

Radio Mode – Manual Tune

Press & hold shortly to activate manual tuning mode. At this mode, press repeatedly to tune the radio frequency upward or downward.

Disc / USB / SD / Input Mode – Select Tracks

Press repeatedly to shift track upward or downward for playback.

Disc / USB / SD / Input Mode – Track Fast Forward / Fast Rewind

Each time press & hold shortly to activate various fast forward/rewind speeds for playback.

Bluetooth Music Playback Mode – Select Tracks

Press repeatedly to shift track upward or downward for playback.

RESET	Press with a pointed object (such as a ball point) to reset the unit to its initial setting by the factory (default stage).
PRESET MEMORY STATION NO 1 – 6	At radio mode, press any one of the preset number to select a station that had been stored in the memory for broadcasting. Press and hold shortly of any one of the preset number can store the current broadcasting station in the memory.
PAU or ►	At disc / USB / SD input mode & Bluetooth music playback mode, press to start or pause playback.
INT	At disc / USB / SD input mode, press to start intro playback of each track for 10 seconds. Press again to resume to normal playback mode.
RPT	At disc / USB / SD input mode, press to select various repeat playback mode (track/chapter/title) of the device.
RDM	At disc / USB / SD input mode, press to start random playback of the device. Press again resume to normal playback mode.
5	At disc / USB / SD input mode, press repeatedly to select video system in PAL / NTSC / AUTO mode.
6	At disc / USB / SD input mode, press repeatedly to select audio output channels that recorded in the device.
MIC	This is the microphone for voice reception at Bluetooth call.
OPEN ▲ / ▼	Press to flip up or store back the TFT screen from the compartment. When the TFT screen has been flipped up, press repeatedly to adjust the angle for viewing. Press and hold ▼ shortly to store back the TFT screen to its compartment. When the TFT screen has been stored in its compartment, press ▲ to pop up the TFT screen.
REL	Press to detach the front panel from the main unit for security purpose. When the front panel has been detached, insert micro SD card to SD slot as well as micro SD card to GPS slot for media files playback & GPS navigation respectively.
OSC	In video & photo playback mode, press & hold shortly to display the contents of the currently playin sources on screen. (Note: Depends on the media files recorded, not all sources can be display)
MENU	<u>For unit without GPS navigation</u> press & hold shortly to shift the current operating mode to the main menu for operation options. <u>for unit with GPS navigation</u> press & hold shortly to shift the current operating mode to GPS navigation mode or from the GPS navigation mode to the previous operating mode.

Note

Printings and symbols on the above may be varied from the exact main unit. Referred to the main unit for exact functions and features that applied. User is highly recommended to use the touch screen control to operate. Most of the operations of this unit cannot be controlled by the main unit.



1. Hold & slide to show the hidden operation icons for operation.
2. Touch to shift screen to **MAIN MENU**.
3. This shows the current input device for playback (DISC/USB/SD CARD)
4. Touch to turn off the screen. When the screen turned off, touch any portion of the screen to turn on the screen.
5. Touch to activate audio & visual setting for various audio & visual setup (refer to ON SCREEN – AUDIO & VISUAL SETTING for details).
6. Touch to shift to Bluetooth mode for operation (available when a mobile phone connected).
7. At media playback, touch to activate **PLAYLIST / FOLDER PLAYLIST** (available for input device recorded with folder) to select folder / track for playback.
At DVD playback mode, touch to show the menu of the disc. (Note: Depended on the DVD input, this function may not be operated)
At VCD playback mode, touch to shift PBC on or off. At PBC on mode, touch to start the playback at the beginning in sequential order.
8. Touch to shift to next or previous track for playback.
At video playback mode, repeatedly touch & hold shortly to activate various fast forward or fast rewind mode.
9. Touch to start, pause or resume playback.
10. At video playback mode under disc input, touch to stop playback.
At music / photo playback mode under disc input and playback mode under USB / SD card input, touch to stop playback temporarily and resume normal playback after a few seconds.
11. Touch repeatedly to select repeat playback mode.
12. Touch to turn on or off of random playback of the input device.
13. At video & photo playback mode, touch repeatedly to zoom in and zoom out of the screen for viewing.
14. Touch repeatedly to select the audio output channels that recorded in the playback device.
15. Touch repeatedly to select different sub-titles that recorded in the playback device.
(Note: Depended on the input device & playback media, this function may not be available)
16. Touch repeatedly to select different speeds of slow motion playback.
17. Touch to activate **KEYBOARD MENU** to input track number directly for playback.
18. At video playback mode, hold & slide to select the position (time) for playback.
19. At music playback mode, hold & slide to select the position (time) for playback.
20. Touch to select music playback at **FOLDER PLAYLIST / PLAYLIST** provided the playback device recorded with music files. (when the playback device recorded with music files).

11. Touch to tune the radio frequency to upward or downward station for broadcasting.
12. Touch to select stereo (ST) or mono mode at FM radio band. When stereo signal received, stereo indicator will be appeared on screen and this is no indicator for mono signal.
13. Touch the desired preset station number (P1–P6) to start broadcasting of the selected station. Touch & hold shortly the preset station number can store the current broadcasting station (frequency) into that station number.
14. Touch to close the **PRESET STATIONS MENU**.

 
ON SCREEN - DISC/USB/SD CARD INPUT OPERATION



At MAIN MENU, touch DISC/ USB/SD CARD icon on screen to multi-media playback mode and playback will start automatically. Depending on the input device and playback media, the touch screen will show various playback menus for operation.



REMOTE HANDSET – GENERAL OPERATION

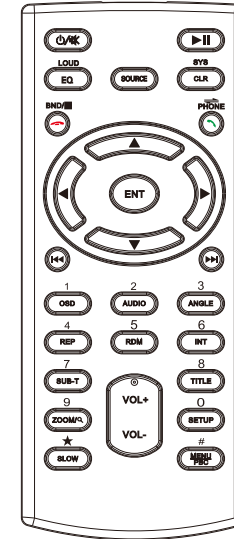

BATTERY REPLACEMENT

Refer to the back of remote handset for details on how to replace the batteries.

NO. SYMBOL



SOURCE

SYS / CLR

EQ

LOUD

AUDIO

OSD

1 – 6

0 – 9

OPERATION & CONTROL MODES

When the unit is turn off, press to turn on the unit.

When the unit is turn on, press & hold shortly to turn off the unit.

During unit operation, press to turn on or off of sound mute control

Press repeatedly to select the desired mode for operation

At Bluetooth mode, press to erase the digit input by error.

Press repeatedly to select the desired preset equalization mode.

Press & hold shortly to turn on or off of loudness control.

At video and music playback mode, each time press & hold shortly to select different audio output channels. (Note: Available on input device or media files recorded with different output channels and this selection is not available under Bluetooth mode)

At media playback mode, press & hold shortly to display the contents of the playback details on screen. (Note: Not available at music playback mode)

Radio Mode

Press any one of the number key 1-6 to select a station that had been stored in the preset memory number key 1-6 for broadcasting.

Disc / USB / SD / Input Mode

Press directly to input the number of track for playback.

Bluetooth Mode

Press directly to input the phone number for dial out.

ZOOM



TV Mode

Press directly to input the channel number for broadcasting

Disc / USB / SD Input Mode

At video & photo playback, each time press & hold shortly to select various zoom in and zoom out of screen for viewing.

Radio Mode

Press to start scanning all the preset stations on memory and stop for a few seconds for broadcasting.

Press & hold shortly to start searching the frequency and storing the strongest signal stations into the preset memory stations number 1-6. After storing the stations, the unit starts scanning all the preset stations on memory and stop for a few seconds for broadcasting.

BND



Radio Mode

Press repeatedly to select the desired radio band for broadcasting.

Disc / USB / SD Input Mode

At playback mode, press to stop playback and shift to playlist for playback selection (depended on the input device, playlist may not be available).

Note: Not available for control at music playback mode

Bluetooth Mode

Press to hang up or refuse an incoming call.

RDM



At disc / USB / SD input playback mode, press & hold shortly to turn on or off of random playback of the input device. (Note: Not available at photo playback mode)

INT



At music playback mode, press & hold shortly to turn on or off of intro playback of the input device. (Note: Not available at Bluetooth mode)

At disc / USB / SD / input & Bluetooth mode, press to pause, resume or start playback.



DVD Mode

At DVD menu/title display mode, press to select the desired setting/setup and press ENT to confirm/enter.



Long press the button to adjust the view angle



Long press the button to open or close the panel

Folder / Playlist Mode

During folder/playlist display at media playback mode, press repeatedly to select track for playback. Once selected, press ENT to confirm.

Photo Playback Mode

Press to rotate photo position or show up-down, left-right mirror image.

 
ENT

DVD Mode / Folder/Playlist Mode

At DVD menu/title display mode as well as folder/playlist display at media playback mode, press ▲/▼/►/◄ to select the desired setting/setup and press ENT to confirm/enter.

VERSION OF UNIT

VERSION OF UNIT

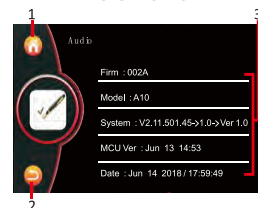

1. Touch to shift screen to **MAIN MENU**.
2. Touch to shift to previous menu or operation mode.
3. These show the software version of unit.

Note: The **VERSION OF UNIT** is used to show the details of unit. This is not available for setting.

ON SCREEN – RADIO OPERATION



At **MAIN MENU**, touch to shift screen to **RADIO MENU** for radio operation.

RADIO MENU



PRESET STATIONS MENU



1. Touch to shift screen to **MAIN MENU**.
2. Touch to activate audio & visual setting for various audio & visual setup (refer to ON SCREEN – AUDIO & VISUAL SETTING for details).
3. Touch to turn off the screen. When the screen turned off, touch any portion of the screen to turn on the screen.
4. Touch to select FM & AM radio band for broadcasting.
5. Touch to manual select the desired radio frequency
6. Hold & slide to select the desired radio frequency for broadcasting.
7. Touch to activate the **PRESET STATIONS MENU** on screen.
8. Touch to start searching the radio frequency & storing the strongest signal stations into memory stations (P1 – P18). After one cycle searched, the unit starts intro broadcasting of the preset memory stations for a few seconds.
9. Touch repeatedly to select desired radio band, FM1, FM2, FM3, AM1, AM2
10. Touch to start intro broadcasting of the preset memory stations for a few seconds. Touch again to stop this intro broadcasting.

6. When AUTO MODE selected, touch to activate AUTO CYCLE TIME INTERFACE to select the time for automatic backlight change.
7. Touch to select AUTO MODE for automatic backlight change (cycle change).
8. When MANUAL MODE selected, touch to activate **R.G.B. MENU** for R/G/B adjustment.
9. Touch to select PRIMARY MODE to select a single colour illumination.
10. When PRIMARY MODE selected, touch to activate COLOUR INTERFACE to select a single colour for illumination.
11. Hold & slide to set brightness of screen when brightness of screen is set at USER MODE (refer to ON SCREEN – MAIN MENU OPERATION):



 
12. Hold & slide to set brightness of screen when brightness of screen is set at USER SETTING MODE under headlamp detection at ON mode (refer to ON SCREEN – MAIN MENU OPERATION):



13. At **R.G.B. MENU**, hold & slide to adjust the desired R / G / B colour.

Note: Backlight illumination is synced with the on/off of the car lamp. Orange wire should be connected to the on/off of car lamp

STEERING WHEEL CONTROL SETUP

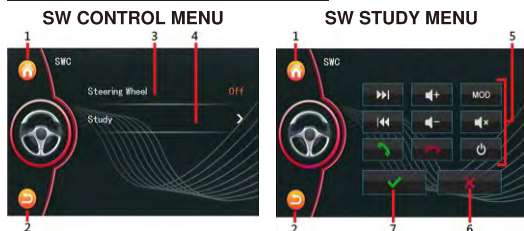

1. Touch to shift screen to **MAIN MENU**.
2. Touch to shift to previous menu or operation mode.
3. Touch to turn on or off of steering wheel control (when the steering wheel control wires – grey & green as well as the ground wire connected).
4. Touch to activate **SW STUDY MENU** for steering wheel control learning & setting.
Steps for learning & setting:
~ touch any control key "5" on screen
~ press & hold the respective control of the steering wheel of the car
~ the unit starts learning and once completed, indicator appears on screen
~ follow the above steps to set for all other controls
~ when completed, press "7" to confirm the setting
~ press "6" to cancel the setting
5. These show items available for setting.
6. Touch to cancel the setting.
7. When study & setting completed, touch to confirm the setting.



Radio Mode

Press repeatedly to fine tune radio frequency upward or downward.
Press & hold shortly to tune radio frequency upward or downward and stop for broadcasting when a station received.

Disc / USB / SD Input Mode (Playback Mode)

Press repeatedly to shift track upward or downward for playback.
Each time press & hold shortly to activate various speed of fast forward or fast rewind mode. (Note: Not available for operate at photo playback mode)

Bluetooth Mode

Press to shift track upward or downward for playback.

TV Mode

Press repeatedly to shift upward or downward for playback.
Press & hold shortly to turn frequency upward or downward and stop for broadcasting when a channel received.

REP At playback mode under disc / USB / SD input, each time press & hold shortly to activate various repeat playback setting.

ANGLE At video playback mode, each time press & hold shortly to view angle changes in sequential order (available on media files recorded with this features).

TITLE DVD Mode
Press & hold shortly to display on screen the title of the disc for setting/setup.


SUB-T Video Playback Mode
Each time press & hold shortly to select different sub-titles that recoded in the input device or media files.


SLOW At DVD playback mode, press repeatedly to select different speeds on slow motion playback.

VOL + / VOL - Press repeatedly or press & hold to adjust sound output level.

MENU / PBC DVD Mode
Press & hold shortly to display on screen the menu of the entire disc for setting/setup.
VCD Mode
Press & hold shortly to turn on or off of PBC playback.

SETUP During unit operation, press & hold shortly to activate setup menu on screen for various setup of the unit. Press & hold shortly again to return to previous operation mode. (Note: Setup of unit cannot be operated by remote handset. Setup of unit can only be operated by touch screen – refer to ON SCREEN OPERATION for details)

 
 Bluetooth Mode
Press to pick up an incoming call; dial out after input a phone number; redial last dial out number.

 / PHONE Bluetooth Conversation Mode
Press & hold shortly to shift conversation between main unit and mobile phone.

Remarks: Depends on the input devices & playback media files, operation may be varied or not available for operation.

ON SCREEN – MAIN MENU OPERATION

Touch top left corner of screen to enter to **MAIN MENU**.

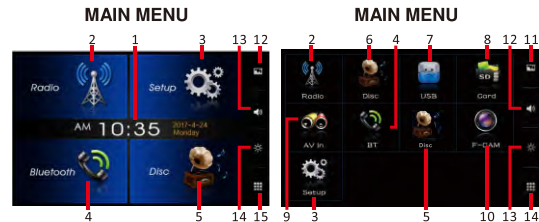

Touch the icon on the desired mode on screen and the unit will then enter into the mode that selected for operation.

Hold & slide the operation icon on screen to shift to other **MAIN MENU** that shows the hidden input or operation icons.

1. This shows the calendar and time.
2. Touch to start radio operation.
3. Touch to start various setup of the unit.
4. Touch to start Bluetooth operation (when connected to a mobile phone).
5. Touch to start Disc operation.
6. Touch to start disc input operation (when a disc inserted).
7. Touch to start USB input operation (when an USB device inserted).
8. Touch to start SD card input operation (when a micro SD card inserted).
9. Touch to start auxiliary input operation (when an auxiliary device inserted).
10. Touch to activate front camera input (when connected to a front camera and front camera switch has been turned on). When front camera input has been activated, front camera view will be displayed on screen and:
 - ~ audio output of current operation mode will be retained (for operation modes with audio output only)
 - ~ audio output of current operation mode will be broadcasted 10 seconds later (for operation modes with visual output)
 - ~ audio & visual output of current operation mode will be broadcasted 10 seconds later (for operation with video output connected)
11. Touch repeatedly for desired wallpaper (background colour) setting.
12. Touch to turn on or off of sound mute control.
13. Touch repeatedly to select brightness of screen or turn off the screen. Turn off of screen is available under headlamp detection at OFF mode. When the screen is off, touch any portion of the screen to turn it on again. Following preset brightness modes can be selected.

 


At this mode, brightness of screen is set by the user (user setting – refer to SYSTEM SETUP & ILLUMINATION BACKLIGHT SETUP under ON SCREEN – SETUP OPERATION for detail).


At this mode, brightness of screen is set by the user (user setting under headlamp detection at ON mode – refer to SYSTEM SETUP & ILLUMINATION BACKLIGHT SETUP under ON SCREEN – SETUP OPERATION for detail).

14. Touch to shift screen to **MAIN MENU**.

CALENDAR FORMAT MENU

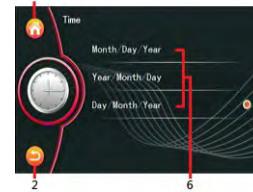

CLOCK FORMAT MENU

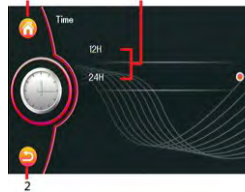 


SETTING MENU




1. Touch to shift screen to **MAIN MENU**.
2. Touch to shift to previous menu or operation mode.
3. Touch to activate **CALENDAR FORMAT MENU** for date / month / year format setting.
4. Touch to activate **CLOCK FORMAT MENU** for 12H / 24H display format setting.
5. Touch to activate **SETTING MENU** for calendar & clock setting.
6. Touch to select calendar display format.
7. Touch to select clock display format.
8. Touch repeatedly to set for calendar & clock.

ILLUMINATION BACKLIGHT SETUP

 
LIGHT (AUTO) SETUP MENU

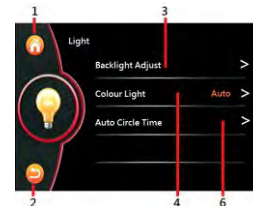


LIGHT (MANUAL) SETUP MENU

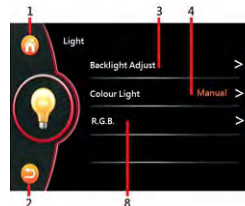 


LIGHT (PRIMARY) SETUP MENU

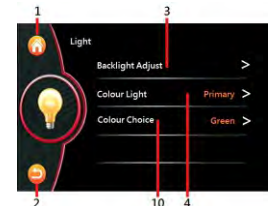 


MODE MENU

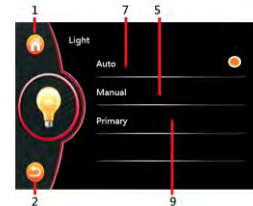 

ADJUST MENU

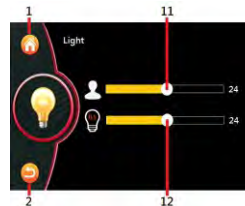 

R.G.B. MENU

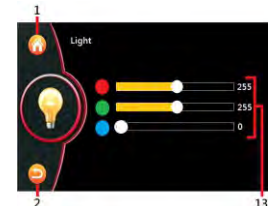 


1. Touch to shift screen to **MAIN MENU**.
2. Touch to shift to previous menu or operation mode.
3. Touch to activate **ADJUST MENU** to adjust backlight illumination.
4. Touch to activate **MODE MENU** to select illumination mode (auto / manual / primary).
5. Touch to select **MANUAL MODE** for R.G.B. colour setting.

1. Touch to shift screen to **MAIN MENU**.
2. Touch to shift to previous menu or operation mode.
3. Hold & slide to show the hidden Bluetooth setup modes.
4. Touch to turn on or off of Bluetooth operation mode.
5. Touch to activate **KEYBOARD MENU** for renaming the device (default name "CAT KIT")
6. Touch to activate **PIN CODE MENU** for changing the pin code of the device.
(Note: Default pin code "0000" or "8888").
7. Touch to turn on or off of auto linking between the car unit and mobile phone when the car unit turned on again after power off.
8. Touch to turn on or off of auto answer when receiving incoming call.
9. Touch to turn on or off of automatic loading record of incoming calls / dial out numbers / missing calls of the mobile phone to the car unit.
(Note: Loading of record will start automatically when the unit linked up with the mobile phone & shift to **BT RECORD MENU** at the first time – refer to ON SCREEN – BLUETOOTH OPERATION for details)
10. Touch to turn on or off of automatic loading phone book of the mobile phone to the car unit.
(Note: Loading of phone book will start automatically when the unit linked up with the mobile phone & shift to **BT PHONE BOOK MENU** at the first time – refer to ON SCREEN – BLUETOOTH OPERATION for details)
11. Touch to turn on or off of the default volume level during Bluetooth conversation.
ON mode: volume level at Bluetooth conversation is shifted to the default volume level
OFF mode: volume level at Bluetooth conversation is the same level at current volume level
Note: Volume level can be adjusted at any time during Bluetooth conversation
12. Touch to input the new name of the device.
13. Touch to shift between capital letter & small letter.
14. Touch to erase the digit / letter input by error.
15. Touch for spacing.
16. Touch to confirm the input.
17. Touch to input the new pin code of the device.
18. Touch to erase the digit input by error.
19. Touch to confirm the input.

CALENDAR & CLOCK SETUP

 CALENDAR SETUP MENU

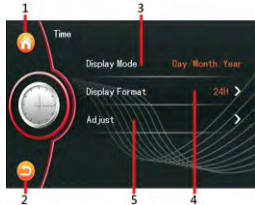

ON SCREEN – AUDIO & VISUAL SETTING

 


During unit operation and when this icon appeared on screen, touch to activate audio & visual setting for various audio & visual setup.



Volume Control

1. Touch to shift to Volume Control Menu.
2. Hold & slide to adjust sound output level.
3. Touch to turn on or off of sound mute control.

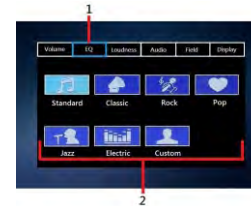


Preset Equalization Control

1. Touch to shift to Preset Equalization Control.
2. Touch to select the desired preset equalization mode. At Custom mode, it is set by the user (Refer to AUDIO SETUP under ON-SCREEN – SETUP OPERATON).



Loudness Control

 1. Touch to shift to Loudness Control.
2. Touch to turn on or off of loudness.

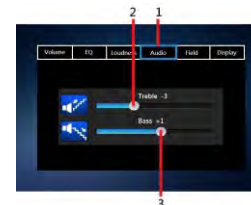

Audio Control

1. Touch to shift to Audio Control.
2. Hold & slide to adjust output level on treble.
3. Hold & slide to adjust output level on bass.



Field Control

1. Touch to shift to Field Control.
2. Hold & slide to set for the output level on left / right / front / rear speaker.



Visual Control

 
1. Touch to shift to Display Control.
2. Touch to select the desired setting mode on brightness, contrast, hue, saturation and sharpness.
3. At the desired setting mode, hold & slide to adjust the level.

ON SCREEN – SETUP OPERATIOPN



At **MAIN MENU**, touch to shift screen to **SETUP MENU** for various setup selection of the unit.


UNIT SETUP

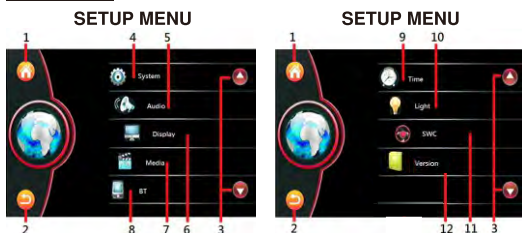


1. Touch to shift screen to **MAIN MENU**.
2. Touch to shift to previous menu or operation mode.
3. Touch to shift page up or down.
4. Touch to shift to **SYSTEM SETUP MENU** for various system setting (Refer to SYSTEM SETUP).
5. Touch to shift to **AUDIO SETUP MENU** for various audio setting (Refer to AUDIO SETUP).
6. Touch to shift to **VISUAL SETUP MENU** for various visual setting (Refer to VISUAL SETUP).
7. Touch to shift to **MEDIA SETUP MENU** for various media setting (Refer to MEDIA SETUP).
8. Touch to shift to **BLUETOOTH SETUP MENU** for various Bluetooth setting (Refer to BLUETOOTH SETUP).
9. Touch to shift to **CALENDAR SETUP MENU** for calendar & clock setting (Refer to CALENDAR & CLOCK SETUP).
10. Touch to shift to **LIGHT SETUP MENU** for various illumination backlight setting (Refer to ILLUMINATION BACKLIGHT SETUP).
11. Touch to shift to **SWC SETUP MENU** for steering wheel control setting (Refer to STEERING WHEEL CONTROL SETUP).
12. Touch to shift to **VERSION MENU** to show details of the unit (Refer to VERSION OF UNIT).

MEDIA SETUP

 
MEDIA SETUP MENU

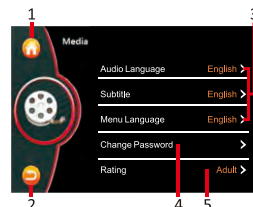

MEDIA SETUP MENU

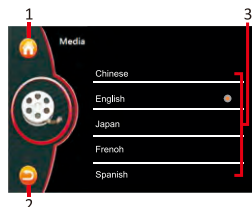 


KEYBOARD MENU

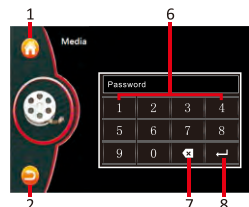 


1. Touch to shift screen to **MAIN MENU**
2. Touch to shift to previous menu or operation mode.
3. Before inserting a DVD for playback, touch to set the desired audio language, subtitle and menu language provided the DVD recorded with relative sources. (Note: Settings are not activated during DVD playback)
4. Touch to activate KEYBOARD MENU for password changing. (Default password "0000" "8888")
5. Touch to activate KEYBOARD MENU to input password in order to select rating for video playback. (Default password "0000" or "8888")
6. Touch to input the new pin code of the device.
7. Touch to erase the digit input by error.
8. Touch to confirm the input.

BLUETOOTH SETUP

 BLUETOOTH SETUP MENU

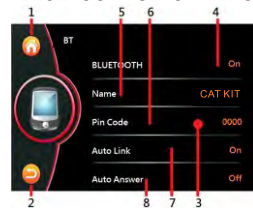

BLUETOOTH SETUP MENU

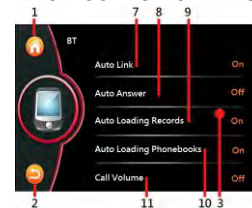 


KEYBOARD MENU



 
PIN CODE MENU



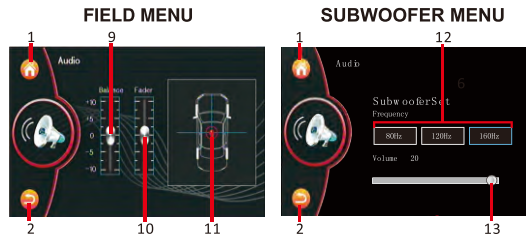


1. Touch to shift screen to **MAIN MENU**.
2. Touch to shift to previous menu or operation mode.
3. Touch to activate **EQ MENU** for equalization setting.
4. Touch to activate **FIELD MENU** for sound output setting on balance & fader.
5. Touch to turn on or off of loudness control.
6. Touch to set the Frequency and adjust the Subwoofer volume.
7. At custom control mode, hold & slide to set for the desired equalization level.
8. Touch repeatedly to select the desired preset equalization mode.
9. Hold & slide to adjust the output level between left & right speaker.
10. Hold & slide to adjust the output level between front & rear speaker.
11. Hold & slide to set for the desired output level between left & right speaker as well as front & rear speaker.
12. Choose difference frequency
13. Hold & slide to adjust output level.

 VISUAL SETUP

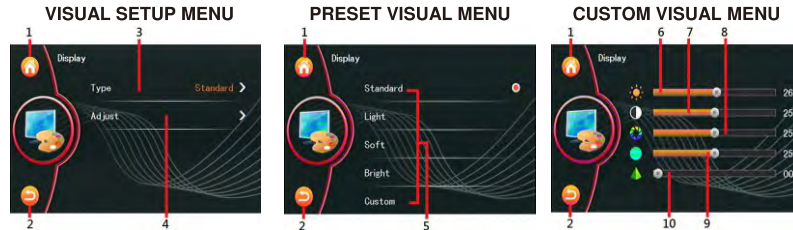

1. Touch to shift screen to **MAIN MENU**.
2. Touch to shift to previous menu or operation mode.
3. Touch to activate **PRESET VISUAL MENU** for preset visual setting.
4. Touch to activate **CUSTOM VISUAL MENU** for visual setting.
5. Touch to select the desired preset visual mode of screen.
(Note: At "Custom" mode, visual setting on brightness, contrast, hue, saturation & sharpness are made by user under **CUSTOM VISUAL MENU**)
6. Hold & slide to adjust brightness of screen.
7. Hold & slide to adjust contrast of screen.
8. Hold & slide to adjust hue of screen.
9. Hold & slide to adjust saturation of screen.
10. Hold & slide to adjust sharpness of screen.

 SYSTEM SETUP

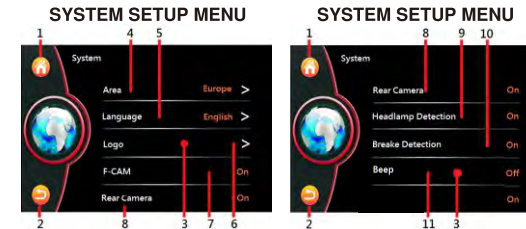

1. Touch to shift screen to **MAIN MENU**.
2. Touch to shift to previous menu or operation mode.
3. Hold & slide to show the hidden setting modes.
4. Touch to activate **AREA INTERFACE** to select the country or area located (for the radio frequency that suits the country or area that located).
5. Touch to activate **LANGUAGE INTERFACE** to select the desired system language on screen.
6. Touch to activate **PASSWORD INTERFACE** to input password for opening scene logo setting.
Remarks: This setting is for ex-factory setting and not available for user setup
7. Touch to turn on or off of front camera input (when front camera connected):
~ when the front camera input is turn on and the car is shifted from backward mode to forward mode, front camera input will be display for 10 seconds
~ the default setting after first installation is off and at this moment, no front camera input will be display when the car is shifted from backward mode to forward mode
8. Touch to turn on or off of rear camera input (when rear camera and the pink wire connected).
9. Touch to turn on or off of headlamp detection of the car (when the orange wire connected with the on/off of car headlamp).
ON mode: when the headlamp of the car turned on, brightness of screen will shift to the default setting by user. User can also adjust the brightness of screen at this mode (refer to **ILLUMINATION BACKLIGHT SETUP** for details)
OFF mode: when the headlamp of the car turned on, brightness of screen will not be affected
10. Touch to turn on or off of allowing watching video during driving (when the brake – brown wire has not been connected).
11. Touch to turn on or off of beep sound when touching on screen for control.

AUDIO SETUP

