

Wireless Charger User Manual

Model: Super P

Thank you for purchasing our products. This manual addresses the safety guidelines, warranty and operating instructions. Please review this manual thoroughly before operating your device.

SAFETY AND WARRANTY

Important Safety Instructions

- Using an ultra-thick protective phone case or a case with magnetic/iron plate is not recommended, as it may affect the wireless charging function.
- Avoid dropping.
- Do not disassemble.
- Do not expose to liquids.
- For the safest and fastest charge, use original or certified cables.
- The product is suitable for moderate climates only.
- The maximum ambient temperature during use of the product must not exceed 60°C.
- Naked flame sources, such as candles, must not be placed on the product.
- If you want to clean the product, use only with dry clothes or a brush.

Warranty


We strive to build our products with the highest attention to detail and craftsmanship. However, sometimes there are occurrences of defect.

We are happy to offer a one-year hassle-free warranty to all our products as we continue to make amazing products. Please contact us if you have any questions about our devices.

Package Contents


- 1 × Wireless Charger
- 1 × USB-C Charging Cable
- 1 × User Manual

At a Glance

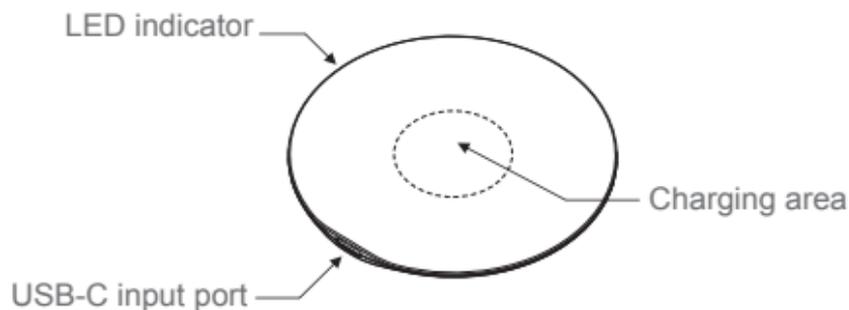


Using the Wireless Charger

1. Plug the USB-C cable into an AC USB adapter (not included) or a charging USB port. Connect the other end of the USB-C cable to the wireless charger. The indicator will turn red.

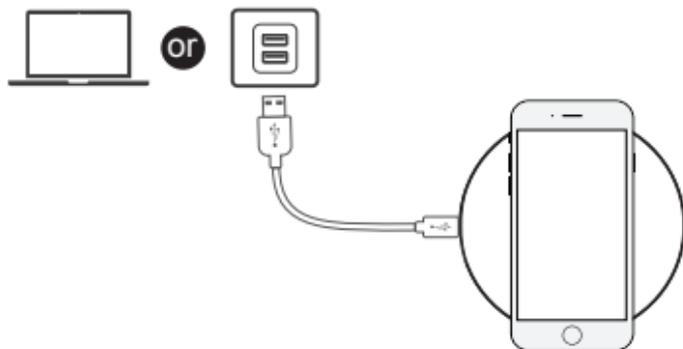

2. Place a supported mobile device in the center of the charging surface.

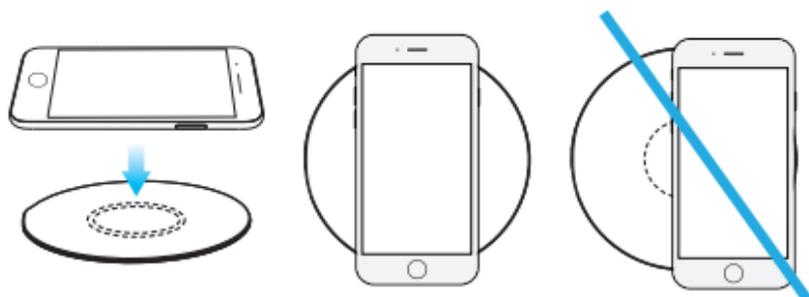

3. The indicator stays blue. You can check the charging icon displayed on the mobile device's screen for the charging status.
4. When the mobile device is fully charged, remove it from the wireless charger.

Notes:

- For some Qi-compatible devices, you may need to buy a Qi-compatible receiver (not included) separately to activate the wireless charging function.
- Do not place foreign materials, such as metal objects, magnets, and magnetic stripe cards, between the mobile device and the wireless charger. The mobile device may not charge properly or may be damaged due to overheating.
- The wireless charger supports charging through phone cases up to 6mm thick. For the optimal performance, remove your protective phone case and other metal or magnetic objects, and place your phone properly in the wireless charging area.
- If you connect a charger to the mobile device during wireless charging, the wireless charging feature will be unavailable.

- The wireless charger supports fast wireless charging. To begin fast wireless charging, place a mobile device that supports fast wireless charging on the wireless charger. Quick charge 2.0 / 3.0 wall adapter (not included) is required for fast wireless charging.

LED Indicator Guide

LED Indicator	Status
Indicator stays red	When connected to power
Indicator stays blue	When charging your mobile device
Indicator goes off	When your mobile device is fully charged
Indicator flashes red and blue alternately	Foreign object detection/Metal detected between your mobile device and your charger
Indicator flashes red	Abnormal temperature detected/Overvoltage
Indicator flashes red and blue alternately	Overcurrent

Specifications

Model	Super P
Input	5V/2A, 9V/2A, 12V/1.67A
Wireless output	5V/1A, 9V/0.89A, 9V/1.12A, 9V/1.67A
Charging distance	≤ 6 mm
Charging efficiency	≥ 65%
Dimensions	100 X 100 X 8.6 mm
Working temperature	-10℃ to 60℃

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.