


boAt
plugging nirvana

ROCKERZ 440
Wireless Bluetooth Headsets

Yo boAthead

Whether it's plugging into music, good times, rhythm or even yourself. It's time to get your game on, and sail with your boAt onto the shores of Nirvana. Get your boAt on, and become a part of the boAtheads community!

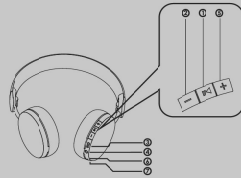

- 1 Multifunction button On/Off
Play
Pause
Call/A Answer/Hang Up
- 2 Volume Up / Track Forward Decrease the volume
Go to previous song
- 3 Micro USB charging port
- 4 3.5mm audio jack
- 5 Volume Down / Track Back Increase the volume
Go to next song
- 6 Microphone
- 7 LED indicator



Acqueline
Acqueline Hernandez

Specifications

Bluetooth version	5.0
Effective transmission rate	10 meters
Battery	300mAh Li Polymer battery
Charging time	About 2.5 hours
Playing time	7 hours
Stand-by time	Up to 100
LED indicator status	Blue LED for power and BT pairing indicator Red LED for charging indicator
Diameter of driver unit	40 mm
Frequency of range	20Hz-20KHz
Sensitivity at 1KHz	110±5 dB
Impedance	32±15% Ω
Distortion	≤1% at 1 KHz
Rated power output	0mW
Net Weight	Approx. 145g

Accessories

- MicroUSB charging Cable
- 3.5mm audio cable
- Instruction manual



Guru Randhawa
Guru Randhawa

Wireless headphone
Model: boAt Rockerz 440

TO POWER ON

Press and hold the Multifunction button (1) to turn the headphones on. The LED indicator will flash BLUE/RED to indicate that it has powered on.

TO POWER OFF

Press and hold the Multifunction button (1) to turn the headphones off. The LED indicator will stop flashing once it has been switched off.

Using headphones in Passive Mode (Wired)

You can use headphones as a wired headphone to save battery. Simply connect one end of the 3.5mm AUX cable to the bottom of the ear cushion and the other end to your phone or device.

Note: Inserting an audio cable disables wireless functionality



How to fold the headphone:



Important Safety Responsibility

Listen Responsibly

To avoid damage to your hearing, make sure that the volume on your music player is at an appropriate level when you are plugging into Nirvana. After wearing the headphones, gradually turn up the volume until you reach a comfortable listening level. Exposure to any noise levels at or above 85 dB can gradually lead to a loss of hearing. Therefore, listening sessions that are at high volumes should not be for too long. If you are planning to use the headphones for extended periods of time, it is safer to keep the volume at a low level.

Use Responsibly

Do not use headphones when it is unsafe to be wearing them, such as while operating a vehicle, crossing a street, or during any activity where full awareness of your surroundings is required. This is because it is dangerous to drive while wearing headphones as it decreases your ability to hear sounds like another car's horn or an emergency vehicle's sirens. Therefore, please avoid wearing your headphones while driving.



Ka tik Aaryan
Ka tik Aaryan

TO CHARGE THE HEADPHONES

Use the Micro USB cable and connect the headphones to either your computer or the adaptor. A red LED indicator will light up when the headphones are put to charge, upon reaching full battery this light will switch off.

TO PAIR

1. Make sure that the device you wish to connect with (phone, laptop, music device) is turned on and within a meter of the headphones
2. Hold down the Multifunction On/Off (button 1) for about 3 seconds until the LED light starts to flash BLUE at a rapid rate
3. Activate the Bluetooth feature on your phone or device and set it to search for Bluetooth devices (Discoverable)
4. Select 'boAt Rockerz 440' from the list of found devices
5. If you are asked for a passcode, enter '0000' to pair the headphones to your device.
6. Once successfully paired, the LED light will flash BLUE once every few seconds

PLAYBACK / CONTROLS

1. Press the Multifunction button Play/Pause (1) to start and pause track.
2. Press (button 2) to increase volume. Press and hold the button to play the next track.
3. Press (button 3) to decrease volume. Press and hold the button to play the previous track

Note: The controls will no function while the headphone is charging.

TO CALL

1. To answer an incoming call, press the Multifunction Button (1) once
2. To end a call, press the same button once
3. To decrease or increase the volume during a call, you can do so using either the (2) or (3) button



Hardik Pandya
Hardik Pandya

FCC STATEMENT

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.