

Cover

Remark

IMP-R01W User Manual



Name and Function of parts

Remark

[Top]



SOS key
Headset port

[Front]



Front camera
Receiver
Proxy sensor / Light sensor
LED indicator
Touch Screen

Navy key
Number key


Main Mic

[Bottom]



USB port

Remark

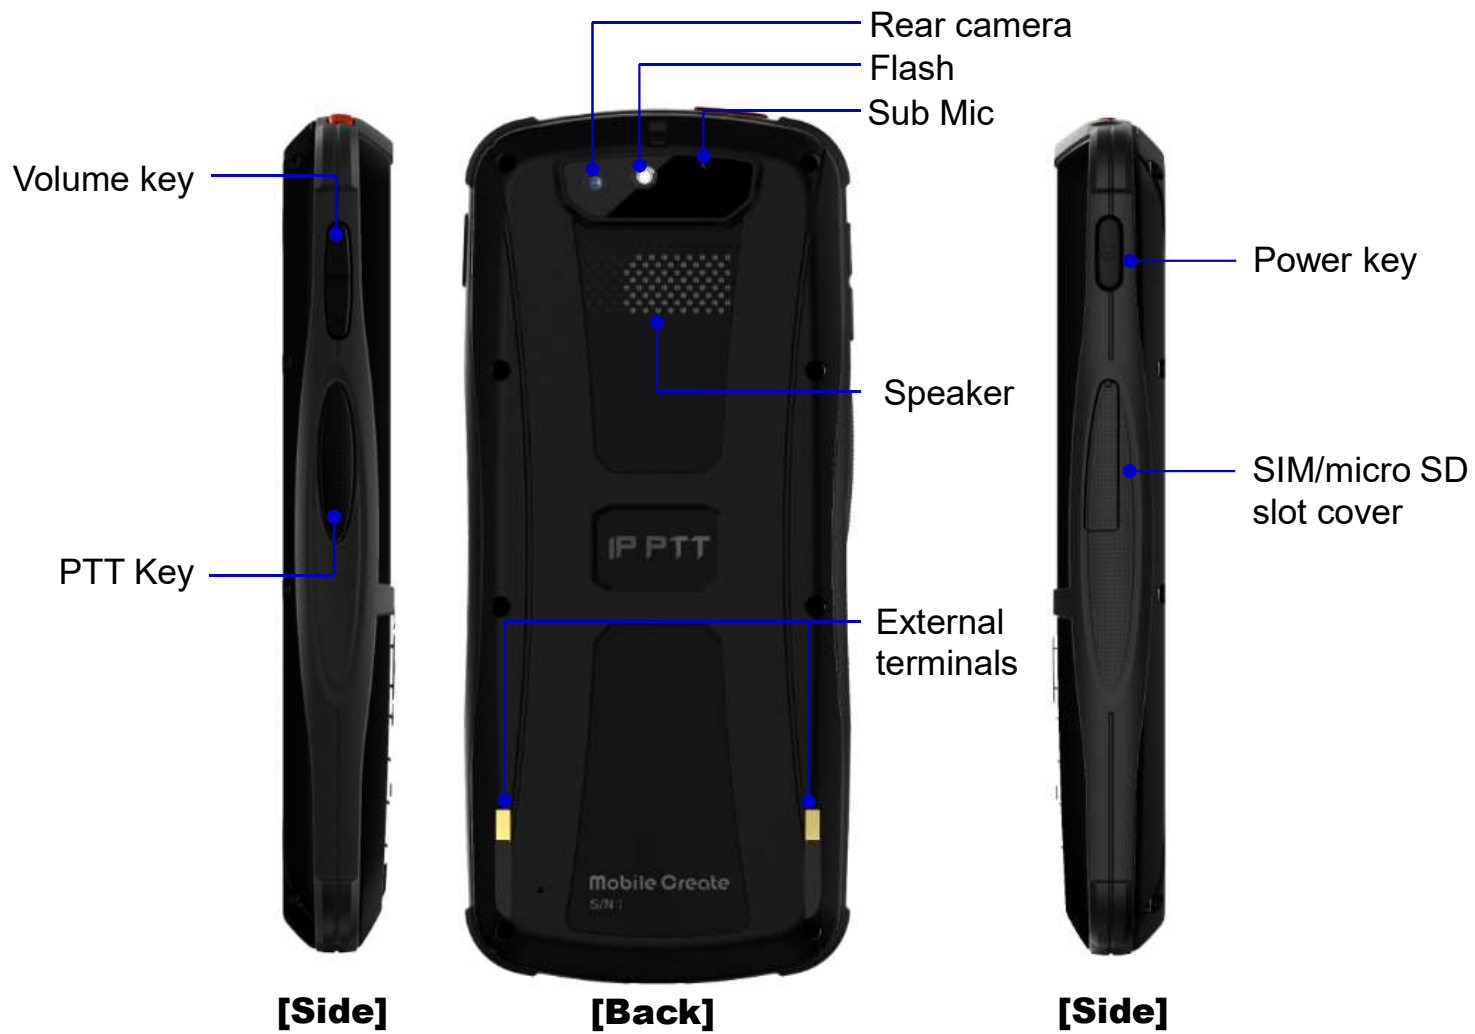


Setting

Remark

Insert SIM card

Insert the Nano-SIM card and use phone.

1. Open the SIM / microSD slot cover on the right side of your phone.
2. Using the SIM remover, slide it into the hole on the side of the phone and the SIM / microSD Tray will come out.
3. Place the SIM and microSD card on the removed tray, and then push the tray until it clicks into the phone slot.

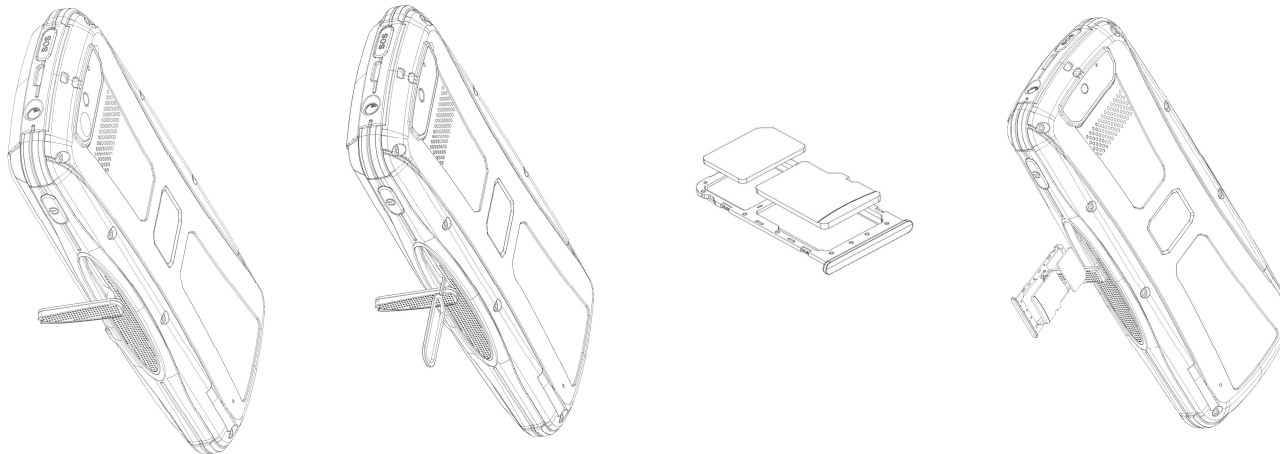


4. Close the SIM / Micro slot cover.

WARNING: Ensure that the SIM / microSD slot cover is properly sealed to maintain waterproof performance of the phone.

Battery charging

Remark

1. Connect the 5-pin connector of the micro-USB cable to the USB charger port on the bottom of the phone.

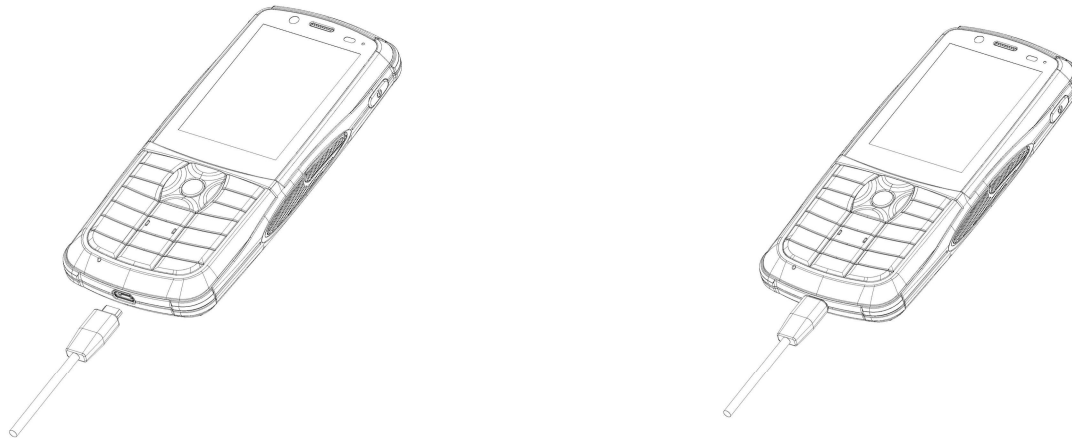

2. Plug the other end of the USB cable into the AC adapter and plug the adaptor into the concert.

WARNING: Only use chargers approved by the device. Using an incompatible charger or modifying the charger port may damage the unit and void your warranty.

WARNING: Make sure that the 5-pin connector on the micro-USB cable is connected correctly or charging is working properly.

Using phone

Power on / off

Power on

- ▶ Press and hold the Power key  until the screen turns on.

Power off

- 1.Press and hold the Power key  until you see the phone option.
- 2.Select power off to power off phone.

Display on / off

Display on



- ▶ Press the front key and the power key to display the screen.

Display off

- ▶ To turn off the screen, press the Power key.



Calling

Calling with keypad

- 1.Press the number key on the home screen to run the dial pad.
- 2.Press the number key of the number you want to call.
- 3.To edit the entered number, press the  cancel key.
- 4.To make a call, press the  call key.



Remark

Calling with the dial pad

1. Touch the  dial icon on the Home screen.
2. On the dial pad, tap the number you want to call.
3. Press the  call icon on the dial screen to make a call.

Receive calls

Receive calls on the keypad

1. On the answer calls screen, press the  call key.
2. To end the call, press the  end call key.
3. If you do not want ring tones, press the volume key.

Answer a call with the dial pad

1. On the call screen, tap the call icon.
2. Press the reject icon to stop receiving calls.

Remark

Display setting

Remark

Add a widget to your home screen

- 1.Press and hold the home screen background.
- 2.Touch Widgets to find the widget you want to add.
- 3.Drag and drop the widget you want to add to the home screen you want to add.

Move icons on the Home screen

- 1.On the Home screen, touch and hold the icon you want to move.
- 2.Drag the icon you want to move to the desired area to set it.

Delete icon on home screen

- 1.Drag the icon you want to delete to the top of the screen and move it to "X" delete.
- 2.Release the hand when the color of the icon changes

Change wallpaper

- 1.Press and hold the home screen background.
- 2.Select Backdrop and select My Photos to search for the image you want to use.
- 3.Select the image you want to use, and then tap Set wallpaper.

Product Warranty

This product is officially imported and sold by our company.
The guarantee quality is as follows.

■ Customer Service Guide

Before using the product, please refer to this manual.

■ Notification before using

If the internal battery is discharged during the initial operation, the unit may not be turned on. This is not a product defect, please charge the AC adapter for more than 30 minutes and turn on the power.

The LCD of your product may cause red, white, or other pixels to appear, but this is inevitable and unfavorable in the LCD manufacturing process.

The operating time of the battery depends on the usage environment of the system, and the battery is a consumable item and its usage time decreases over time.

If the usage time decreases rapidly, please use the service center after replacement.

The memory provided to the mobile phone is used for the OS capacity and the software required to run the product, so the actual memory is smaller than the total memory.

Memory will vary depending on your environment and may vary depending on other usage environments such as software updates.

■ Warranty period guide

Warranty period refers to the period during which the manufacturer or the seller of the product provides free repair service to the defective quality performance function that occurs naturally under normal conditions.

■ Product Warranty Period

The warranty period of the product is two years from the date of purchase.

The warranty period is based on the date of purchase. If the date of purchase can not be confirmed, the warranty period shall be from the date of manufacture or one month from the date of shipment.

Remark

■ **Even under the warranty period, the following cases are not eligible for free service.**

- User carelessness, negligence or carelessness
(Careless handling, dropping, shock, breakage, flooding, unreasonable operation, etc.)
- The structure, performance, and function of the product may be changed by us or by a person other than the technician modified, modulated or arbitrarily disassembled
- Replacement of consumable parts that have degraded performance due to normal use
- Failure of the product due to natural disasters (fire, salt, earthquake, flood, lightning, etc.)
- Fault due to power supply failure or faulty connecting device
- Faults that do not fulfill the precautions in the manual
- Inadequate use / storage environment (such as high temperature and humidity, storage in an enclosed vehicle in summer, etc.) failure during use
- If the user breaks down due to arbitrary manipulation (such as routing) of software and hardware
- If a malfunction occurs with consumables or accessories not specified by us
- If a malfunction occurs by installing or using an application that is not guaranteed by us

■ **Precautions for repair request**

In the event of a product malfunction, the software and data installed by the user must be backed up after the backup. We are not responsible for any changes or deletions to the software and data that occur during the repair process, and the product may be in an initial condition when the repair is complete. You must remove hardware, software, features, parts, options, options, and other attachments that were not attached to or installed with the product at the time of purchase.

If you do not do so, we will not be responsible for any loss or damage.

Damage due to accessories not included in the product, surface damage, damage caused by external shocks, damage caused by software or data, or use of removable storage media is not guaranteed.

Remark

This warranty does not apply when there is an error in operation resulting from the use of this product in connection with a third party product, accessory or ancillary equipment, or when we determine that the product itself is free from defects.

■ Customer service center

- **Homepage :**
- **Tel :**
- **Email :**

■ Precautions

- (When new / device is changed) Reboot 2-3 times with USIM installed.

Remark

Remark

FCC RF EXPOSURE INFORMATION:

WARNING!! Read this information before using your device

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this device complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the device, or result in violation of FCC regulations. Do not use the device with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back/front of the device kept 1cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 1cm must be maintained between the user's body and the back/front of the device, including the antenna,. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. At the time of equipment certification there is body-worn accessory available in the market supporting a separation distance of 1 cm which must be used in Hot Spot and Body worn operation.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your Rugged IP PTT is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless devices. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSIC95.1> (1992) / <NCRP Report 86> (1986) / <ICNIRP> (1999)

Remark

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your device (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your device complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the device and may violate FCC regulations.

Remark

Remark

RF Exposure Information:

This product is compliance to FCC RF Exposure requirements and refers to FCC website <https://apps.fcc.gov/oetcf/eas/reports/GenericSearch.cfm> search for FCC ID: 2AR6HIMP-R01W to gain further information include SAR Values.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Remark

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Do not use the device with the environment which below minimum -10°C or over maximum 50°C , the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device is acting as host and operating in the 2.4 GHz (2412 ~2462 MHz) band. Ad Hoc function is supported but not able to operate on non-US frequencies.

Remark