### **INSTALLING INTO BACKPACK**

• Connect Right Angle USB Adapter Insert included right angle USB adapter into an open USB in the back of the speaker. Unzip speaker pocket and connect backpack USB cable to the USB right angle adapter.

\*required to prevent cable from pinching and damaging USB ports on the speaker.

Once connected, insert speaker into the mesh speaker pocket and enjoy!

• USB Charging from the Backpack Power bank features do not require you to turn on the bluetooth speaker. Plug your device to recharge in the backpack USB port and USB power will automatically turn on.





Power Pack Bluetooth Speaker & 10,000mAh Power Bank

FCC ID: 2AR6TSWBSPB001

www.simplewerx.com

### **LEGAL & SAFETY INFORMATION**

WARNING: PLEASE READ THESE SAFETY WARNINGS AND CAUCTIONS CAREFULLY TO ENSURE YOUR PERSONAL SAFETY AND PREVENT PROPERTY DAMAGE.

FIRE AND ELECTRIC SHOCK HAZARD Do not expose your Power Pack to liquid, moisture, humidity or rain. Do not use near a bathtub, sink, sauna, or pool.

Do not drop, disassemble, crush, bend, deform, puncture, shred, microwave, incinerate, paint or misuse Power Pack.

Do not expose to extremely high temperatures, direct sunlight for extended periods of time, or open flame.

## **POWER BANK**

- USB TYPE-A Output 2x USB Ports 5VDC 2.1Amp used for charging mobile phone or tablet.
- Micro USB Input 1x micro USB port for re-charging power pack.
- Battery Capacity 10,000mAh Lithium Polymer Battery @ 3.7V
- (Battery) Battery Button w/ Indicator LED Press to check Power Bank Power Level by LED 1=25%, 2=50%, 3=75%, 4=100%

### **BLUETOOTH SPEAKER**

- (On / Off) Power Switch Toggle On and Off to power the speaker.
- (Bluetooth) Bluetooth Button w/ IndicatorLED Press the Bluetooth Button to begin pairing, the LED indicator will begin to flash Red/Blue.

If your device is already paired with the speaker, press the bluetooth button to connect. Pairing is not automatic incase you want to use just the power bank features.

- (- +) Volume and Track Control Button Quick press for volume change, Hold for Track change.
- ( Phone ) Phone Icon Button
   Press to answer/hangup calls using the speaker.
   Press during media playback to Pause and Play.
- Speaker 2x 5 watt rate speakers + passive bass.

# FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to

which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help.

\* RF warning for Portable device: The device has been evaluated to meet g eneral RF exposure requirement. The de vice can be used in portable exposure condition without restriction.