

## X18S Wireless Earbuds User manual (Eng)



It is recommended to read this user manual carefully and keep it for future reference.

### Product overview:



### Specifications:

- BT Version: 5.0
- Operating distance: Up to 10 meters
- Frequency: 2.402-2.48GHz
- Earphones: Lithium polymer battery 50mAh
- Charging station: Lithium polymer battery 500mAh
- Charging voltage: 5V
- Working Time: 2-3h
- Standby Time: 200h
- Charging Time: 1h
- SNR: 92dB
- Impedance: 16ohms
- Distortion: less than 1%
- Compatible with A2DP1.3/HFP1.6/HSP1.2/AVRCP1.6/DI1.3
- Charging cable included

### Charging:

#### Charging station

Use the cable provided for charging. Connect USB cable to computer / AC adapter and connect the other end of the cable into the charging port of the charging station.

During charging the left indicator light will turn red. When the charging station is fully charged the red indicator light changes to green.

Note: if the earphones are in the charging station, both will be charge at the same time.

#### Earphones

Place the earphones into the charging station, close the lid and slide the switch button to "ON" position. While the charging station has power, the right blue indicator light will stay on. If the power runs out, the indicator light will turn off.

During charging the indicator light of the earphones will turn red. When the earphones are fully charged the indicator light changes to blue.

When fully charged, slide the switch button to "OFF" position.

### Operation:

You can use one or both earphones at the same time.

#### Simple synchronization

Hold the multifunction button to power on the earphone until the red and blue indicator light starts flashing. This indicates that the device is ready to be paired.

From the Bluetooth menu of your device, search for new devices and select "X18S" to pair. Once they are paired successfully, the light indicator will turn off.

#### Controls:

##### Answer/End call:

Short press the multifunction button.

##### Reject call:

Long press the multifunction button.

##### Redial:

Press the multifunction button twice consecutively to redial the last phone number.

##### Play/Pause music:

Short press the multifunction button.

**Next Track:** Press the multifunction button twice consecutively.

### Double synchronization

**Note:** Only for the first connection. For future connections, the earphones will be synchronized automatically.

Hold the multifunction button to power on both earphones at the same time until the red and blue indicator light starts flashing. This indicates that the devices are ready to be paired.

Press twice the multifunction button on one of the earphones to enter synchronization mode.

Once synchronized, the red light on this earphone (1) will continue to flash, while on the other earphone (2), the blue light will continue to flash. This indicates that both earphones have been synchronized correctly.

From the Bluetooth menu of your device, search for new devices and select "X18S" to pair. Once they are paired successfully, the light indicator will turn off.

Hold the multifunction button, on any of the earphones to power off the device.

### Controls:

#### Answer/End call:

Short press the multifunction button of any earphone.

#### Reject call:

Long press the multifunction button of earphone 1.

#### Redial:

Press the multifunction button, of earphone 1, twice consecutively to redial the last phone number.

#### Play/Pause music:

Short press the multifunction button of any earphone.

**Next Track:** Press the multifunction button, of earphone 2, twice consecutively.

**Note:** The volume must be adjusted from your mobile device.

### Troubleshooting

Fault	Solution
Unable to pair up with other devices.	1. Check whether the earphone is still on the process of search or switch it off and on again. 2. There are too many Bluetooth devices in the proximity that cause difficulty in connection. Turn off other Bluetooth devices. 3. Make sure your earphone is in "Pairing Mode".
The sound is low or distorted.	4. Check the Bluetooth device's volume and then adjust it to an appropriate level. 5. Recharge the battery.
Occasionally the music stops.	6. Check whether the earphone effective transmission range is exceeded or if there is an obstacle standing between the earphone and other Bluetooth devices.

### Warnings:

1. Do not expose this product to rain or damp conditions.
2. Prevent this item from falling as it could cause serious damage.
3. Do not dismantle, repair or modify this product by yourself, contact an authorized specialist.
4. In order to avoid any risk, do not dispose of this product inappropriately or throw it into the fire as there is a built-in Lithium battery.
5. Clean it with a dry cloth.
6. Do not place this item near sources of heat or expose to direct sunlight.
7. Do not insert any metal objects into this device as there is a risk of causing a short circuit in the unit.
8. Excessive sound pressure from earphones and headphones can cause hearing loss.



This symbol both in the product and its user manual indicates that at the end of the devices electrical life, it should be recycled separately from your household waste. There are adequate means to dispose of this material for proper recycling. For more information, contact your local authorities.

CE  
MADE IN CHINA

### FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
-Reorient or relocate the receiving antenna.  
-Increase the separation between the equipment and receiver.  
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
-Consult the dealer or an experienced radio/TV technician for help.

\* RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.