

muze

# BLAST MINI

WIRELESS TAILGATE SPEAKER

BC



8 Watt  
Output



Light Up  
Speaker

USER'S MANUAL | MUZ7005

# IMPORTANT SAFETY PRECAUTIONS

When using your WIRELESS TAILGATE SPEAKER basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR SPEAKER.
2. Do not allow children or the infirm to play with your speaker without adult supervision.
3. Do not expose your speaker to excessive heat, flames or fire.
4. Always press all buttons or switches carefully. Do not manhandle your speaker.
5. Do not use in extremely dry environments, as this can lead to static discharge during usage.
6. Do not expose your speaker to temperatures above 40°C. Keep out of direct sunlight.
7. Do not attempt to repair this product yourself. Contact a qualified service center if your speaker is in need of service.
8. Do not drop, puncture or expose your speaker to excessive trauma.
9. Your speaker is not intended for commercial use.
10. Do not place near objects that generate a strong magnetic field.
11. Unplug your speaker when not in use for long periods of time or during lightning storms.
12. Use a soft cloth to clean your speaker. Never use any harsh chemicals or detergents. Make sure your speaker is dry before charging.
13. Please recycle or dispose of your speaker properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your speaker for further information.



CAUTION

## BATTERY WARNING:

- The device is equipped with an integrated lithium battery. The battery cannot be replaced. Do not attempt to remove the battery from the device.
- Do not dispose of in fire or expose to excessive heat.
- Do not crush, puncture, incinerate, or short circuit external contacts.
- Please recycle or dispose of the battery properly. Contact your local recycling facilities and/or the manufacturer for further information.

# INTRODUCTION

Thank you for purchasing the Muze Blast Mini Bluetooth Speaker, item MUZ7005. You can use your speaker with most smartphones and Bluetooth devices to stream music wirelessly. Your speaker also emits an exciting array of soothing lights. In order to get the best results, please read this manual first before using your speaker.

## PACKAGE CONTENTS

- Muze MUZ7005 Blast Mini Bluetooth Speaker
- USB Charging Cable
- User's Manual with Warranty Information

## SPECIFICATIONS

**Bluetooth Specification:** V4.2

**Bluetooth Range:** Up to 33 feet

**Power Supply:** DC 5V

**Output Power:** 8 Watts

**Subwoofer Size:** 8 Inches

 
**Battery Type:** 3.7V, 1800mAh Lithium Ion Battery

**Charge Time:** Approximately 1-2 Hours


**Play Time:** Approximately 1-2 Hours\*

\*Applicable at 50% of maximum volume. Results will be lower when volume is higher.


# A QUICK LOOK AT YOUR DEVICE

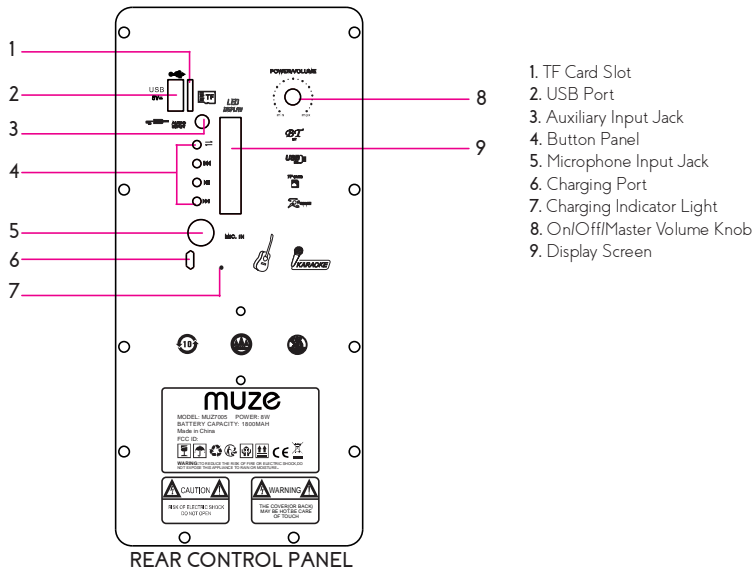


# CHARGING YOUR SPEAKER

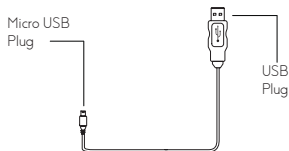 

 
1. The USB charging cable has a Micro USB plug and a standard USB plug.

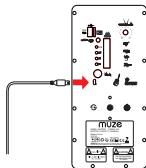

 2. Insert the USB charging cable's Micro USB plug into the DC 5V charging port on the back of your speaker.



 3. Insert the USB charging cable's standard USB plug into the USB port of a computer or suitable USB charging adapter.



(red) = Charging



Display Screen

Battery Symbol


4. The Charging Indicator Light turns red while the speaker is charging. A battery symbol will appear on the display screen when your speaker is powered on to indicate how much battery power is remaining.

## NOTES:

 
- Before first using your speaker, charge the battery for at least 5 hours. Each subsequent charge can take approximately 1-2 hours to complete when the battery is fully drained.
- Remove the charging cable once charging is complete.
- Overcharging could reduce the life of the battery.
- A charged battery will lose its capacity if it is not used on a regular basis.

Important: To avoid a complete discharge of the battery, charge your speaker at least once every six months.

# POWERING ON YOUR SPEAKER

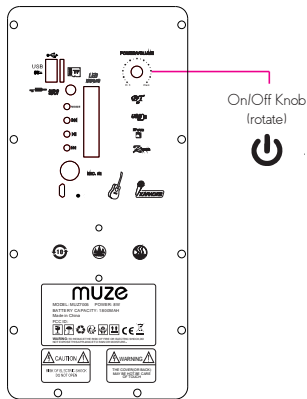

 1. Rotate the ON/OFF Knob to the right in order to power on your speaker. Rotate it all the way to the left to power off your speaker.

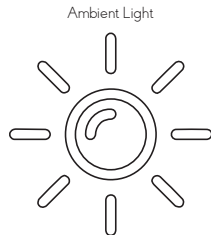

2. Once your speaker is powered on, your speaker's subwoofer will illuminate, displaying an exciting array of colors.

# SELECTING A MODE



Once your speaker is powered on, you can press the Mode Button repeatedly to choose where your speaker will play music from. You can select from the following modes as shown on the Display Screen:

**BLUE:** Select this mode in order to play music from a Bluetooth sound source. Make sure this mode is selected before pairing your Bluetooth audio device with your speaker.

**AUX:** Select this mode in order to play music from an audio source connected to the speaker's Auxiliary Input Jack.

**USB:** Select this mode in order to play music from a thumb drive or similar device inserted into your speaker's USB Port.

**SD:** Select this mode in order to play music from a TF or Micro SD memory card inserted into your speaker's TF Memory Card Slot. Your speaker can play .MP3, or .WAV music files stored on your memory card.

**Radio (station displayed):** Select this mode to listen to FM radio stations. When selected, the station you are tuned in to will display on the screen. Press and hold the **||** button in order to search for available stations. Or press the **◀◀** button, or **▶▶** button repeatedly to toggle through stations.

# BLUETOOTH PAIRING

 


On/Off Knob  
(rotate)



1. Rotate the ON/OFF Knob to the right in order to power on your speaker.

Mode Button



BUTTON CONSOLE

2. Press the Mode Button repeatedly until you are in Bluetooth mode.



3. 'bLUE' will appear on the Display screen to indicate that you are in Bluetooth mode.



Pairing Mode  
FLASHING  
bLUE bLUE bLUE bLUE

4. The bLUE symbol will flash to indicate that your speaker is ready to be paired.



5. Go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as 'MUZ7005.'




Paired  
RED  
bLUE


6. The bLUE symbol will stop flashing and keep shining steadily to indicate that your speaker is paired with your phone.




# USING THE BUTTON PANEL

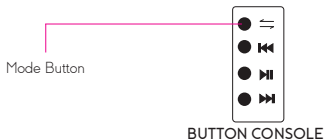 

 
1. Press the Mode Button repeatedly to toggle through the various modes. See page 6 for more information on selecting modes.

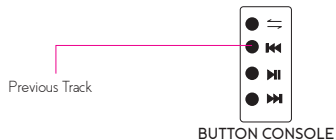

 2. Press the Previous Track Button to go to the last song that was played from a playlist. This feature may not be available when listening to music from a device connected through the Auxiliary Import Jack.

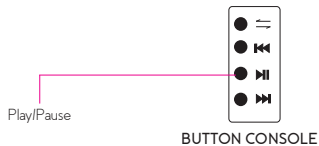


 3. Press the Play/Pause Button to play or pause the song currently queued in your playlist.

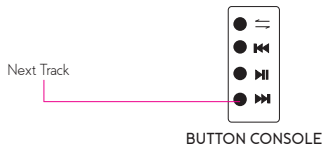


4. Press the Next Track Button to go to the next song on your playlist. This feature may not be available when listening to music from a device connected through the Auxiliary Import Jack.

# VOLUME AND SOUND CONTROL

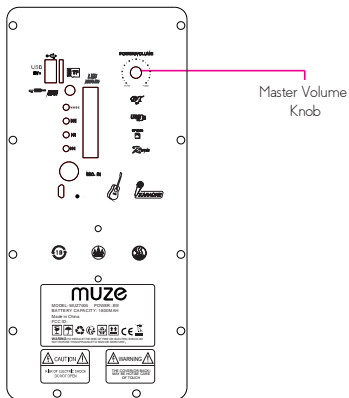 

Once powered on, rotate the speaker's Master Volume Knob to the right to increase the master volume or to the left to decrease the master volume.

# MICROPHONE INPUT

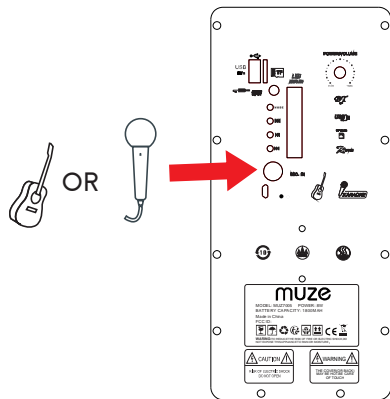 

Plug a microphone (not included) into the Microphone Input Jack and you can sing along while your favorite songs are playing. You can also plug in a guitar (not included) and strum along with your music.

# MAINTENANCE AND CARE

- Before using your speaker, inspect the ports to make sure that they are clear of dust and debris before charging or inserting any cables.
- Use a soft cloth to clean your speaker. Never use any harsh chemicals or detergents. Make sure your speaker is dry before using.
- When your speaker is not in use, it should be stored in a cool, dry place.
- Never tug or yank on either any cables while they are connected to your speaker. Connect and disconnect these cables as carefully as possible.
- Never expose your speaker to high temperatures, extreme cold, high humidity or excessive moisture or water.
- Please recycle or dispose of your speaker properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your speaker for further information.



# FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# SAKAR ONE YEAR WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

## What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call 1-877-397-8200 or visit our website at [www.sakar.com](http://www.sakar.com).

To receive warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepared.

## **SAKAR ONE YEAR WARRANTY (CONTINUED)**

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR, ITS MANUFACTURERS, OR SAKAR INT. BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

## FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.



The logo for 'muze' is centered within a white square. The word 'muze' is written in a lowercase, sans-serif font. The 'm' and 'z' are bolded, while the 'u' and 'e' are in a regular weight. The 'e' has a distinctive shape with a horizontal bar that extends to the right and then curves downwards.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sakar International is under license. Other trademarks and trade names are those of their respective owners.