



We'd love to hear from you. Scan with your Walmart app and let us know what you think.

100008045



681131307765




36" 2.1 Soundbar with built-in Subwoofer

User Manual

Battery Replacement for the Remote Control the First Step

01


Lift up the back cover to open the battery compartment of the remote control.

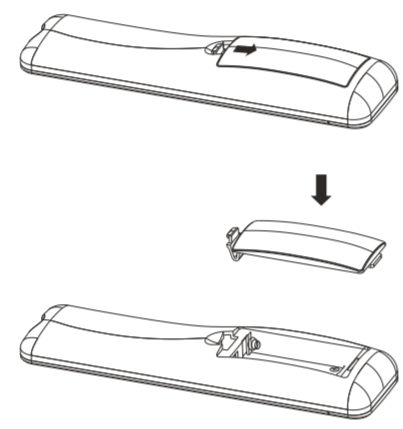

Battery Replacement for the Remote Control the Second Step

02


Insert two AAA size batteries. Make sure the (+) and (-) ends of the batteries match the (+) and (-) ends indicated in the battery compartment.

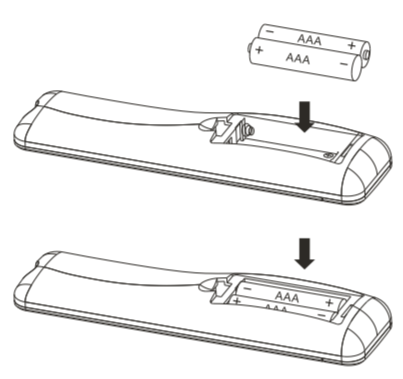

Battery Replacement for the Remote Control the Third Step


03

Close the battery compartment cover.

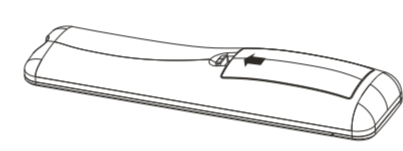

Remote Control Operation Range

The remote control sensor on the front unit is sensitive to the remote control's commands up to a maximum of 15' away and within a maximum of a 60 arc.

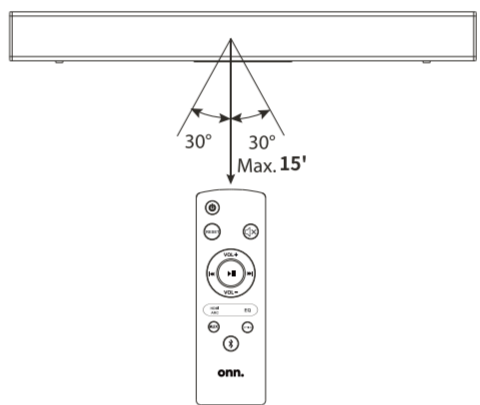

WARNING

Do not ingest the battery. Chemical Burn Hazard (The remote control supplied with this product contains a button cell battery. If the button cell battery is swallowed it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body seek immediate medical attention.

Notes for battery disposal

The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste. For more information, please contact the local authority or your retailer where you purchased the product.

The above mark is in compliance with the Waste Electrical and Electronic Equipment Directive 2012/19/EU (WEEE). The mark indicates the requirement NOT to dispose the equipment including any spent or discarded batteries as unsorted municipal waste, but use the return and collection systems available. If the batteries or accumulators included with this equipment display the chemical symbol Hg, Cd or Pb, then it means that the battery has a heavy metal content of more than 0.005% Mercury or more than 0.020% Cadmium or more than 0.010% Lead.

In the unlikely event of a problem developing, please contact the store where you purchased your equipment. We continually strive to improve our products; specifications may change without prior notice. For advice on where to purchase accessories, please contact the store where you purchased your equipment. All trademarks are the property of their respective owners and all rights are acknowledged.

Service

How to get service:

- Call 1-800-925-6278, contact Walmart Inc. Walmart.com, Bentonville, AR 72716
- Please have your original purchase receipt or proof of purchase (bill of sale or receipted invoice), the unit's date of purchase, place of purchase and model/serial number ready. The model/serial number information can be found on the back of your unit.
- A representative will troubleshoot your problem over the telephone. If it is determined that your unit requires service, the service location will be at the sole discretion of Walmart, Inc. based upon the Walmart, Inc. Limited Warranty Statement.
- At the sole discretion of Walmart, Inc., items will either be repaired at an Authorized Service Centre or directly exchanged for a new or refurbished/remanufactured unit. If repaired at an Authorized Service Centre, a pre-paid shipping label will be provided and Walmart, Inc. will pay for return shipping.
- Proof of purchase in the form of a bill of sale or receipted invoice from an Authorized Dealer which is evidence that the product is within the warranty period must be presented to obtain warranty service.
- PRE-AUTHORIZATION MUST BE OBTAINED BEFORE SENDING ANY PRODUCT TO AN AUTHORIZED SERVICE CENTER.
- A unit purchased or serviced outside the USA.
- A unit sold as "As-Is", "Factory Reconditioned", "Factory Re-Certified", or "Refurbished" condition or with faults.
- Acts of Nature or God, such as but not limited to earthquake or lightning damage.
- Special, incidental or consequential damages.

FCC Statement:

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- FCC RF Radiation Exposure Statement Caution: To maintain compliance with the FCC's RF exposure guidelines, place the product at least 20cm from nearby persons.
- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

Warranty

Walmart, Inc. Limited Warranty

LIMITATION OF WARRANTY

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. NO VERBAL OR WRITTEN INFORMATION GIVEN BY WALMART STORES, INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A GUARANTEE OR IN ANY WAY INCREASE OR MODIFY THE SCOPE OF THIS WARRANTY.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. WALMART STORES, INC. SHALL NOT BE LIABLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF ARKANSAS, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY AND WARRANTY PERIOD SET FORTH ABOVE. THIS WARRANTY IS SUBJECT TO CHANGING WITHOUT NOTICE.

How State Law relates to this warranty


- Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

If you purchased your unit outside the United States or seek warranty coverage outside the United States, this warranty does not apply. Contact your store for warranty information.

Service calls which do not involve defective materials or workmanship are not covered by this warranty. Costs of such service calls are the sole responsibility of the purchaser.

What's in the Box?


Check to make sure you have everything below.

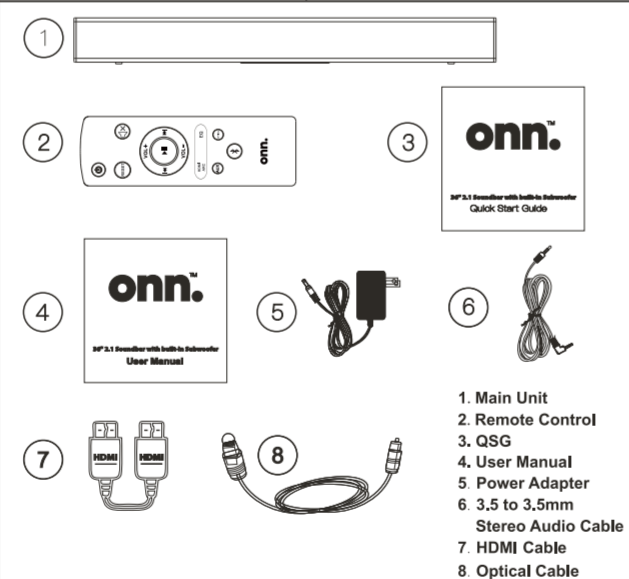

- Main Unit
- Remote Control
- QSG
- User Manual
- Power Adapter
- 3.5 to 3.5mm Stereo Audio Cable
- HDMI Cable
- Optical Cable

Product Overview(Front view)


01

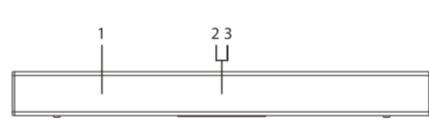

- Speaker
- LED Indicator
 - Red when the unit is in STANDBY mode.
 - Lights up yellow in AUX mode.
 - Lights up green in OPTICAL mode.
 - Lights up blue in BLUETOOTH mode.
 - Lights up white in HDMI(ARC) mode.
- Remote Control Sensor
 - Receives signal from the remote control.

Product Overview(Side View)


02

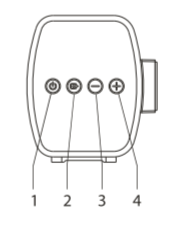

- Button Switches the unit between ON and STANDBY modes
- SOURCE button Selects the input source.
- VOL- button Decreases the volume.
- VOL+ button Increases the volume.

Product Overview(Back View)


03

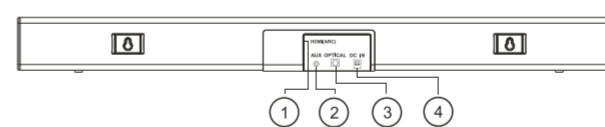

- HDMI(ARC) Port
- AUX IN Port
- OPTICAL Port
- DC IN Port


Remote Control Overview

- ⏻ Button switches the unit between ON and STANDBY modes.
- ⏪ Button to reset device to the factory default settings.
- VOL+ button increases the volume.
- ⏮ button skip to previous track in Bluetooth mode.
- VOL- button decreases the volume.
- Press HDMI ARC button, device will play audio from HDMI ARC input.
- Press AUX button, device will play audio from aux input.
- ⏸ button mutes the unit or resumes the sound.
- ⏩ button to play/pause music in Bluetooth mode.
- ⏭ button skip to next track in Bluetooth mode.
- Press EQ button to select music, movie and talk EQ mode.
- Press OPTICAL button, device will play audio from optical input.
- Bluetooth Connection switches to Bluetooth mode, press and hold to enable Bluetooth pairing. If there is an existing connection then disconnect the devices, unit will enter pairing mode.

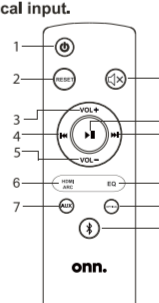

Connections(Using the OPTICAL Connection)

 
Use an optical cable (included) to connect the TV's OPTICAL OUT Port to the soundbar's OPTICAL Port.

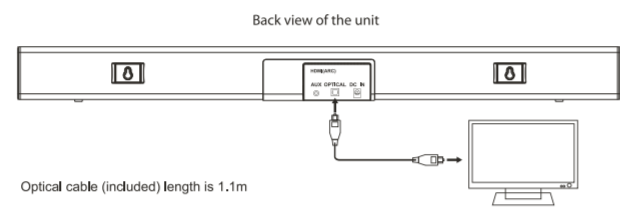


Optical cable (included) length is 1.1m

Using the Aux Connection

 Use a 3.5m RCA stereo audio cable (not included) to connect the TV's audio output Port to the soundbar's AUX IN port.

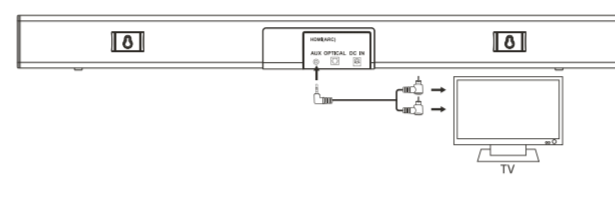

 
Use a 3.5m stereo audio cable (included) to connect the TV's headphone Port to the soundbar's AUX IN port.

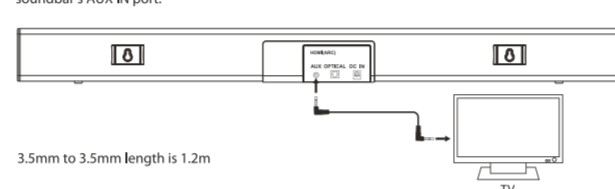

3.5mm to 3.5mm length is 1.2m

Using the HDMI Connection

 Use a HDMI to HDMI cable (included) to connect the TV's HDMI(ARC) port to the soundbar's HDMI(ARC) port. Please note that the soundbar has HDMI CEC function.

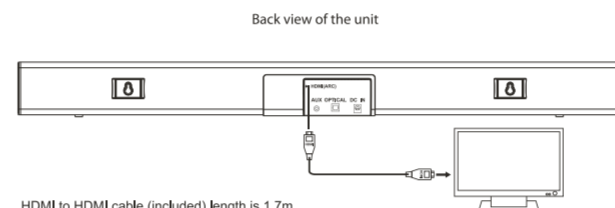

HDMI to HDMI cable (included) length is 1.7m

 
Using the Bluetooth Connection

- Turn on the power, press () on the unit or remote control to switch the unit to ON mode with a prompt tone.
- Keep the distance of the soundbar and your mobile phone, PC tablet or other Bluetooth enabled device within 1 meter. The closer, the better.
- Ensure Bluetooth is enabled on your device and that your device is discoverable.
- Select the Bluetooth mode on the soundbar:
Using the remote control, press the Bluetooth button. The indicator light on the soundbar will be flashing blue.
Alternatively, press the source button on the soundbar until the indicator light is flashing blue.
- Select the Bluetooth search function on your device. Your device should discover the soundbar which is called "Onn 30P 2.1 soundbar".
- Select pairing mode:
Using the remote control, press and hold the Bluetooth button for 3 seconds until blue indicator light is flashing slowly.
Alternatively, press and hold the source button on the soundbar for 3 seconds until the blue indicator light is flashing slowly.
- Select the Bluetooth search function on your device. Your device should discover the soundbar which is called "Onn 30P 2.1 soundbar".
- Select "Onn 30P 2.1 soundbar" your device is paired with the soundbar when the blue indicator light stops flashing and becomes solid.



Connecting to the Power Outlet


- This unit is designed to operate with the provided adapter.
- Connecting the unit to any other power source may damage the unit. Unwind the adapter cable to its full length. Connect the end of the cable to the DC IN Port at the back of the unit and then connect the adapter to the outlet. Make sure the adapter is firmly inserted into the outlet. The unit is now connected and ready to use.
- Switch the unit off completely, unplug the adapter from the outlet.

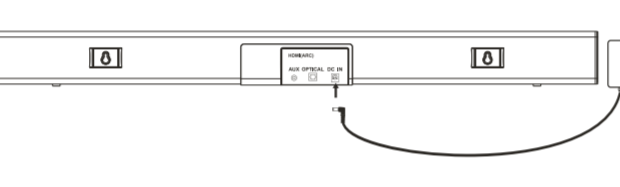

Ensure all audio connections of the unit are connected before connecting to the main power outlet.

Product Wall Mounting the First Step 01

 
1. Drill 2 parallel holes (Ø 8mm each according to wall type) in the wall. The distance between the holes should be 60mm.

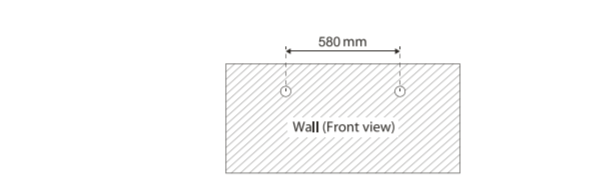

- Installation must be carried out by qualified personnel only. Incorrect assembly can result in severe personal injury and property damage if you intend to install this product yourself; you must check for installations such as electrical wiring and plumbing that may be buried inside the wall. It is the installer's responsibility to verify that the wall will safely support the total load of the Soundbar.
- Additional tools (not included) are required for the installation:
 - Do not over-tighten screws.
 - Keep this instruction manual for future reference.
 - Use an electronic stud finder to check the wall type before drilling and mounting.

Product Wall Mounting the Second Step 02

 2. Firmly fix 1x dowel D10x2130mm (not included) into each hole in the wall if necessary.

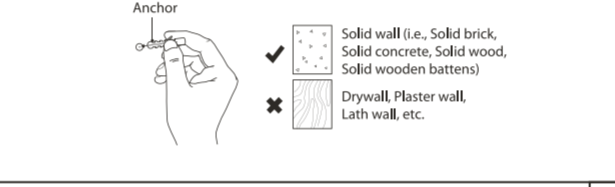

Product Wall Mounting the Third Step 03

3. Insert 1 screw TA 4*40mm (not included) into each anchor. Be sure to leave a firm grip between the wall and the screw's head. Lift the unit over the heads of the screws and slot into place.



Connecting to the Power Outlet

- Never place any type of candle or naked flame on the top or near the unit.
- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit.
- You should not touch the unit, it can cause serious damage to the unit if the unit is not immediately withdrawn from the mains plug and contact your dealer.

- Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way - switch it off, withdraw the mains plug and consult your dealer.
- Do not attempt to repair the unit.

- The unit must be placed on a flat, stable surface and should not be subjected to vibrations.
- Do not place the unit near open flames or heat sources such as radiators, fireplaces, stoves, etc.
- The mains socket must be located near the unit and should be easily accessible.

- Avoid extreme degrees of temperature, either hot or cold. Place the unit away from heat sources such as radiators or gas electric fires.
- Avoid exposure to direct sunlight and other sources of heat.

Safety Warnings

Safety Warnings

- Read all instructions carefully before using the unit and keep them for future reference.
- Always the manual if you plug the unit into a third party make sure you include the manual.
- Check that the voltage marked on the rating label matches your mains voltage.
- Damage
 - Please inspect the unit for damage after unpacking.
 - Do not attempt to repair the unit.
- Location of Unit
 - The unit must be placed on a flat, stable surface and should not be subjected to vibrations.
 - Do not place the unit near open flames or heat sources such as radiators, fireplaces, stoves, etc.
 - The mains socket must be located near the unit and should be easily accessible.
- Temperature
 - Avoid extreme degrees of temperature, either hot or cold. Place the unit away from heat sources such as radiators or gas electric fires.
 - Avoid exposure to direct sunlight and other sources of heat.
- Naked Flames
 - Never place any type of candle or naked flame on the top or near the unit.
- Moisture
 - To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit.
- Ventilation
 - To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains, window blinds and other obstructions do not block the ventilation vents.
 - Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure the unit is well ventilated.
- Mains Adapter
 - The mains adapter will continue to draw electricity from the mains supply when plugged in the mains socket, in the event of safety and to avoid unnecessary energy consumption, never leave the adapter plugged in the mains socket while for long periods of time. Disconnect the adapter from the power supply.
 - Working ambient 0°C-35°C, voltage input range 100V-240V/50/60Hz.

Product Wall Mounting the Second Step 02

2. Firmly fix 1x dowel D10x2130mm (not included) into each hole in the wall if necessary.

- Always disconnect the unit from the mains supply before connecting, disconnecting other devices or moving the unit.
- Always the manual if you plug the unit into a third party make sure you include the manual.
- Check that the voltage marked on the rating label matches your mains voltage.
- Damage
 - Please inspect the unit for damage after unpacking.
 - Do not attempt to repair the unit.
- Location of Unit
 - The unit must be placed on a flat, stable surface and should not be subjected to vibrations.
 - Do not place the unit near open flames or heat sources such as radiators, fireplaces, stoves, etc.
 - The mains socket must be located near the unit and should be easily accessible.
- Temperature
 - Avoid extreme degrees of temperature, either hot or cold. Place the unit away from heat sources such as radiators or gas electric fires.
 - Avoid exposure to direct sunlight and other sources of heat.

- The unit must be placed on a flat, stable surface and should not be subjected to vibrations.
- Do not place the unit near open flames or heat sources such as radiators, fireplaces, stoves, etc.
- The mains socket must be located near the unit and should be easily accessible.

- Avoid extreme degrees of temperature, either hot or cold. Place the unit away from heat sources such as radiators or gas electric fires.
- Avoid exposure to direct sunlight and other sources of heat.

Product Wall Mounting the Third Step 03

3. Insert 1 screw TA 4*40mm (not included) into each anchor. Be sure to leave a firm grip between the wall and the screw's head. Lift the unit over the heads of the screws and slot into place.



- Always disconnect the unit from the mains supply before connecting, disconnecting other devices or moving the unit.
- Always the manual if you plug the unit into a third party make sure you include the manual.
- Check that the voltage marked on the rating label matches your mains voltage.
- Damage
 - Please inspect the unit for damage after unpacking.
 - Do not attempt to repair the unit.
- Location of Unit
 - The unit must be placed on a flat, stable surface and should not be subjected to vibrations.
 - Do not place the unit near open flames or heat sources such as radiators, fireplaces, stoves, etc.
 - The mains socket must be located near the unit and should be easily accessible.
- Temperature
 - Avoid extreme degrees of temperature, either hot or cold. Place the unit away from heat sources such as radiators or gas electric fires.
 - Avoid exposure to direct sunlight and other sources of heat.

- The unit must be placed on a flat, stable surface and should not be subjected to vibrations.
- Do not place the unit near open flames or heat sources such as radiators, fireplaces, stoves, etc.
- The mains socket must be located near the unit and should be easily accessible.

- Avoid extreme degrees of temperature, either hot or cold. Place the unit away from heat sources such as radiators or gas electric fires.
- Avoid exposure to direct sunlight and other sources of heat.

Thank you for purchasing your new ONN Soundbar.

We recommend that you spend some time reading this instruction manual so that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues. Read all the safety instructions carefully before use and keep this instruction manual for future reference.

SOME DOS AND DON'TS ON THE SAFE USE OF EQUIPMENT

- This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.
- DO read the operating instructions before you attempt to use the equipment.
- DO ensure that all electrical connections including the mains plug, extension leads and inter-connections between the pieces of equipment are properly made and in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug before making or changing connections.
- DO consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.
- DO be careful with glass panels or doors on the equipment.
- DO route the mains lead so that it is not likely to be walked on, crushed, chafed, or subjected to excessive wear and tear or heat.
- DO NOT remove any fixed cover as this may expose dangerous voltages.
- DON'T obstruct the ventilation openings of the equipment with items such as newspapers, tablecloths, curtains, etc. Overheating will cause damage and shorten the life of the equipment.

DONT allow electrical equipment to be exposed to dripping or splashing, or objects filled with liquids, such as vases.

- DONT place hot objects or naked flame sources such as lighted candles or nightlights on, or close, to equipment. High temperatures can melt plastics and lead to fires.
- DONT use makeshift stands and NEVER fix legs with wooden screws. To ensure complete safety always fit the manufacturer's approved stand or legs with the fixings provided and according to the instructions.
- DONT use equipment such as personal stereos or radios that will distract you from the requirements of traffic safety.
- DONT listen to headphones at high volume, as such use can permanently damage your hearing.
- DONT leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a stand-by mode. Switch off using the ON/OFF switch on the equipment or at the mains socket, and make sure that your family knows how to do this. Special arrangements may need to be made for infants or handicapped people.
- DONT continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way - switch off, remove the mains plug from the mains socket and consult your dealer.
- ABOVE ALL
 - NEVER let anyone especially children push anything into holes, slots or any other opening in the equipment - this could result in a fatal electric shock.
 - NEVER guess or take chances with electrical equipment of any kind. It is better to be safe than sorry!

Specifications

Model	10000045
Mains Adapter	Input: AC 240V-260V/11A Output: DC 12V
Peak Power	160W
Power Consumption	40W
Speaker Output Power	2 x 20W RMS @ 1% THD
Net Weight	2.23kg
Dimensions	Ø 115mm(W) x 65mm(D) x 80mm(H)

Hints and Tips

- If a problem occurs, it may often be due to something very minor. The following table contains various tips.
- When switching to another channel, the Bluetooth will be in disconnected status.
 - When LED indicator is flashing blue, the Bluetooth will be paired and be in disconnected status.
 - When LED indicator becomes solid, the Bluetooth will be reconnected successfully with connection.
- Problem Solution
 - No power
 - Check the mains socket is connected correctly and both ends.
 - Make sure that the ON mode is selected.
 - The remote control is not functioning
 - Use the remote control near the unit.
 - Point the remote control at the remote sensor on the unit.
 - Replace the battery in the remote control with a new one.
 - Remove any obstacles between the remote control and the unit.
 - Loud hum or noise in sound
 - The plug and sockets are dry. Wipe them with a damp cloth.
 - Use a plug and sockets with an appropriate non-obscure cleaning solution.
- If any functions obviously is encountered, unplug the unit from the mains outlet and reconnect it again.

1. Read these instructions - All the safety and operating instructions should be read before this product is operated.

- Read these instructions - All the safety and operating instructions should be read before this product is operated.
- Read these instructions - The safety and operating instructions should be retained for future reference.
- Read all warnings - All warnings on the appliance and in the operating instructions should be adhered to.
- Follow all instructions - All operating and use instructions should be followed.
- Do not use this apparatus near water - The appliance should not be used near water or moisture - for example, in a wet basement or near a swimming pool, and the like.
- Clean only with dry cloth.
- Do not block any ventilation openings - Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug the apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, has been exposed to rain or moisture, does not operate normally, or has been dropped.