



Model:ONA19SB003

PRODUCT GUIDE

Ver.01Rev.01/10/2019



www.walmart.com

SOME DOS AND DON'TS ON THE SAFE USE OF EQUIPMENT

- This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.
- DO read the operating instructions before you attempt to use the equipment.
 - DO ensure that all electrical connections (including the mains plug, extension leads and inter-connections between the pieces of equipment) are properly made and in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug before making or changing connections.
 - DO consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.
 - DO be careful with glass panels or doors on the equipment.
 - DO route the mains lead so that it is not likely to be walked on, crushed, chafed, or subjected to excessive wear and tear or heat.
-
- DONT remove any fixed cover as this may expose dangerous voltages.
 - DONT obstruct the ventilation openings of the equipment with items such as newspapers, tablecloths, curtains, etc. Exposing will cause damage and shorten the life of the equipment.
 - DONT allow electrical equipment to be overheat to dripping or splashing, or objects filled with liquids, such as vases.
 - DONT place hot objects or naked flame sources such as lighted candles or nightlights on, or close, to equipment. High temperatures can melt plastic and lead to fire.
 - DONT use makeshift stands and NEVER fix legs with wooden screws. To ensure complete safety always fit the manufacturer's approved stand or legs with the fittings provided and according to the instructions.
 - DONT use equipment such as personal stereos or radios that will distract you from the requirements of traffic safety.
 - DONT listen to headphones at high volume, as such use can permanently damage your hearing.
 - DONT leave equipment switched on when it is unattended unless it is specifically stated that is designed for unattended operation or has a stand-by mode. Switch off using the ON/OFF switch on the equipment or at the mains socket, and make sure that your family knows how to do this. Special arrangements may need to be made for infirm or handicapped people.
 - DONT continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way – switch off, remove the mains plug from the mains socket and consult your dealer.
-
- ABOVE ALL
 - NEVER let anyone especially children push anything into holes, slots or any other opening in the equipment – this could result in a fatal electric shock.
 - NEVER guess or take chances with electrical equipment of any kind. It is better to be safe than sorry!

SAFETY GUIDELINES

Use correctly, domestic batteries are a safe and dependable source of portable power. Problems can occur if they are misused or abused - resulting in leakage or, in extreme cases, fire or explosion. Here are some simple guidelines to safe battery use designed to eliminate any such problems.

Take care to fit your batteries correctly according to the plus and minus marks on the battery and the markings on the battery compartment. Do not mix old and new batteries or batteries of different types. Check the air vent on leakage or, in extreme cases, fire or even an explosion.

Store unused batteries in their packaging and away from metal objects which may cause a short-circuit resulting in leakage or, in extreme cases, fire or even an explosion.

Remove dead batteries from equipment and batteries from equipment which are not going to be used for a long time. Otherwise, they may leak and cause damage.

Never dispose of batteries in fire as this can cause them to explode. Household batteries should not be put with the normal household waste.

Never attempt to recharge ordinary batteries, and never from metal objects which may cause a short-circuit resulting in leakage or, in extreme cases, fire or even an explosion.

Supervise children if they are playing with batteries. They may be liable for any damage or injury. There are special rechargeable batteries which are clearly marked as such.

Remember that small button cell batteries such as used in some hearing aids, toys, games and other appliances, are easily swallowed by young children and this can be dangerous.

Keep kids from touching, or even putting their hands in, battery compartments to ensure.

Seek medical advice if a battery cell has been swallowed.

WARNING
(The remote control supplied with) This product contains a button cell battery. If the button cell battery is swallowed it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children.

If the battery compartment does not close securely stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body seek immediate medical attention.

Notes for battery disposal
The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste. For more information, please contact the local authority or your retailer where you purchased the product.

Caution
The above mark is in compliance with the Waste Electrical and Electronic Equipment Directive 2002/96/EEC. The mark indicates the requirement NOT to dispose of the equipment including any spent or discarded batteries as unsorted municipal waste, but use the return and collection systems available. If the batteries or accumulators included with this equipment display the chemical symbol Hg, Cd or Pb, then it means that the battery has a heavy metal content of more than 0.0005% Mercury, or more than 0.002% Cadmium or more than 0.004% Lead.

In the unlikely event of a problem developing, please contact the store where you purchased your equipment. We continually strive to improve our products, specifications may change without prior notice. For advice on where to purchase accessories, please contact the store where you purchased your equipment. All trademarks are the property of their respective owners and all rights are acknowledged.

CAUTION

- Danger of explosion if battery is incorrectly replaced.
- Replace only with the same or equivalent type.
- Batteries/battery pack or batteries installed, shall not be exposed to excessive heat such as sunshine, fire or the like.
- The plug of Mains adapter is used as the disconnect device, the disconnect device shall remain readily operable.
- The product is designed to use in moderate climates.

Warning

- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This device complies with FCC radiation exposure limits set for an uncontrolled environment.

Unpacking

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.

The following items are included:

- Remote Control
- 3.0 x 3.0mm Stereo Audio Cable
- Power Adapter
- Instruction Manual

Product Overview

Front View

1. Speaker
2. LED Indicator
3. Remote Control Sensor

Side View

1. Button Switches the unit between ON and STANDBY modes.
2. SOURCE Button Selects the input source.
3. VOL- Button Decreases the volume.
4. VOL+ Button Increases the volume.

Back View

1. AUX IN Socket
2. OPTICAL Socket
3. DC IN Socket

General Operation

When you first connect the unit to the mains socket, the unit will be in STANDBY mode. The LED indicator will be red.

1. Press **ON** on the unit or the remote control to switch the unit to ON mode. The device will go into pairing mode automatically and there will be a tone after the connection is successful. Blue LED slow flash.
2. Press **ON** to switch the unit back to STANDBY mode. The LED indicator will be red.
3. Disconnect the mains plug from the mains socket if you want to switch the unit off completely.

Selecting Modes

Press **SOURCE** on the unit to switch between OPTICAL and BLUETOOTH and AUX mode. The LED indicator will light up green if in OPTICAL mode and blue if in BLUETOOTH and mixed colour in AUX mode.

Optical mode is the default mode when first time the unit is switched on.

Adjusting the Volume

- Press VOL+/- on the unit or the remote control to adjust the volume.
- If you wish to turn the sound off, press **MUTE** on the remote control. Press **ON** again to resume normal listening.

Maintenance

Cleaning the unit

- To clean the unit, wipe the case with a slightly moist, lint-free cloth.
- Do not use any cleaning fluids containing alcohol, ammonia or abrasives.
- Do not spray aerosol or near the unit.

Thank you for purchasing your new ONN Soundbar.
We recommend that you spend some time reading this instruction manual so that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues. Read all the safety instructions carefully before use and keep this instruction manual for future reference.

Using the Bluetooth Connection

- Keep the distance of the Soundbar and your mobile phone, PC, tablet or other Bluetooth enabled device within 1 meter. The closer, the better.
- Ensure Bluetooth is enabled on your device and that your device is discoverable.
- Select the Bluetooth mode on the soundbar.
 - Using the remote control, press the Bluetooth button. The indicator light on the soundbar will be flashing blue.
 - Alternatively, Press the source button on the Soundbar until the indicator light is flashing blue.
- Select the Bluetooth search function on your device. Your device should discover the Soundbar which is called "Onn 30" Soundbar"
- Select pairing mode.
 - Using the remote control, press and hold the Bluetooth button for 3 seconds until blue indicator light is flashing rapidly.
 - Alternatively, press and hold the source button on the Soundbar until the blue indicator light is flashing rapidly.
- Select the Bluetooth search function on your device. Your device should discover the Soundbar which is called "Onn 30" Soundbar"
- Select "Onn 30" Soundbar", your device is paired with the Soundbar when the blue indicator light stops flashing and becomes solid.
- Turn on the power, press (g) on the unit or remote control to switch to switch the unit to ON mode with a prompt tone.

Connecting to the Mains Supply

- This unit is designed to operate with the provided mains adapter.
- Connecting the unit to any other power source may damage the unit. Unwind the mains adapter cable to its full length. Connect the end of the cable to the DC IN Socket at the back of the unit and then connect the mains adapter to the mains socket. Make sure the mains adapter is firmly inserted into the mains socket. The unit is now connected and ready to use. To switch the unit off completely, unplug the mains adapter from the mains socket.

Adjusting the Volume

- Installation must be carried out by qualified personnel only. Incorrect assembly can result in severe personal injury and property damage if you intend to install this product yourself, you must check for installations such as electrical wiring and plumbing that may be inside the wall. It is the installer's responsibility to verify that the wall will safely support the total load of the Soundbar.
- Additional tools (not included) are required for the installation.
 - Do not over-tighten screws.
 - Use this instruction manual for future reference.
 - Use an electronic stud finder to check the wall type before drilling and mounting.

1. Drill 2 parallel holes (Ø 8mm each according to wall type) in the wall. The distance between the holes should be 400mm.

2. Firmly fix 1 dowel D10 x D130mm (not included) into each hole in the wall if necessary.

3. Insert 1 screw 1A x 45mm (not included) into each dowel. Be sure to leave a 5mm gap between the wall and the screw's head. Lift the unit over the heads of the screws and set into place.

Wall (Front View)

400mm

Ensure all audio connections of the unit are connected before connecting to the mains power socket.

Ensure all audio connections of the unit are connected before connecting to the mains power socket.

1. 1. Speaker

2. 2. LED Indicator

3. 3. Remote Control Sensor

4. 4. DC IN Socket

5. 5. AUX IN Socket

6. 6. OPTICAL Socket

7. 7. DC IN Socket

Remote Control Operation Range

The remote control sensor on the front unit is sensitive to the remote control's commands up to a maximum of 5 metres away within a maximum of a 60° arc.

Handling the Battery

- Improper or incorrect use of batteries may cause corrosion or battery leakage, which could cause fire, personal injury or damage to property.
- Install the battery correctly in the battery compartment. Normally the battery's positive polarity (+) is marked on the battery compartment.
- Use only the battery type indicated in this manual.
- Do not dispose of the used battery as domestic waste. Dispose of it in accordance with local regulations.
- Small button cell batteries such as the one used in the remote control are easily swallowed by young children and this is dangerous. Keep loose button cells away from young children and make sure that the battery is secure in the remote control. Seek medical advice if you believe a battery cell has been swallowed.

Handling the Remote Control

- Take care of your fingernails when you slide and pull the battery release tab.
- Do not drop the remote control.
- Do not allow anything to impact the remote control.
- Do not spill water or liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under direct sunlight or near sources of excessive heat.
- Remove the battery from the remote control when not in use for a long period of time, as corrosion or battery leakage may occur and result in physical injury, and/or property damage, and/or fire.
- When the battery is exhausted, the remote control will not function.

Hints and Tips

- If a problem occurs, it may often be due to something very minor. The following table contains various tips:
- When switching to another channel, the Bluetooth will be disconnected with a prompt tone.
- When LED indicator is flashing slowly, the Bluetooth will be paired and connected with a prompt tone.
- When LED indicator becomes solid, the Bluetooth will be connected successfully with a prompt tone.

Problem	Solution
No power	<ul style="list-style-type: none"> • Ensure the mains adapter is connected securely at both ends. • Make sure that the ON mode is selected.
The remote control is not functioning	<ul style="list-style-type: none"> • Use the remote control near the unit. • Point the remote control at the remote sensor on the unit. • Replace the battery in the remote control with a new one. • Remove any obstacles between the remote control and the unit.
Loud hum or noise is heard	<ul style="list-style-type: none"> • The plug and sockets are dirty. Wipe them with a cloth slightly moistened with an appropriate non-abrasive cleaning solution.

⚠️ If any functional abnormality is encountered, unplug the unit from the mains socket and reconnect it again.

Remote Control

1. On Button switches the unit between ON and STANDBY modes.
2. VOL-Button Decreases the volume.
3. AUX Switch to Aux Input.
4. M Skip to previous track in Bluetooth mode.
5. Press MUX Button, switch to EQ List mode.
6. On Button Mutes the unit or resumes the sound.
7. VOL+ Button Increases the volume.
8. Bluetooth Connection Switch to Bluetooth mode, press and hold to enable Bluetooth pairing if there is an existing connection then disconnect the devices, unit will enter pairing mode.
9. Press OFF button, device will play music from optical input.
10. MUX Switch to next track in Bluetooth mode.
11. M Press to play/pause music.
12. Press Move button, switch to EQ Move mode.
13. Press Move button, switch to EQ Move mode.

Remove the Plastic strip from the Remote Control

Remove the plastic strip from the battery if the battery is being used for the first time. It is located at the bottom rear of the remote control.

Battery Replacement for the Remote Control

The remote control requires a CR2025, 3V Lithium battery

1. Slide and hold the battery release tab in the direction of the arrow.
2. Pull out the battery holder and remove the old battery.
3. Replace with a new battery.
4. Insert the battery holder back into the remote control.

Remote Control Operation Range

The remote control sensor on the front unit is sensitive to the remote control's commands up to a maximum of 5 metres away within a maximum of a 60° arc.

Connections

Using the OPTICAL Connection

Use an optical cable (not included) to connect the TV's OPTICAL OUT socket to the soundbar's OPTICAL socket.

Using the Aux Connection

Use a 3.5mm to RCA stereo audio cable (not included) to connect the TV's audio output sockets to the soundbar's AUX IN socket.

Specifications

Model	ONA19SB003
Mains Adapter	Input AC: 100-240V ~ 50/60Hz, 1A Output DC: 19V 2.5A
Power Consumption	30W
Speaker Output Power	2 x 15 Wms @ 3%THD
Net Weight	TBD
Dimension	762mm(W) x 65mm(D) x 80mm(H)

Features and specifications are subject to change without prior notice.

Warranty

Walmart, Inc. Limited Warranty

LIMITATION OF WARRANTY

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THE PRODUCT, NO VERBAL OR WRITTEN INFORMATION GIVEN BY WAL-MART STORES, INC. ITS AGENTS OR EMPLOYEES SHALL CREATE A GUARANTEE OR IN ANY WAY INCREASE OR MODIFY THE SCOPE OF THIS WARRANTY.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. WAL-MART STORES, INC. SHALL NOT BE LIABLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THE PRODUCT OR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF MISSISSIPPI, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THE PRODUCTS LISTED TO THE APPLICABLE WARRANTY AND WARRANTY PERIOD SET FORTH ABOVE. THIS WARRANTY IS SUBJECT TO CHANGE WITHOUT NOTICE.

How State Law relates to this warranty:

- Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

If you purchased your unit outside the United States or seek warranty coverage outside the United States: This warranty does not apply. Contact your store for warranty information.

Service calls which do not involve defective materials or workmanship are not covered by this warranty. Costs of such service calls are the sole responsibility of the purchaser.

Safety

- Important Safety Instructions**
- Read these instructions.
 - Keep these instructions.
 - Follow all warnings.
 - Do not use this apparatus near water.
 - Clean only with dry cloth.
 - Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
 - Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
 - Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
 - Only use attachments/accessories specified by the manufacturer.
 - Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Supervision**
- Children should be supervised to ensure that they do not play with the unit and the remote control.
 - Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.
- CAUTION**
- The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of unenergized "sensitive voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (warning) instructions in the manual accompanying the unit.

FCC Statement:

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference. 2) This device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

Service

- How to get service:**
- Call 1-800-925-6278.
 - Please have your original purchase receipt or proof of purchase (bill of sale or receipted invoice), the unit's date of purchase, place of purchase and model/serial number ready. The model/serial number information can be found on the back of your unit.
 - A representative will troubleshoot your problem over the telephone. If it is determined that your unit requires service, the service location will be at the sole discretion of Wal-Mart Stores, Inc. based upon the Wal-Mart Stores, Inc. Limited Warranty Statement.
 - At the sole discretion of Wal-Mart Stores, Inc. monitor will either be repaired at an Authorized Service Centre or directly exchanged for a new or refurbished/remanufactured unit. If repaired at an Authorized Service Center, a pre-paid shipping label will be provided and Wal-Mart Stores, Inc. will pay for return shipping.
 - Proof of purchase in the form of a bill of sale or receipted invoice from an Authorized Dealer which is evidence that the product is within the warranty period must be presented to obtain warranty service.
 - PRE-AUTHORIZATION MUST BE OBTAINED BEFORE SENDING ANY PRODUCT TO AN AUTHORIZED SERVICE CENTER.
 - A Mini bar that has been modified or incorporated into other products.
 - A unit purchased or serviced outside the USA.
 - A unit sold in "As-Is", "Factory Reconditioned", "Factory Re-Certified", or "Refurbished" condition or with faults.
 - Acts of nature or God, such as but not limited to earthquake or lightning damage.
 - Special, incidental or consequential damages.

红色虚线为折页线示意, 不能出现在印刷文档中。
尺寸: 展开L360*H300mm 成型L90*H150mm
材质: 80g 书写纸 1C印刷
料号: 47301062