SMART WATCH



Quick Start Guide

1. Download EnjoyFit

The watch requires application support before it can be connected to the cell phone. Before downloading the application, please check the requirements of the mobile phone system hardware platform. Searching method: Scan the QR code to download









Operating Instructions

- Please fully charge the watch before using, and it will launch automatically after charge.
- Power ON/OFF,Switch to the power off page shown as below image:



CK21 ← model V1.2 ← version 2135 ← ID

Click"YES"and long press the touch button to turn OFF.

Short press the touch button it will turn ON. During the chargeing, it will auto launch.

1.Normal mode display

Pointer

interface

Heart

rate

Brightness



Pointer

interface

Blood

pressure

Distance







Main

interface


Steps

Sleep



Main interface



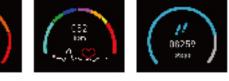



Exercise

Message

Calories



Brightness Brightness adjust

Exercise

Settings

Running






to enter

Sport mode operation

2.Brightness adjust operation

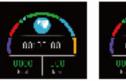



Walking

Swimming

Badminton











basketball

Riding

Mountaineering

Equipment introduction

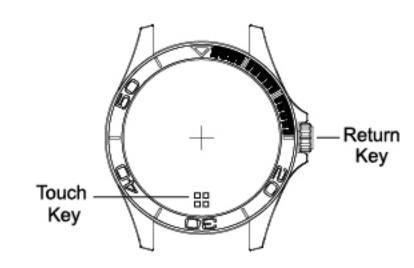

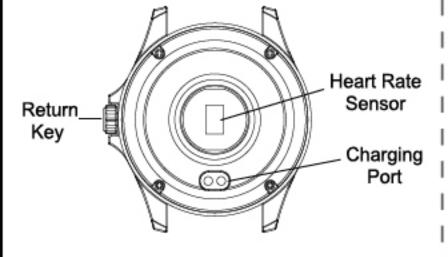

Warranty

The product is guaranteed by the manufacture for a period of 1 year from the date of purchase the guarantee does not cover defects arising from accident damage misuse or wear and tear and is available only to the original purchaser of the product.

Specifications

Dimensions: 255*48*11mm

Product weight: 38g Display screen: 1.22"IPS

Resolution: 240*204dpi

CPU: nRF52832

Battery: 180mAh

 Standby time: 12-15 days Working time: 6-8 days

Waterproof: IP67

Body material: Carbon fiber+real leather

· Band material: Real leather

Compatibility: IOS8.2+Android 4.4

Contents of the pageage

- 1x User's Manual 1x Smart Watch
- 1x Charging Cable

FAQ

1. The watch cannot be found when pairing?

Find phone Settings

Please make sure your phone is Bluetooth enabled. And when the phone is pairing in the "support range", please make sure that the distance between the watch and the cellphone is within 0.5 meters. The Bluetooth communication range is within 10 meters after pairing.

- 2. Why is Bluetooth not connected occasionally? Some mobile phone's Bluetooth service will have an exception when it is restarted, which leads to such a situation. Usually you can reset the Bluetooth or restart the phone to establish a normal connection.
- 3. How to restore the factory default settings? After the watch is connected to your cellphone, please enter the "My watch management" in the application and choose " restore factory settings".
- 4. How to update the firmware of the watch? After the watch is connected to your cellphone, please enter the "watch management" in the application and choose "firmware update".
- 5. How to resolve the disconnect between the watch and APP?

Add the APP to the white list in the android phone Settings to prevent the bluetooth from disconnecting. (because the phone will not be used for a period of time, the system will shut down the APP that running in the background)!

WARRANTY CARD

Oser name.		_
Subscriber phone:		_
Reference:		_
Date of production: _		_
Warranty period:	1 year	

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction