物料名称 SKU编码 产品型号 图号 物料号 商品名称 商品ID 69码

> 无线吸尘器X20 XCQ06RM

IMPORTANT SAFETY INSTRUCTIONS BEFORE USING READ ALL INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following: READ ALL INSTRUCTIONS BEFORE USING (THISAPPLIANCE). Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury. Warning: in order to avoid causing harm to you and others and causing unnecessary property damage, read carefully and observe the following "safety precautions" before use. The safety precautions are divided into two parts: "Warning" and "Attention".Both "Warning" and "Attention" are important parts of safe use. Be sure to follow them.

△WARNING To reduce the risk of fire, electric shock, or injury **ATTENTION** Notices that can lead to slight injury or product safety risk

## 

 Do not use outdoors or on wet surfaces; 2. Do not allow to be used as a toy. Close attention is necessary when used by or near children, pets or 3. Use only as described in this manual. Use only manufacturer's recommended attachments; 4. Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center; or corners. Do not run appliance over cord. Keep cord away from heated surfaces; 6. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord; 7. Do not handle charger, including charger plug, and charger terminals with wet hands; 8. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow;

9. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts; 10. Use extra care when cleaning on stairs; 11. Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present. 12. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes; 13. Do not use without dust cup and filters in place; 14. Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents; 15. Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack;

16. Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire; 17. When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire; 18. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally

X/EN-1

occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns; 19. Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury; 20. Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause explosion; 21. Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire;

instructions for use and care; 24. Always turn off this appliance before connecting or disconnecting motorized nozzle; 25. Do not use this product near wet places such as the bathroom; 26. Do not use on cleaning liquids, matches and damp rubbish; 27. Do not use broken power plug and loose socket; 28. Do not disassemble, repair or transform by yourself to avoid fire, injury or improper operation, except certified replacement of consumables according to this manual;

22. Have servicing performed by a qualified repair person using only identical replacement parts. This will

23. Do not modify or attempt to repair the appliance or the battery pack except as indicated in the

ensure that the safety of the product is maintained;

29. Use AC power at rated voltage, do not use generator or DC power supply, etc., to avoid causing fire and and other reasons;  $31. \, \text{Make sure that the plug is well inserted in the bottom to avoid electric shock, short circuit and fire; } \\$ 32. In case of any abnormal failure, stop using it immediately to avoid causing smoke, fire and electric shock; 33. When in following conditions: ① Switched to "on" and still not running; ② Frequent stops while in Smell of burning; ⑥ If there is any abnormal sound during operation, immediately cut off the power supply and unplug the plug, and the manufacturer or its maintenance staff shall replace and repair it to avoid any danger;

34. Be sure to remove the plug from the power socket before cleaning and maintenance to avoid electric 35. If the electric brush is found to be abnormal in use, turn off the power switch and immediately check whether the electric brush is wrapped around the hair or other excessively long fibers, and clean it in time; 36. Do not pour water on the body of the machine and plug or immerse the body and/or plug into water; 37. Do not operate the vacuum facing the ears, eyes, mouth and other body parts; 38. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved; 39. Keep the vacuum cleaner away from the hospital's electromagnetic equipment; 40. For indoor use only, do not expose to rain; 41. If the cord is damaged, it must be replaced by the manufacturer, our service agent or other qualified

persons, in order to avoid a hazard; 42. The charger must not be used if the enclosure is damaged because this will cause hazard of electric 43. The power adapter is only used for the indicated vacuum cleaner;

44. Before charging, check whether the voltage specified on the marking label corresponds to the mains voltage;

X/EN-2

Product Cleaning

4 Removal and Installation of the Dust Cup

5 Removal and Installation Instruction of the Rear Filter

 $^{\star}\mbox{If the vacuum cleaner}$  has a rear filter, please refer to the actual configuration.

6 Component Cleaning

7 Rolling Brush Replacement

Product Troubleshooting

45. Keep the charger away from all sources of heat; 46. Do not immerse the appliance in water; 47. Do not continue to use the appliance in such cases: drop, impact by a heavy object, other means of damage, etc. If it occurs, get the charger, repaired by our service agent; 48. Remove the plug from the socket before cleaning or maintaining the charger; 49. Do not try to charge non-rechargeable batteries with this charger; 50. When the vacuum cleaner is attached to the magnetic wall mount, do not let children or pets collide with it to

51. Household use only; 52. Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing; 53. Do not allow to be used as a toy, Close attention is necessary when used by or near children; 54. Use only as described in this manual. Use only manufacturer's recommended attachments;

55. Turn off all controls before unplugging; ▲ ATTENTION(Risk Of Injury)

please store in a cool and dry place.

1. Do not run for a long time when the vacuum cleaner is blocked; 2. Do not block the vent (to avoid deformation to the body of the machine, failure or fire caused by overheating); 3. Do not drag and drop the body of the machine (to avoid scratching the ground); 4. Do not wave the body of the machine. Do not let children play with the body, etc. (to avoid injury or damage 5. Do not drop the product into other objects and apply pressure to the product (to avoid fire and electric shock caused by failure); 6. Be sure to install the dust cup before using it (to avoid motor and body damage); 7. Check whether the adapter charging cord is in good condition before charging; 8. Before using the vacuum cleaner for the first time or replacing the specified filter element, turn off the


power of the vacuum cleaner and ensure that the filter element is installed in place; 9. When there is a lot of garbage in the dust cup, clean it at that time to ensure unimpeded ventilation path, so as to avoid blocking, resulting in reduced suction or heating of the motor; 10. The waste battery pack should be recycled safely. Do not throw it away just anywhere; 11. Do not draw large, soft, sticky objects such as wool, hair, bulk cotton, dough, and chewing gum into the vacuum cleaner; 12. Be sure that the vacuum cleaner power is turned off when the electric brush and accessories are reconnected or disconnected; 13. Do not use and store the vacuum cleaner under extreme adverse conditions, such as extreme, temperature, etc. It is recommended to use , charge and store in the indoors at 4 to  $\,$  35  $\,$   $^{\circ}$ C environment temperature,

SAVE THESE INSTRUCTIONS

X/EN-3

14. Brush May Start Unexpectedly, Disconnect Battery Pack Before Cleaning or Servicing. Always turn

off this appliance before connecting or disconnecting motorized nozzle;

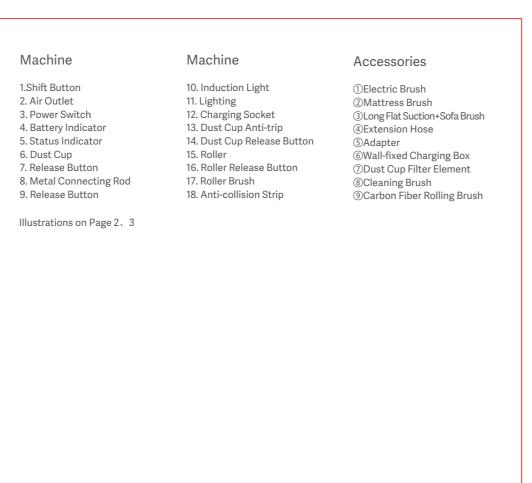

X/EN-4

Product Installation 1 Installation of The Whole Machine And Accessories 2 Installation of Wall-fixed Cordless Charging Box When installing wall-fixed charging box, please contact the charging box contact with the contact of host first. After moving the host to the wall of charging box, compare the installation hole position of charging box, then insert the expansion pipe and expansion screw in turn. (When using the screws to fix wall-fixed charging box, please do not take off glue-separating paper and use it as reserved screw-free installation.) Step 1: Insert the expansion tube into the wall and fix the wall suction box with the expansion screw; Step 2: Install the hole rubber plug; Step 3: Fix the power cord on the wall suction box; Step 4: Attach the host to the wall suction box and plug it into the power supply for charging. 3 Screw-free Installation of Wall-fixed Charging Box When installing the wall-fixed charging box, please first measure the height of 92 cm from the ground, remove the foam cotton glue-separating paper from the wall-fixed charging box, and stick the charging socket of the wall-fixed charging box downward at the measured position. Step 1: Measuring dimension;
Step 2: Remove the glue-separating paper;
Step 3: Paste the wall suction box to the wall according to the measured height;
Step 4: Attach the host to the wall suction box and plug it into the power supply for charging. Fixing of Vacuum Cleaner Place the electric brush horizontally on the ground;
 Move the vacuum cleaner main machine to adhere to fully adheres to the wall-fixed charging box. Power On/Off and Suction Power Switch Press on the button of the power switch for 1 second to start the machine in normal mode;

During operation state, click the shift button or power switch button, and the suction power will switch among the normal mode, high speed mode and powerful mode. Usage of Accessories Usage of Rolling Brush Soft velvet rolling brush can be used for floor tile, wooden floor and polish its surface. It is not recommended to clean carpet;
 Carbon fiber rolling brush can be used for floor tile, floor and undercoat carpet. Quick Settings This product is compatible with ROIDMI vacuum cleaner platform, About works with mijia this product with intelligent App connection, to support Android and IOS systems.

Product Hazardous Substances Declaration Part Name

Hazardous Substances

Col. Col. DRP DRP DRDE

Step 1: Rolling brush removal: Place the electric ground brush on the reverse side, push the roller brush release button, remove the roller brush fixing block; remove the roller brush to clean the surface attachments;

Step 2: Brush cleaning: use a cleaning brush to pick up and cut off the hair and fibrous material attached to the roller brush to separate it from the roller brush.  ${}^\star \text{The vacuum cleaner is the factory assembly roller brush, please refer to the actual configuration.}$ 

Rolling brush has too much entanglement, such as hair fiber and other long impurities

Soft velvet rolling brushes are used on Replace with the carbon fiber rolling brush and unsuitable surfaces change the use environment Charge the vacuum cleaner Empty the dust The dust cup is full Long running, high temperature Restart the machine for use after static cooling Suction Power Reduction of Vacuum Cleaner

The air inlet pipe of electric brush was blocked or the brush can't work

Cleanup the garbage that is attached to the electric rolling brush Paper or wool fibers clogged in metal mesh holes

Charger Indicator LEDs Not On or Not Flashing During Charging

The power adapter is not properly plugged in properly plugged in properly

Small Roller of the Rolling Brush Stops Running

The power adapter is not properly plugged in properly

Small roller is winded with hairs and other foreign matters

Remove and replace with a new one

When the vacuum cleaner can't operate normally, you can troubleshoot by yourself or contact the customer service in time.

the dust cup assembly from the main body:

Step 2: Cyclone mechanism separation: Flip the dust cup, remove the cyclone mechanism according to the illustration, clean the dust, and if necessary, remove the dust cup filter element for dust cleaning:

Step 3: Cyclone mechanism and dust cup filter installation: Align the position of the cyclone mechanism and the dust cup with the card position,

and install according to the diagram;

Step 4: Install the dust cup assembly: Insert the dust cup to prevent tripping, and insert it into the dust cup counterclockwise until you hear a click.

Step 1: Disassemble the main tail cover: Open the main tail cover with the cleaning brush, align the tip of the cleaning brush with the opening slot of the tail cover of the main unit, and press it slightly in the vertical direction. After lifting the tail cover of the main unit, remove the tail cover of the main unit.

position;
Step 4: Install the main tail cover and place the main tail cover in the matching position with the main unit. Press it slightly until you hear a click.


Step 1: Cyclone cleaning: Remove the cyclone mechanism inside the dust cup to clean the dust and hair attached to the metal mesh and the air Step 2: Clean the dust cup and metal mesh: Rinse the dust cup and metal mesh with water and use it after drying to prevent dust from agglomerating when used again;

Step 3: Clean the dust cup filter: remove the dust cup filter, clean the suspended dust with a cleaning brush, wash it, and replace the specified dust with a cleaning brush, wash it, and replace the specified dust with a cleaning brush, wash it, and replace the specified dust with a cleaning brush, wash it, and replace the specified dust with a cleaning brush, wash it, and replace the specified dust with a cleaning brush, wash it, and replace the specified dust with a cleaning brush, wash it, and replace the specified dust with a cleaning brush, wash it, and replace the specified dust with a cleaning brush, wash it, and replace the specified dust with a cleaning brush, wash it, and replace the specified dust with a cleaning brush, wash it, and replace the specified dust with a cleaning brush, wash it, and replace the specified dust with a cleaning brush, wash it, and replace the specified dust with a cleaning brush, wash it, and replace the specified dust with a cleaning brush, wash it, and replace the specified dust with a cleaning brush, wash it, and replace the specified dust with a cleaning brush.

dust cup filter if necessary. It is recommended to replace the specified dust cup filter every 3 months to ensure the cleaning effect; Step 4: After the filter element cleaning: remove the rear filter element, use the cleaning brush to clean the suspended dust in the up and down direction, not washable, if necessary, you can replace the designated rear filter element, it is recommended to clean it every 6 months, and

Plastic Case	0	0	0	0	0	0
Circuit Board	Х	0	0	0	0	0
Cable	0	0	0	0	0	0
Battery	Х	0	0	0	0	0
Power Adapter	Х	0	0	0	0	0
Magnet	0	0	0	0	0	0
This Attestation im lirective (RoHS) 20 This product meets F content in electronic	plies that the exa 11/65/EU. RoHS environmenta c ceramics and co	irdous substance in at lea mined types are in acc Il protection requiremer oper alloys. The term of ful substances or eleme	ordance with the stants; At present, there is environmental prote	ndards designated no mature technolog ection marked by thi	under the Use of ha	azardous substance
		Corr	ect Disposal of this p	product		
X	responsi return ar	oly to promote the sus and collection systems	or contact the retai	terial resources. To	uncontrolled waste return your used dev	vice, please use the
Warranty E	responsi return ar product	oly to promote the sus id collection systems or environmental safe	tainable reuse of ma or contact the retai	terial resources. To	uncontrolled waste return your used dev	disposal, recycle it vice, please use the
The warranty period Keep your purchase	responsi return ar product  Discription  d shall take effect fe invoice or relevantent	oly to promote the sus id collection systems for environmental safe	tainable reuse of mai or contact the retai e recycling.	terial resources. To ler where the produ	uncontrolled waste return your used dev uct was purchased.	e disposal, recycle it vice, please use the They can take this
The warranty period Keep your purchase Warranty Cont	responsi return ar product  Discription  d shall take effect fe invoice or relevantent	oly to promote the sus id collection systems for environmental safe from the date of purchast certificates as an imp	tainable reuse of mai or contact the retai e recycling. se or the date of deliv portant basis for the v	terial resources. To ler where the produ	uncontrolled waste return your used dev uct was purchased.	e disposal, recycle it vice, please use the They can take this
Keep your purchase Warranty Conf	responsite return an product:  Discription  d shall take effect fe invoice or relevantent  pe  cuum Cleaner	oly to promote the sus id collection systems for environmental safe from the date of purchant certificates as an imp	tainable reuse of mai or contact the retail e recycling.  se or the date of delivoortant basis for the value of the value	erial resources. To ler where the produ	uncontrolled waste return your used devect was purchased.  ate is a little later tha  Warranty Tim  24 Month	e disposal, recycle it vice, please use the They can take this
The warranty perior Keep your purchase Warranty Confi Ty Cordless Va This policy may be u	responsi return ar product  Discription  d shall take effect for invoice or relevant tent  pe  cuum Cleaner  pdated from time	oly to promote the sus of collection systems for environmental safe from the date of purchast certificates as an important certificates as a constitution certificates as a constitution certificates as a constitution certificates as a constitution certificate certificates as a constitution certificates as	tainable reuse of mai or contact the retail or contact the retail or recycling.  se or the date of delivity the contant basis for the value of the v	erial resources. To ler where the produ	uncontrolled waste return your used devect was purchased.  ate is a little later tha  Warranty Tim  24 Month	e disposal, recycle it vice, please use the They can take this
The warranty period (eep your purchase Warranty Conf Ty Cordless Va his policy may be u	responsi return ar product:  Discription  d shall take effect fe invoice or relevantent  pe  cuum Cleaner  pdated from time  um Cleaner F	oly to promote the sus id collection systems for environmental safe from the date of purchast certificates as an implemental successive of the successive of	tainable reuse of mai or contact the retail or contact the retail or recycling.  se or the date of delivity or the value of the value o	ery (if the delivery dayarranty service.	uncontrolled waste return your used devect was purchased.  ate is a little later tha  Warranty Tim  24 Month	e disposal, recycle i vice, please use the They can take thi

Cordless Vacuum Cleaner Rolling brush does not rotate under normal operation condition The indicator light remains the same under normal use

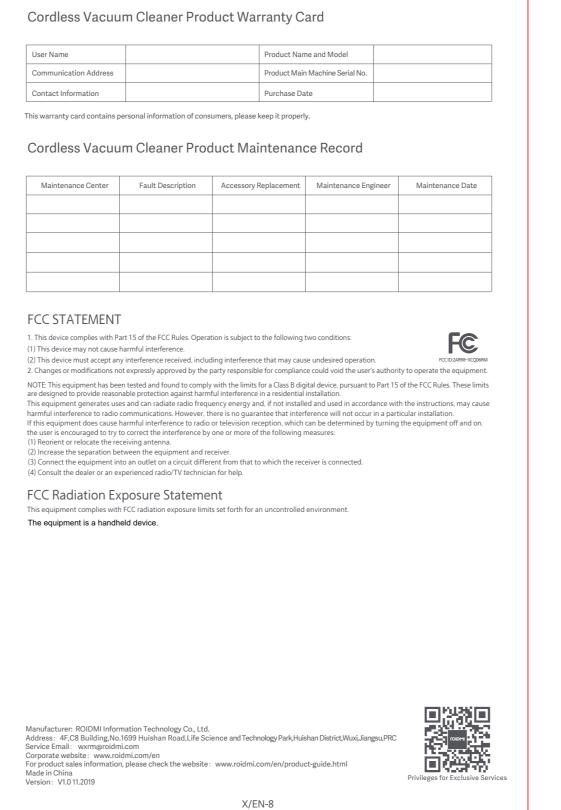

## roidmi

提供单位 ▶ 无锡睿米信息技术有限公司

项目名称 RM38无线吸尘器

版本号 **V**0.2

设计时间 ▶ 2019.10.14

设 计 于 ▶ 薑海鈺

设计审核 ▶ 张志强

## 样品

样品数量 ▶ 10套

比例 1:1 单位 mm 未注尺寸请参考图面尺寸或3D尺寸

印刷颜色 ▶ Pantone Cool Gray 11c+CMYK	成品尺寸 ▶ 143×225mm	制作工序 ▶ 印刷+过哑油+模切+折页	检测标准▶	必须符合欧盟相关规范及睿米质量管理要求,如ROHS 2.0 REACH 、PAHs、POPs、CP65、WEEE、美国、欧洲 国内的包装指令等要求
物料材质 ▶ 105g哑粉纸	特种工艺▶过哑油	纹理要求▶	工艺要求▶	色相正确、印迹牢固、套印准确、各色套印 模切走位 $\leq$ $\pm$ 0.5mm 不露杂色,套印误差 $\leq$ 0.1mm
历史版本 ▶ V0.1				
修 改 点 ▶ 整合28美版警示内容+18FCC				
修 改 人 ▶ 姜海钰/20191014				