 




---

## Digital LED TV

Please refer to the actual product

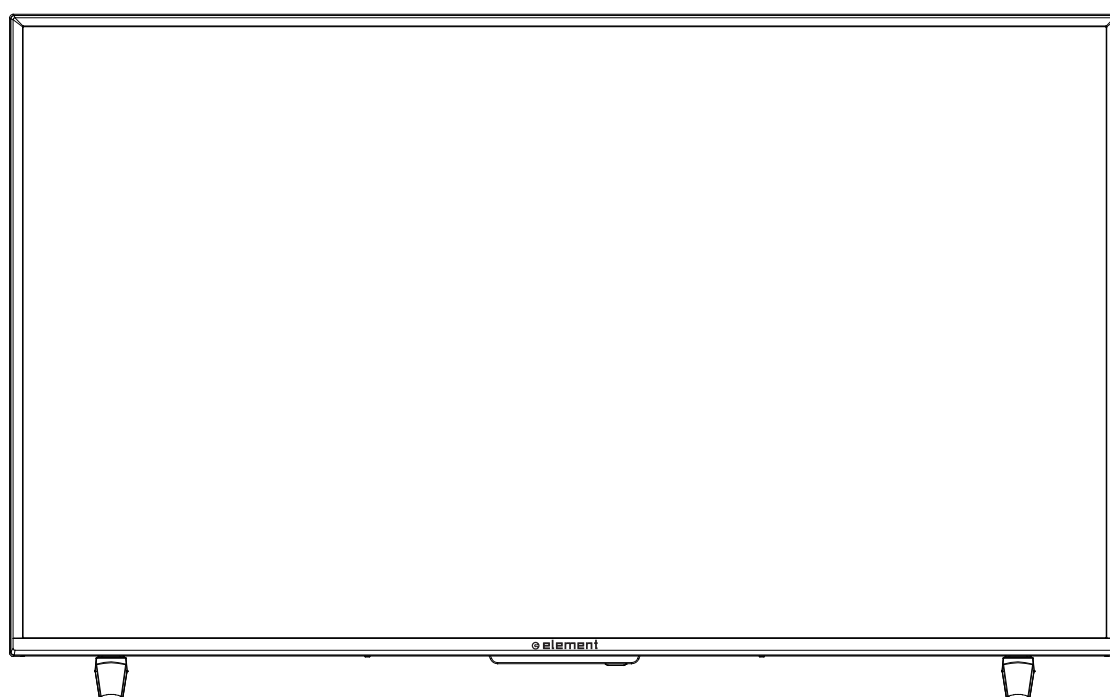

# INSTRUCTION MANUAL

---

Please read all the instructions carefully before using this TV,  
and keep the manual for future reference.

# CONTENTS

---

<b>Important Safety Instructions</b>	<b>2</b>
<b>Additional Safety Information</b>	<b>3</b>
<b>Preparations</b>	<b>6</b>
What's Included	6
Front View	7
Rear View	8
Wall Mounting	8
Remote Control	9
<b>Connecting External Devices</b>	<b>10</b>
<b>TV SETUP</b>	<b>11</b>
Turning On/Off Your TV	11
Initial Setup	11
Source	13
Channel Selection	13
Volume Adjustment and Mute Setup	13
Current Channel Information	
Picture	14
Sound	16
Function	17
Time	19
Option	20
Lock	21
Channel	22
<b>Network Setting</b>	<b>24</b>
<b>INTERNET/ScreenCast Operation</b>	<b>27</b>
<b>Parental Control</b>	<b>31</b>
<b>Troubleshooting</b>	<b>33</b>
<b>FCC Notes</b>	<b>36</b>
<b>OTT APP Service</b>	<b>37</b>

## IMPORTANT SAFETY INSTRUCTIONS

- **Read these instructions** – All the safety and operating instructions should be read before this product is operated.
- **Keep these instructions** – The safety and operating instructions should be retained for future reference.
- **Heed all warnings** – All warnings on the appliance and in the operating instructions should be adhered to.
- **Follow all instructions** – All operating and use instructions should be followed.
- **Do not use this apparatus near water** – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
- Clean only with dry cloth.
- **Do not** block any ventilation openings. Install in accordance with the manufacturer's instructions.
- **Do not** install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Do not** defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- Unplug this apparatus during lightning storms or when unused for long periods of time.

- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Please keep the unit in a well-ventilated environment.


**WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus should not be exposed to dripping or splashing. Objects filled with liquids, such as vases should not be placed on apparatus.


**WARNING:** The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.


**WARNING:** The main plug is used as disconnect device, the disconnect device shall remain readily operable.

**WARNING:** To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.



 This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

 The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

 This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

**HDMI**  
HIGH-DEFINITION MULTIMEDIA INTERFACE

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc in the United States and other countries

## **ADDITIONAL SAFETY INFORMATION**

---

To ensure reliable and safe operation of this equipment, please read carefully all the instructions in this user guide, especially the safety information below.

### **Electrical Safety**

- The TV set should only be connected to a main power supply with voltage that matches the label at the rear of the product.
- To prevent overload, do not share the same power supply socket with too many other electronic components.
- Do not place any connecting wires where they may be stepped on or tripped over.
- Do not place heavy items on them, which may damage the leads.
- Hold the main plug, not the wires, when removing from a socket.
- During a thunderstorm, or when not using the television for extended period of time, turn off the power switch on the back of the television.
- Do not allow water or moisture to enter the TV or power adapter. Do NOT use in wet, moist areas, such as bathrooms, steamy kitchens or near swimming pools.
- Pull the plug out immediately, and seek professional help if the main plug or cable is damaged, liquid is spilt onto the set, if accidentally exposed to water or moisture, if anything accidentally penetrates the ventilation slots or if the set does not work normally.
- Do not remove the safety covers. There are no user serviceable parts inside. Trying to service the unit yourself is dangerous and may invalidate the product's warranty. Qualified personnel must only service this apparatus.
- To avoid battery leakage, remove exhausted batteries from the remote control, or when not using for long period.
- Do not break open or throw exhausted batteries on a fire.
- Do not mix old and new batteries.
- Do not mix Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries.

### **Physical Safety**

- Do not block ventilation slots in the back cover. You may place the TV in a cabinet, but ensure at least 5cm (2") clearance all around.
- Do not tap or shake the TV screen, or you may damage the internal circuits. Take good care of the remote control.
- To clean the TV use a soft dry cloth. Do not use solvents or petroleum based fluids.
- Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong, the wide blade, or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs.
- Unplug the apparatus during lightning storms or when unused for long periods.
- Refer all servicing to a qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled, or objects have fallen into the apparatus, has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Please always connect your television to a power outlet with protective ground connection.

## INSTRUCTIONS DE SÉCURITÉ IMPORTANTES

### Précautions de sécurité importantes

1. Lire ces instructions.
2. Gardez ces instructions.
3. Heed tous les avertissements.
4. Suivez toutes les instructions.
5. Do'utilisez pas cet appareil près de l'eau.
6. Clean seulement avec le tissu sec.
7. Do bloquent pas les ouvertures de ventilation. Installer conformément aux instructions du fabricant.
8. Do'installer à proximité de sous de chaleur tels que les radiateurs. Les registres de chaleur, les poêles ou tout autre appareil (y compris les amplificateurs) qui produisent de la chaleur.
9. Do pas contrepartie de l'objectif de sécurité de la prise polarisée ou de type mise à la terre Une prise polarisée a deux lames avec une plus large que l'autre. Une prise de type mise à la terre a deux lames et une troisième pince à la sol. La lame large ou la troisième prong est fournie pour votre sécurité. Si la prise fournie ne rentre pas dans votre prise, consultez un électricien pour le remplacement de la prise obsolète.
10. Protéger le cordon d'alimentation d'être marché sur ou pincé en particulier aux récipients de commodité de bouchons et le point où ils sortent de l'appareil.
11. Seuls les pièces jointes d'utilisation / accessoires spécifiés sont le fabricant.

12. Utilisez seulement avec le chariot, stand, Trépied, support, ou table spécifié par le fabricant, ou vendu avec l'appareil lorsqu'un chariot est utilisé, faites preuve de prudence lors du déplacement de la combinaison panier/appareil pour éviter les blessures causées par le basculement.



S3125A

13. Débranchez cet appareil pendant les orages ou lorsqu'il est inutilisé pendant de longues périodes de temps.
  14. Référez tous les services au personnel de service qualifié.
- L'entretien est nécessaire lorsque l'appareil a été endommagé de quelque façon que ce soit, comme un cordon d'alimentation ou une prise est endommagé, du liquide a été renversé ou des objets sont tombés dans l'appareil, l'appareil a été exposé à la pluie ou à l'humidité, ne fonctionne pas normalement ou a été abandonnés.

**CAUTION**

RISK OF ELECTRIC SHOCK  
DO NOT OPEN

Ce symbole indique que ce produit dans les entreprises double isolation entre la tension du réseau hazaous et les pads accessibles à l'utilisateur. Lors de l'entretien, n'utilisez que des tampons de remplacement identiques

Attention : Réduire le risque de choc électrique. Ne retirez pas le couvercle (ou le dos). Pas de pads utilisables par l'utilisateur à l'intérieur. Référez l'entretien au personnel de service qualifié.



Ce symbole indique des instructions importantes accompagnant le produit.

 


Ce symbole indique une « tension dangereuse » à l'intérieur du produit qui présente un risque de choc électrique ou de blessure personnelle.

Attention : Pour réduire le risque d'incendie ou de choc électrique, n'exposez pas ce produit à la pluie ou à l'humidité. L'appareil ne doit pas être exposé à des gouttes ou des éclaboussures. Les objets remplis de liquides, comme des vases ou des verres à boire, ne doivent jamais être placés sur l'appareil.

15. Si une antenne extérieure ou un système de câble est connecté au produit, assurez-vous que l'antenne ou le système de câble est mis à la terre de façon à fournir une certaine protection contre les surtensions et les charges statiques accumulées, section 810 du cordon électrique national, numéro ANSI/NFPA 70-1984 (article 54 du Code canadien de l'électricité, Partie 1) Fournit des renseignements sur l'échouement approprié du mât et de la structure de soutien, l'échouement du fil de plomb à une unité de décharge d'antenne, la taille des conducteurs à la terre, l'emplacement de unité de décharge d'antenne, connexion à l'électrode de mise à la terre. Voir l'exemple suivant.

## INSTRUCTIONS DE SÉCURITÉ IMPORTANTES

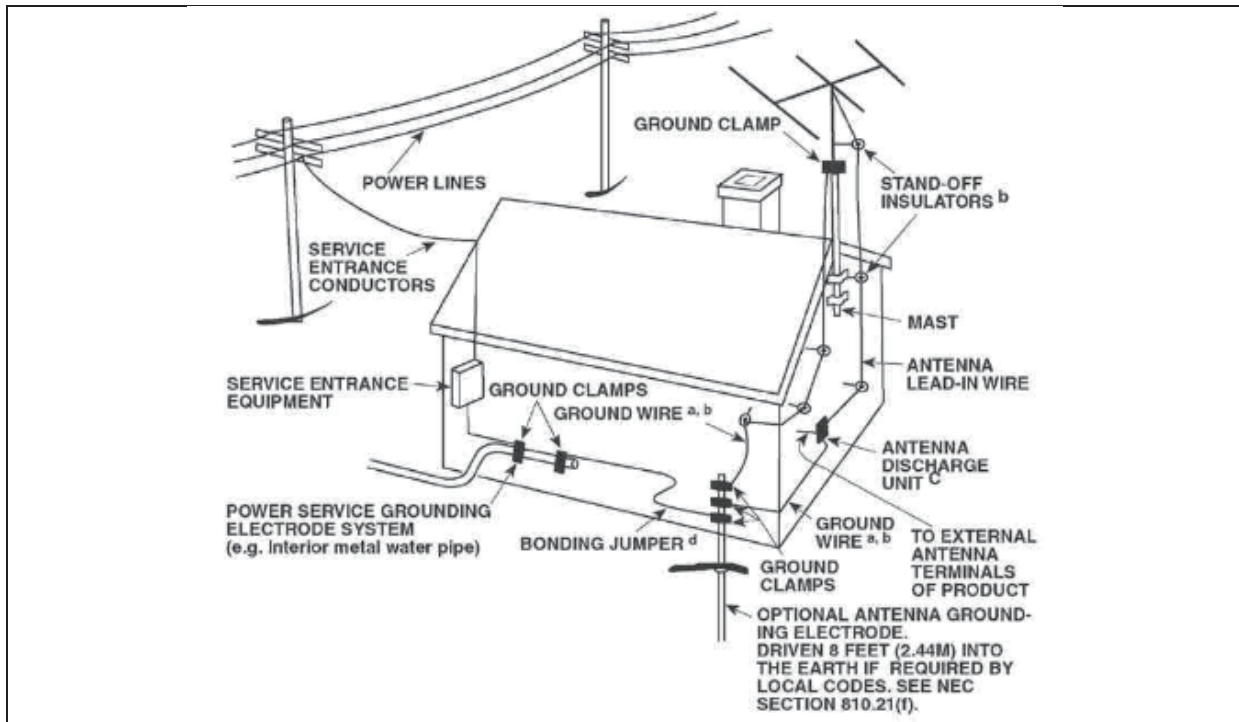

16. La prise de prévue b utilisée comme prévue ble de déconnexion, Il doit rester facilement prévue ble et ne doit pas être obstrué pendant l'utilisation prévue.




17.

Cet équipement est un appareil électrique de classe II ou double isolant, Il a été conçu de telle manière qu'il n'est pas nécessaire d'avoir une connexion de sécurité à la terre électrique.

# PREPARATIONS

 ---


## What is Included?

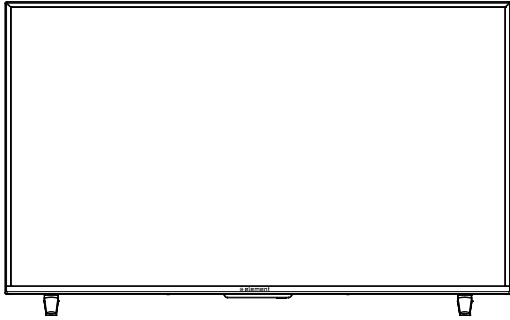


**TV Set**



 **Remote Control with Batteries**

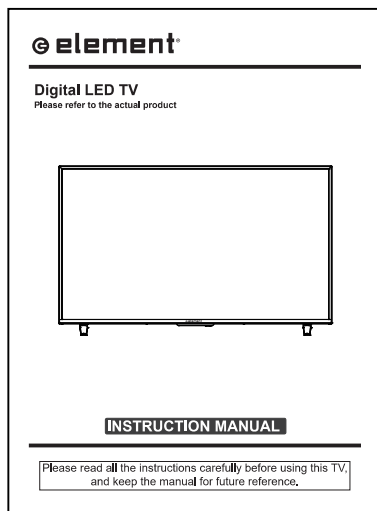

**User Manual**

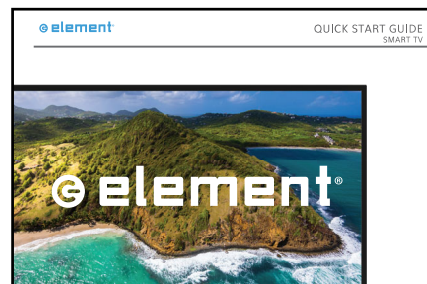 


**Quick Start Guide**

## PREPARATIONS

---
 
### Front View

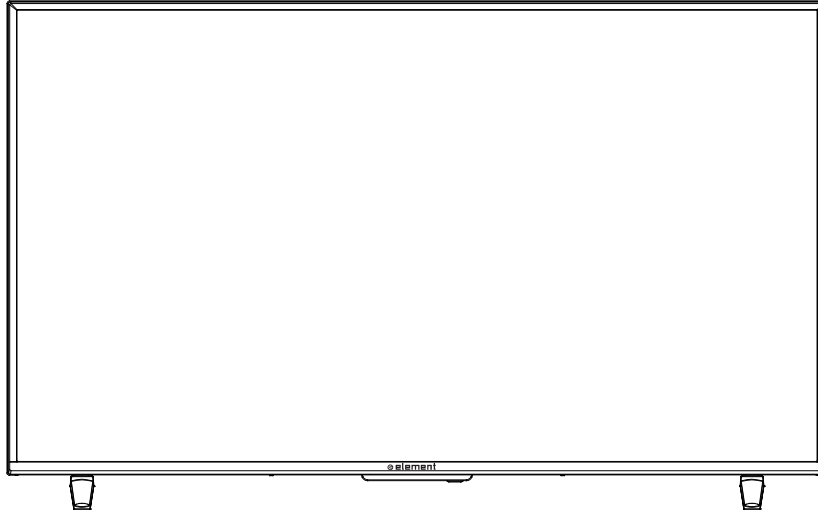


- **STANDBY**  
Switch the TV between On / Standby mode.
- **SOURCE**  
Press to select among different input signal sources.
- **MENU**  
Display the OSD (on screen display) menu.
- **CH -/+**  
Press to select a channel.
- **VOL -/+**  
Press to adjust the volume.
- **LED**  
The LED light indicates when the TV is activated.
- **IR**  
Infrared Receiver.



# PREPARATIONS
 
## Rear View

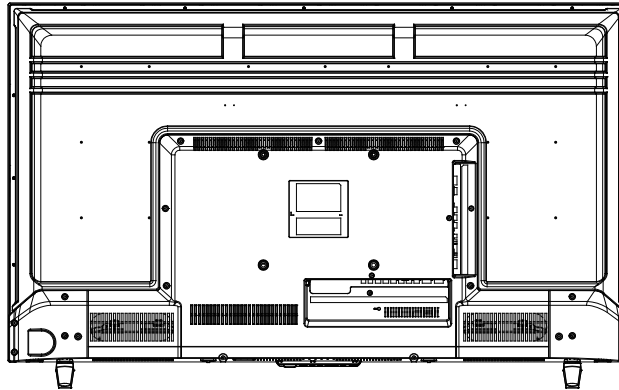

**Headphone Output**



**Optical Output**



**RJ-45**



**HDMI Input**



**Antenna Input(75Ω VHF/UHF)**



**USB Input**



**MINI YPBPR/AV**



**Audio Input**

## Wall Mounting

### WARNING

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture(for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls.

If your existing television set is being retained and relocated,the same considerations as above should be applied.



 
Your new TV is heavy, please consult with professional wall mount installer to perform this installation.

personal injury or death Many in, particularly to children, can be coded by takingimple precautions such as:Using cabinets or stands recommended by the manufacturer of the television setOnly using fumiture that can safely support the television setEnsuring the television set is not overhang ng the edge of the supporting fumitureNot placing the television set on all fumiture(for example, cupboards or bookcases)without anchoring both the fumiture and the television set to a suitable supportNot placing the television set on cloth or other materials that may be located between the television set and supporting fumitureEducating children about the dangers of climbing on fumiture to reach the televisionsel or its controlsIf your existing television set s being eta ned and relocated the same cons derations as above

Un grand nombre de blessures ou de décès, en particulier chez les enfants, peuvent être codés par des mesures préventives telles que l 'utilisation d 'une armoire ou d 'un support recommandés par le fabricant de téléviseurs, l 'utilisation d 'appareils de fumigation capables de supporter les télévisions en toute sécurité et l 'assurance que Les téléviseurs ne seront pas suspendus.Bordure d 'un appareil de fumigation d 'appoint: sans fixer les fumigateurs et les téléviseurs sur un support approprié, les téléviseurs sont placés sur tous les meubles (par exemple, dans un placard ou une bibliothèque) et non sur les tissus ou autres matériaux entre les téléviseurs.La fumigation aide les enfants à monter sur le matériel de fumigation pour atteindre la télévision ou son appareil de commande s 'ils ont atteint et réinstallé la même réduction.



# PREPARATIONS

## Remote Control

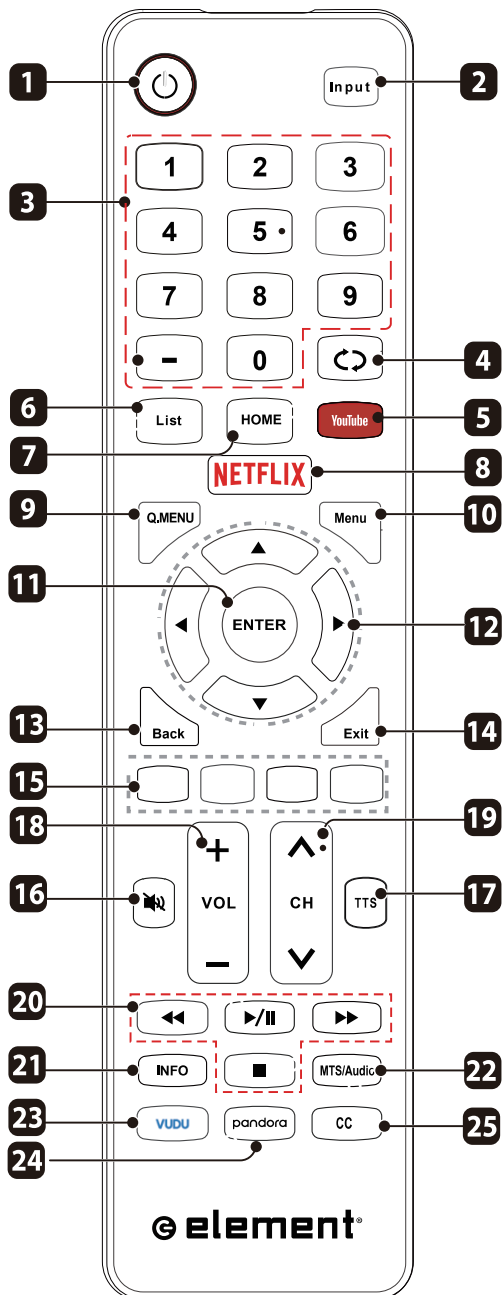

- POWER:** Turn the TV on and off.
- Input:** This button is used to switch among different sources, Select a source and press ENTER button to confirm.
- Digital Buttons(0-9, -):** Directly select channel with digital buttons.
- ↶:** Switch to the previous program.
- YouTube:** If network connects, press this key to view YouTube directly.
- List:** Press it to show channel list and favorite list on screen.
- HOME:** Press it to go to App home page.
- NETFLIX:** If network connects, press this key to view NETFLIX directly.
- Q.MENU:** Press this key to go to quick menu.
- Menu:** Display the main menu or exit the current menu.
- ENTER:** Validation key.
- Arrow buttons ▲▼◀▶:** Use to select on-screen menu items and change menu values.
- Back:** Return.
- Exit:** Exit the menu.
- Color buttons:** It's used as it's showed in the EPG or Program Edit menu.
- MUTE:** Press this button to cut off the sound of the TV set temporarily, press again to resume.
- TTS (Text-To-Speech):** Press this button to adjust TTS on or off.
- VOL +/-:** Press these buttons to adjust the volume.
- CH ^/v:** Press these buttons to change channel upward or downward.
- Digital Media Player controlbutton:** Include play/pause, stop, previous, next, backward, forward is used in USB mode. Please refer to relevant instructions in the section of multimedia player.
- INFO:** Display the program information.
- MTS/Audio:** In USB mode, press this button to switch audio track when movie is playing. In TV mode, press this button to switch MTS or Audio Language.
- VUDU:** Press this button to select VUDU application.
- Pandora:** Press this button to select pandora application.
- CC:** Press this button to adjust CC mode.


# Connecting External Devices

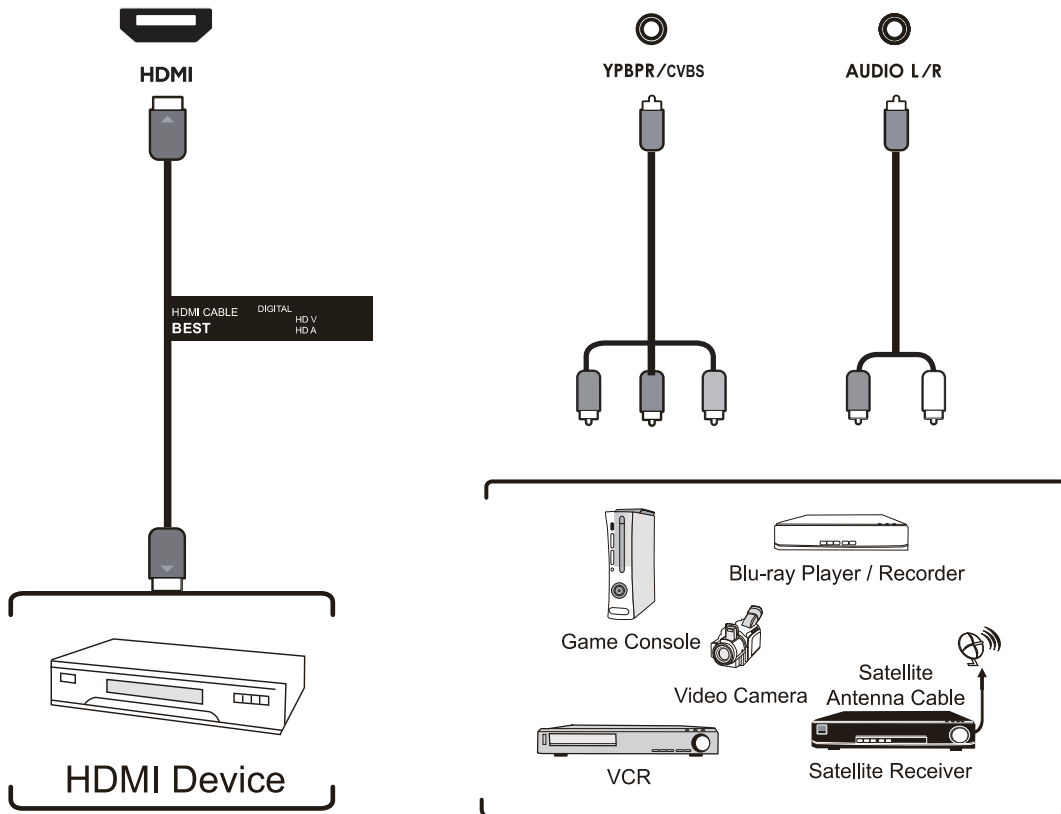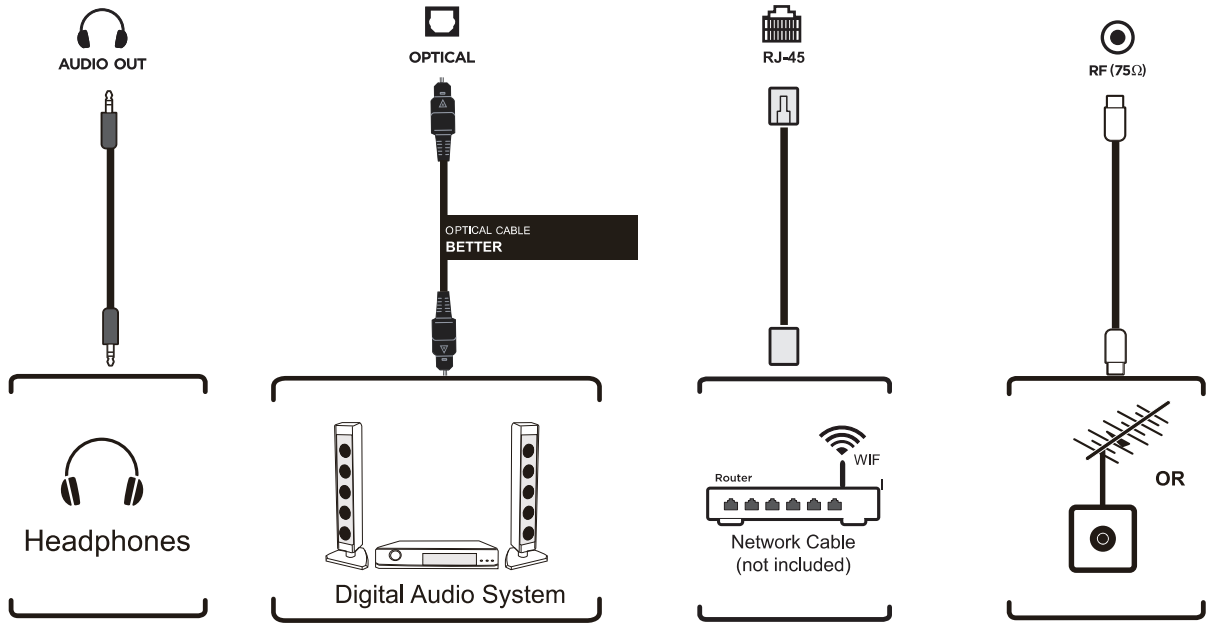  

Match colored connectors to colored ports on back side of the TV.

## INITIAL SETUP






### Turning On/Off Your TV

- Connect the power cord to the power socket after you have completed all the physical connections. At this stage, the TV will enter Standby Mode and the blue LED indicator will illuminate.
- In Standby Mode, press the  button on the main unit or on the remote control to turn the TV on.



The **POWER** button on the main unit or on the remote control can only switch the TV into standby. To completely turn off the TV, please disconnect the power cord from the power socket.

### Initial Setup

 
- Connect the power cord to the power socket after you have completed all the physical connections. At this stage, the TV will enter Standby Mode and the red LED indicator will illuminate.
- In Standby Mode, press the  button on the main unit or on the remote control to turn the TV on. The red LED indicator will turn blue.
- The first time you turn the TV on, it will go into the Setup Wizard. Press  /   /  buttons to select your desired mode and press **ENTER** confirm.



1




2

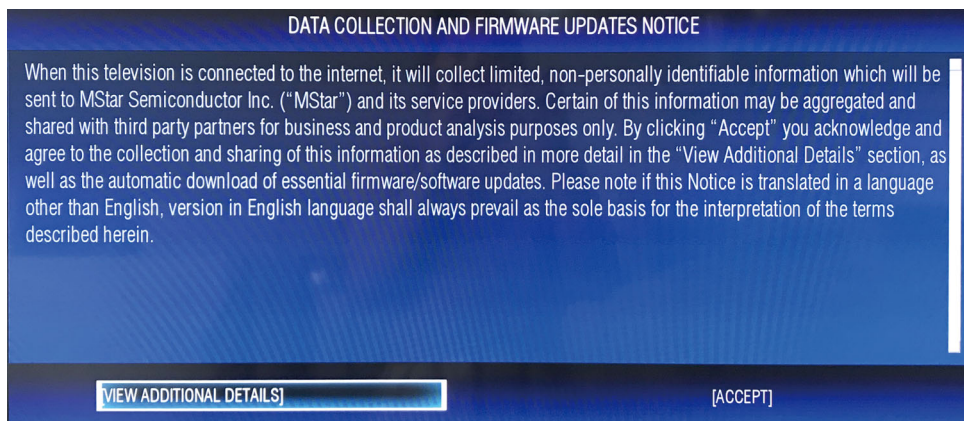


3

# CUSTOMIZING TV SETTINGS

 
## Initial Setup

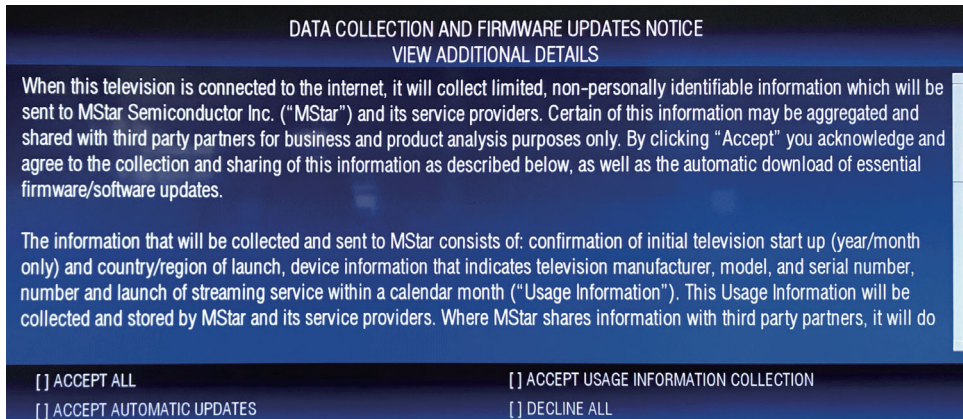


4

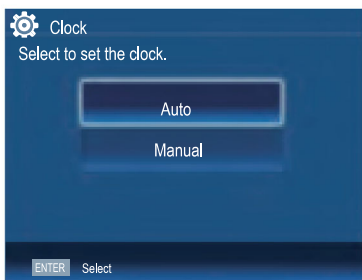 


5

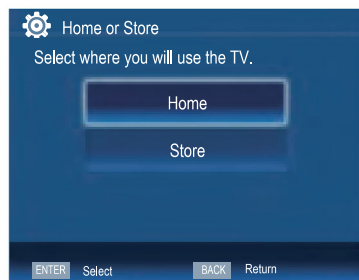 


6

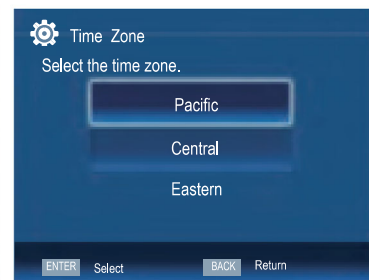 

7

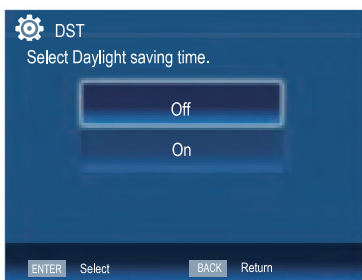 


8

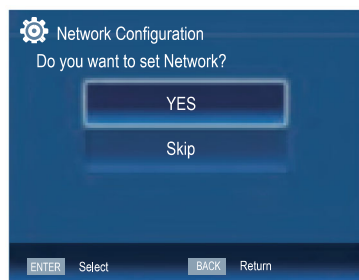 

9



 10

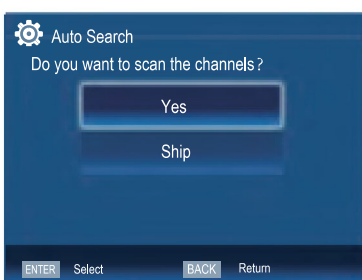

11

# INITIAL SETUP

 
---

## Source

### 1 Input Setup

Press **Input** key on the remote control to enter "INPUT SOURCE" menu. There are these options for you to select: "TV", "AV", "Component", "HDMI1", "HDMI2", "HDMI3", "USB".

Use ◀/▶ key to select a input source and press **ENTER** key to confirm.

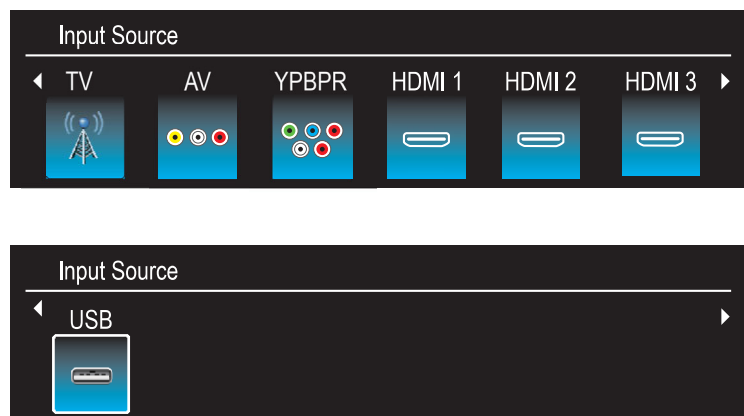

## Channel Selection

### 2 Channels Selection

There are four ways to select channel:

- 1) Using number keys, and **ENTER** keys on the remote control to select channel directly.

To select channel 90, press 9 → 0 → ENTER.

When you use the number buttons, you can directly select channels that were either erased or not memorized.




- 2) Using CH▲/▼ key on the remote control or on your TV to select channel.

When you press the CH▲/▼ key, the TV changes channels in sequence. You will see all the channels that the TV has memorized.

You will not see channels that were either erased or not memorized.

## INITIAL SETUP

---

- 3) Press  key to return to previous channel, press it again to return to current channel.  
To quickly switch between two channels that are far apart, tune to one channel, then use the number keys to select the second channel. Then use the  button to quickly alternate between them.  
 is not activated if no channel has been changed after TV turning on.
- 4) Select channels from "Channels List" or "Favorite List".  
Press **List** key to choose from "Channel List" menu.

### 3 Volume Adjustment and Mute Setup

#### Volume adjustment

Press VOL+/- key on the remote control or the TV to display "Volume" menu, adjust the volume of TV between 0 to 100 by using VOL+/- key:

- To increase the volume, press VOL+ key;
- To decrease the volume, press VOL- key;



 
#### Mute

Press "Mute" and the sound cuts off. The MUTE icon will appear in the lower-right corner of the screen.

To resume sound, press the "Mute" button again, or simply press the VOL+ key.

### 4 Current Channel Information

Press "INFO" key on the remote control to view current channel information, the indications of channel information are listed in the following table.

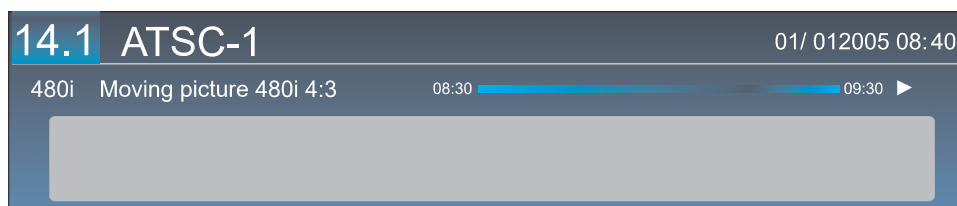

Press "EXIT" key on the remote control to exit this OSD.

# TV SETUP

 
## Picture

1. Press MENU key to display the main menu on the screen.
2. Press ▲/▼ key to select "Picture" option.
3. Press ► or ENTER key to enter "Picture" submenu.

### Picture Mode

Your TV has four picture settings ( Sports, Normal, Soft, User) that are preset at the factory. Only "User" mode can be set to your preference by adjusting particular items such as Contrast, Brightness, Color, Sharpness, Tint.

1. Press ▲/▼ key to select "Picture Mode" option.
2. Press ► or "ENTER" key to enter submenu.
3. Press ▲/▼ key to select one picture mode.
4. You can also press the **P.Mode** key on the remote control to select one of the picture settings.

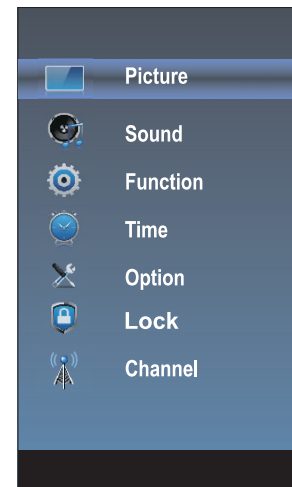

### User settings for PICTURE

#### (Contrast, Brightness, Color, Sharpness, Tint)

Your set has several settings which allow you to control picture quality.

1. Press ▲/▼ key to select a particular item.
2. Press ◀/▶ key to decrease or increase the value of a particular item.

Note: The adjusted values are stored according to the selected particular item.

A screenshot of the TV's Picture Mode settings menu. The 'Picture Mode' header is highlighted. Below it, several settings are listed with their current values: Contrast (50), Brightness (50), Color (50), Sharpness (50), Tint (0), and Backlight (100). The 'Color Temperature' option is also visible at the bottom.

Picture Mode	
Contrast	50
Brightness	50
Color	50
Sharpness	50
Tint	0
Backlight	100
Color Temperature	

Contrast: Adjusts the lightness and darkness between objects and the background.  
Brightness: Adjusts the brightness of the picture.  
Color: Adjusts the colors, making them lighter or darker.  
Sharpness: Adjusts the outline of objects to either sharpen them or make them more dull.  
Tint: Adjusts the Tint of the picture.

### Backlight

You can change the brightness of the entire screen according to your preference.

1. Press ▲/▼ key to select "Backlight" option.
2. Press ◀/▶ key to increase or decrease the backlight value.

Backlight: Adjusts the brightness of the whole screen.

### Color Temperature

You can change the color of the entire screen according to your preference.

1. Press ▲/▼ key to select "Color Temperature" option.
2. Press "►" or "ENTER" key to enter submenu.
3. Press ◀/▶ key to select one Color Temperature.

Cool: Makes whites bluish.  
Standard: Makes whites nature.  
Warm: Makes whites reddish.



## Sound

1. Press **MENU** key to display the main menu on the screen.
2. Press **▲/▼** key to select "Sound" option.
3. Press **▶** or **ENTER** key to enter "Sound" submenu.

 
### Sound Mode

You can select the type of the special sound effect to be used when watching a given broadcast.

Your TV has five sound settings ("Standard", "Music", "Movie", "Sports", "User") that are preset at the factory.

1. Press **▲/▼** key to select "Sound Mode" option.
2. Press **▶** or "ENTER" key to enter submenu.
3. Press **◀/▶** key to select one sound mode.
4. You can also press the **S.Mode** key on the remote control to select one of the sound.

Standard: Selects the normal sound mode.  
Music: Provides clear and live sound for music.  
Movie: Provides live and full sound for movies.  
Sports: Emphasizes bass over other sounds.  
User: Selects your custom sound settings.

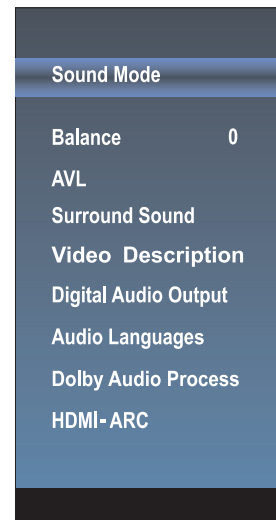

### Balance

If the volumes of the left speaker and the right speaker are not the same, you can adjust the "Balance" to suit your personal preference.

1. Press **▲/▼** key to select "Balance" option.
2. Press **◀/▶** key to decrease or increase the value of the item.

### AVL

Each broadcasting station has its own signal conditions, and it is inconvenient to adjust the volume every time the channel is changed. "AVL" automatically adjusts the volume of the desired channel by lowering the sound output when the modulation signal is high or by raising the sound output when the modulation signal is low.

1. Press **▲/▼** key to select "AVL" option, press **ENTER/▶** key to enter submenu.
2. Press **▲/▼** key to select "On" or "Off".

### Surround Sound

This is used to turn on surround sound to gain better sound effect.

1. Press **▲/▼** key to select "Surround Sound" option, press **ENTER/▶** key to enter submenu.
2. Press **▲/▼** key to select "Surround" or "Off".

### Video Description

1. Press **▲/▼** key to select "Video Description" option, press **ENTER/▶** key to enter submenu.
2. Press **▲/▼** key to select "On" or "Off".

## TV SETUP

### Digital Audio Output

This is used to set digital audio output.

1. Press ▲/▼ key to select "Digital Audio Output" option.  
Press ENTER/► key to enter submenu.
2. Press ▲/▼ key to select "Auto" or "PCM".

### Audio Languages

You can set the primary and secondary language for audio.

### Dolby Audio Process

This is used to set Dolby Audio Process.

1. Press ▲/▼ key to select "Dolby Audio Process" option.
2. Press ENTER/► key to enter "Dolby Audio Process" submenu.

Dolby Audio Process	
Dolby Audio Process	Off
Mode	Standard
Surround Virtualizer	High
Dialog Enhancer	High
Auto Volume Control	Off

### HDMI ARC

Turn on or turn off the HDMI ARC function.

## Function

1. Press **MENU** key to display the main menu on the screen.
2. Press ▲/▼ key to select "Function" option.
3. Press ENTER/► key to enter "Function" submenu.

### Noise Reduction

Press ▲/▼ key to select the Noise Reduction mode.

Press ENTER/► key to enter submenu.

Press ▲/▼ key to select the mode: off/low/middle/high/Auto.

### MPEG Noise Reduction

Press ▲/▼ key to select "MPEG Noise Reduction" option.

Press ENTER/► key to enter submenu.

Press ▲/▼ key to select the mode: off/low/middle/high.

The picture will be better when it is in "high" mode.

Noise Reduction
MPEG Noise Reduction
Aspect Ratio
Link Setup
HDMI EDID
Netflix Deactivate
Netflix ESN
Netflix Version
Vudu Deactivate
TTS

### Aspect Ratio

Press ▲/▼ key to select "Aspect Ratio" option. Press ENTER/► key to enter submenu.

Press ▲/▼ key to change the size of the picture on the size of the picture on the screen.

Select the aspect ratio settings: 4:3/16:9/Movie/Subtitle/Native/Panorama.

## TV SETUP

---

### Link Setup

1. Press ▲/▼ key to select "Link Setup" option.
2. Press ENTER or ► key to enter "Link Setup" submenu.  
Enable Link: Press ◀/▶ to turn on/off the link setup.  
Auto Power On: When this option is "On" and the TV is in standby mode. To turn on the DVD can also turn the TV at the same time.  
Auto Standby: When this Option is "On" and the TV is on, to turn off TV can also turn the DVD into standby mode.

Link Setup	
Enable link	On
Auto Power On	Off
Auto Standby	Off

### HDMI EDID

This function is only used in HDMI mode.

1. Press "▲/▼" key to select "HDMI EDID" option.
2. Press "►" or "ENTER" key to confirm.
3. Press ▲/▼ key to select "4K" or "2K".

### Netflix Deactivate

1. Press ▲/▼ key to select "Netflix Deactivate" option.
2. Press ENTER or ► key to confirm.
3. Press "Yes" to confirm again, the Netflix will be activated.

### Netflix ESN

Display the Netflix Esn information.

### Netflix Version

Display the Netflix version.

### Vudu Deactivate

1. Press "▲/▼" key to select "Vudu Deactivate" option.
2. Press "►" or "ENTER" key to confirm.

### TTS

You can set TTS information in the TTS menu.

## TV SETUP

### Time

 
1. Press MENU key to display the main menu on the screen.
2. Press ▲/▼ key to select "Time" option.
3. Press ENTER/▶ key to enter "Time" submenu.

#### Off Time

In "Off Time" item, press ▶ button or ENTER button to enter the submenu, set the day & time to turn off the TV set.

#### On Time

In "On Time" item, press ▶ button or ENTER button to enter the submenu, set the time to turn on the TV set, when the TV set is in the standby mode. You can also choose which day to control your TV set in a week.

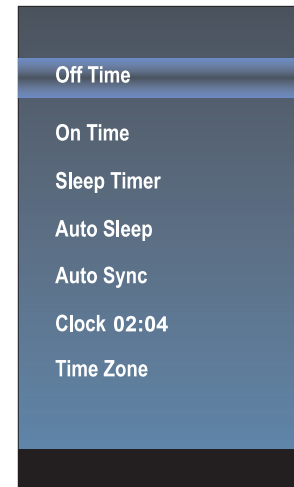

#### Sleep Timer

1. Press ▲/▼ key to select "Sleep Timer" option, press ▶ or ENTER button to enter the submenu.
2. Press ▲/▼ key repeatedly until the desired time appears (Off, 10mins, 20mins, 30mins, 60mins, 90mins, 120mins, 180mins, 240mins).

Notes: The sleep timer you have set will be cancelled when the TV turns off or if a power failure occurs.

Notes: When the time is less than 60 seconds, remind information will be displayed on the screen. Press any key button to cancel timer function.

#### Auto Sleep

Press ▲/▼ key to select whether to open the No signal Power off features. If this function is opened, the TV will power off in ten minutes when there is no signal.

#### Auto Sync

You can modify the time of your TV set in Manual mode. In Auto mode, the "clock" is decided by the DTV signal.

#### Clock

When Auto Sync is on, the clock is got from DTV streams; Set the clock when Auto Sync is off.

#### Time Zone

You can choose it to modify your time zone in the TV set.

1. Press ▲/▼ key to select "Time Zone" option, press ▶ or ENTER button to enter the submenu.
2. Press ▲/▼ key to select time zone.