

INITIAL SETUP

PUTTING THE UNIT ON A PROPER PLACE

When you turn on your television set for the first time, be sure to place it on a solid stable surface.

To avoid danger, do not expose the TV to water, or a heat source (e.g. lamp, candle, radiator).

 
Do not obstruct the ventilation grid at the rear and be sure to leave sufficient gaps around the unit.



1 Input Setup

Press **Input** key on the remote control to enter "INPUT SOURCE" menu. There are these options for you to select: "TV", "AV", "Component", "HDMI1", "HDMI2", "HDMI3", "USB".

Use ◀/▶ key to select a input source and press **ENTER** key to confirm.

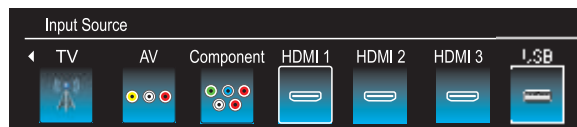

2 Channels Selection

There are four ways to select channel:

- 1) Using number keys, and **ENTER** keys on the remote control to select channel directly.

To select channel 90, press 9 → 0 → ENTER.




When you use the number buttons, you can directly select channels that were either erased or not memorized.

- 2) Using CH▲/▼ key on the remote control or on your TV to select channel.

When you press the CH▲/▼ key, the TV changes channels in sequence. You will see all the channels that the TV has memorized.

You will not see channels that were either erased or not memorized.

INITIAL SETUP

- 3) Press  key to return to previous channel, press it again to return to current channel.
To quickly switch between two channels that are far apart, tune to one channel, then use the number keys to select the second channel. Then use the  button to quickly alternate between them.
 is not activated if no channel has been changed after TV turning on.
- 4) Select channels from "Channels List" or "Favorite List".
Press **List** key to choose from "Channel List" menu.

3 Volume Adjustment and Mute Setup

Volume adjustment

Press VOL+/- key on the remote control or the TV to display "Volume" menu, adjust the volume of TV between 0 to 100 by using VOL+/- key:

- To increase the volume, press VOL+ key;
- To decrease the volume, press VOL- key;



 
Mute

Press "Mute" and the sound cuts off. The MUTE icon will appear in the lower-right corner of the screen.

To resume sound, press the "Mute" button again, or simply press the VOL+ key.

4 Current Channel Information

Press "INFO" key on the remote control to view current channel information, the indications of channel information are listed in the following table.

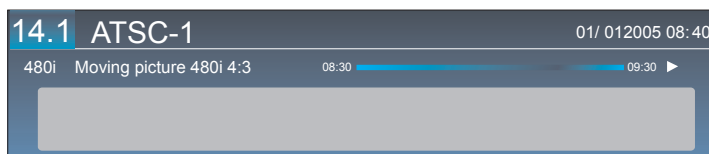

Press "EXIT" key on the remote control to exit this OSD.

TV SETUP

 
PICTURE

1. Press MENU key to display the main menu on the screen.
2. Press ▲/▼ key to select "Picture" option.
3. Press ► or ENTER key to enter "Picture" submenu.

Picture Mode

Your TV has four picture settings (Sports, Normal,Soft,User) that are preset at the factory. Only "User" mode can be set to your preference by adjusting particular items such as Contrast, Brightness, Color, Sharpness,Tint.

1. Press ▲/▼ key to select "Picture Mode" option.
2. Press ► or "ENTER" key to enter submenu.
3. Press ▲/▼ key to select one picture mode.
4. You can also press the **P.Mode** key on the remote control to select one of the picture settings.

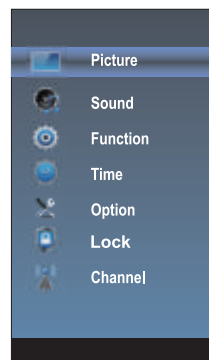


User settings for PICTURE (Contrast, Brightness, Color, Sharpness,Tint)

Your set has several settings which allow you to control picture quality.

1. Press ▲/▼ key to select a particular item.
2. Press ◀/▶ key to decrease or increase the value of a particular item.

Note: The adjusted values are stored according to the selected particular item.

 Contrast: Adjusts the lightness and darkness between objects and the background.
Brightness: Adjusts the brightness of the picture.
Color: Adjusts the colors, making them lighter or darker.
Sharpness: Adjusts the outline of objects to either sharpen them or make them more dull.
Tint: The " Tint" item only works in user mode.
Adjusting Tint will affect the skin tone. -50 will increase red, +50 will increase green. Ideally, the tint scale on the TV OSD should show the red/green color for easy adjustment.

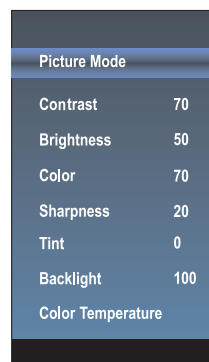

Backlight

You can Change the brightness of the entire screen according to your preference.

1. Press ▲/▼ key to select "Backlight" option.
2. Press ◀/▶ key to increase or decrease the backlight value.

Backlight: Adjusts the brightness of the whole screen.

Color Temperature

You can change the color of the entire screen according to your preference.

1. Press ▲/▼ key to select "Color Temperature" option.
2. Press ► or "ENTER" key to enter submenu.
3. Press ◀/▶ key to select one Color Temperature.

Cool: Makes whites bluish.
Standard: Makes whites nature.
Warm: Makes whites reddish.

TV SETUP

Sound

 
1. Press **MENU** key to display the main menu on the screen.
2. Press **▲/▼** key to select "Sound" option.
3. Press **▶** or **ENTER** key to enter "Sound" submenu.

Sound Mode

You can select the type of the special sound effect to be used when watching a given broadcast. Your TV has five sound settings ("Standard", "Music", "Movie", "Sports", "User") that are preset at the factory.

1. Press **▲/▼** key to select "Sound Mode" option.
2. Press **▶** or **ENTER** key to enter submenu.
3. Press **◀/▶** key to select one sound mode.
4. You can also press the **S.Mode** key on the remote control to select one of the sound.

Standard: Selects the normal sound mode.
Music: Provides clear and live sound for music.
Movie: Provides live and full sound for movies.
Sports: Emphasizes bass over other sounds.
User: Selects your custom sound settings.

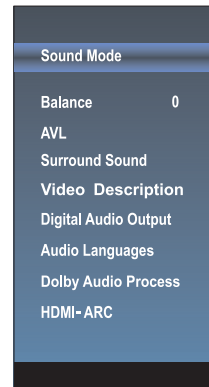

Balance

If the volumes of the left speaker and the right speaker are not the same, you can adjust the "Balance" to suit your personal preference.

1. Press **▲/▼** key to select "Balance" option.
2. Press **◀/▶** key to decrease or increase the value of the item.

AVL

Each broadcasting station has its own signal conditions, and it is inconvenient to adjust the volume every time the channel is changed. "AVL" automatically adjusts the volume of the desired channel by lowering the sound output when the modulation signal is high or by raising the sound output when the modulation signal is low.

1. Press **▲/▼** key to select "AVL" option, press **ENTER/▶** key to enter submenu.
2. Press **▲/▼** key to select "On" or "Off".

Surround Sound

This is used to turn on surround sound to gain better sound effect.

1. Press **▲/▼** key to select "Surround Sound" option, press **ENTER/▶** key to enter submenu.
2. Press **▲/▼** key to select "Surround" or "Off".

Video Description

1. Press **▲/▼** key to select "Video Description" option, press **ENTER/▶** key to enter submenu.
2. Press **▲/▼** key to select "On" or "Off".

TV SETUP

Digital Audio Output

This is used to set digital audio output.

1. Press ▲/▼ key to select "Digital Audio Output" option.
Press ENTER/▶ key to enter submenu.
2. Press ▲/▼ key to select "Auto" or "PCM".

Audio Language

You can set the primary and secondary language for audio.

Dolby Audio Process

This is used to set Dolby Audio Process.

1. Press ▲/▼ key to select "Dolby Audio Process" option.
2. Press ENTER/▶ key to enter "Dolby Audio Process" submenu.

| Dolby Audio Process | |
|----------------------|----------|
| Dolby Audio Process | Off |
| Mode | Standard |
| Surround Virtualizer | High |
| Dialog Enhancer | High |
| Auto Volume Control | Off |

HDMI ARC

Turn on or turn off the HDMI ARC function (only works in HDMI 1 channel).

Function

1. Press **MENU** key to display the main menu on the screen.
2. Press ▲/▼ key to select "Function" option.
3. Press ENTER/▶ key to enter "Function" submenu.

Noise Reduction

Press ▲/▼ key to select the Noise Reduction mode.

Press ENTER/▶ key to enter submenu.

Press ▲/▼ key to select the mode: off/low/middle/high/Auto.

MPEG Noise Reduction

Press ▲/▼ key to select "MPEG Noise Reduction" option.

Press ENTER/▶ key to enter submenu.

Press ▲/▼ key to select the mode: off/low/middle/high. The picture will be better when it is in "high" mode.

| Noise Reduction |
|----------------------|
| MPEG Noise Reduction |
| Aspect Ratio |
| Link Setup |
| HDMI EDID |
| Netflix Deactivate |
| Netflix ESN |
| Netflix Version |
| Vudu Deactivate |
| TTS |

Aspect Ratio

Press ▲/▼ key to select "Aspect Ratio" option. Press ENTER/▶ key to enter submenu.

Press ▲/▼ key to change the size of the picture on the size of the picture on the screen.

Select the aspect ratio settings:4:3/16:9/Movie/Subtitle/Native/Panorama.

TV SETUP

Link Setup

1. Press ▲/▼ key to select "Link Setup" option.
2. Press ENTER or ► key to enter "Link Setup" submenu.
Enable Link: Press ◀/▶ to turn on/off the link setup.
Auto Power On: When this option is "On" and the TV is in standby mode. To turn on the DVD can also turn the TV at the same time.
Auto Standby: When this Option is "On" and the TV is on, to turn off TV can also turn the DVD into standby mode.

| Link Setup | |
|---------------|-----|
| Enable link | On |
| Auto Power On | On |
| Auto Standby | Off |

HDMI EDID

This function is only used in HDMI mode.

1. Press "▲/▼" key to select "HDMI EDID" option.
2. Press "►" or "ENTER" key to confirm.
3. Press ▲ / ▼ key to select "4K" or "2K".

Netflix Deactive

1. Press ▲/▼ key to select "Netflix Deactive" option.
2. Press ENTER or ► key to confirm.
3. Press "Yes" to confirm again, the Netflix will be activated.

Netflix ESN

Display the Netflix Esn information.

Netflix Version

Display the Netflix version.

Vudu Deactivate

1. Press "▲/▼" key to select "Vudu Deactivate" option.
2. Press "►" or "ENTER" key to confirm.

TTS

You can set TTS information in the TTS menu.

TV SETUP

Time

 
1. Press MENU key to display the main menu on the screen.
2. Press ▲/▼ key to select "Time" option.
3. Press ENTER/► key to enter "Time" submenu.

Off Time

In "Off Time" item, press ► button or ENTER button to enter the submenu, set the day & time to turn off the TV set.

On Time

In "On Time" item, press ► button or ENTER button to enter the submenu, set the time to turn on the TV set, when the TV set is in the standby mode. You can also choose which day to control you TV set in a week.

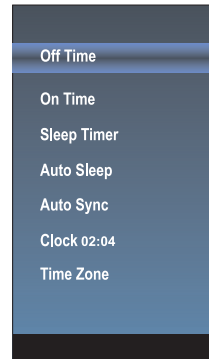

Sleep Timer

1. Press ▲/▼ key to select "Sleep Timer" option,press ► or ENTER button to enter the submenu.
2. Press ▲/▼ key repeatedly until the desired time appears (Off, 10mins, 20mins, 30mins, 60mins, 90mins, 120mins, 180mins, 240mins).

Notes: The sleep timer you have set will be cancelled when the TV turns off or if a power failure occurs.

Notes: When the time is less than 60 seconds, remind information will be displayed on the screen. Press any key button to cancel timer function.

Auto Sleep

Press ▲/▼ key to select whether to open the Nosignal Power off features. If this function is opened, the TV will power off in ten minutes when there is no signal.

Auto Sync

You can modify the time of your TV set in Manual mode. In Auto mode, the "clock" is decided by the DTV signal.

Clock

When Auto Sync is on, the clock is got from DTV streams; Set the clock when Auto Sync is off.

Time Zone

You can choose it to modify your time zone in the TV set.

1. Press ▲/▼ key to select "Time Zone" option,press ► or ENTER button to enter the submenu.
2. Press ▲/▼ key to select time zone.

TV SETUP

Option

1. Press MENU key to display the main menu on the screen.
2. Press ▲/▼ key to select "Option" option.
3. Press ► or ENTER key to enter "Option" submenu.

OSD Language

1. Press ▲/▼ key to select "OSD Language" option.
2. Press ENTER or ► key to enter submenu.
Press ▲/▼ key to select a proper language for OSD.

OSD Time

Set the preferred amount of time for the OSD to be displayed on the screen.

Closed Caption

1. Press ▲/▼ key to select "Closed Caption" option.
Press ENTER or ► key to enter submenu.
2. Press ▲/▼ key to select CC mode.

Reset

1. Press ▲/▼ key to select "Reset" option.
2. Press ► or ENTER key to confirm.
3. Press "Yes" to confirm again, TV will turn off automatically and change all setting to factory setting.

Network Configuration

Please refer to "Network setting" behind.

Software Update(USB)

When the TV need to be updated, please copy the new software to a USB storage and inset the USB storage to TV, then operating by following steps.

1. Press ▲/▼ key to select "Software Update(USB)" option.
2. Press ► or ENTER key to confirm.
3. Press "Yes" to confirm again, the TV will update by USB, Please wait a few minutes and don't turn off the power, it will turn off automatically when updating is finish.

View End-User License

1. Press "▲/▼" key to select "View End-User License" option.
2. Press "►" or "ENTER" key to confirm.

Internet Update Check

 
This can update TV through internet.

Network Update Information

Display the Network Update Information.

User Mode

1. Press ▲/▼ key to select "User Mode" option.
2. Press ► or ENTER key to confirm.
3. Switch to use mode "Home" or "Store".

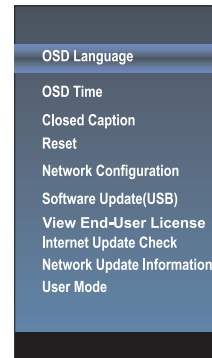

TV SETUP

Lock

The "Lock" feature automatically locks out programming that is deemed inappropriate for children. The user must first enter a Password before any of the lock restrictions can be set up or changed.

1. Press ▲/▼ key to select "Lock" option.
2. Press ENTER or ► key to enter "Lock" submenu, "Enter Password" menu will appear, enter your 4-digit password to enter "Lock" submenu (the default password is 0000, and the universal password is 1980).

Lock System

Set the Lock function on or off.

1. Press ▲/▼ key to select "Lock System" option.
2. Press "►" or "ENTER" key to confirm.
3. Press ▲/▼ key to select "On" or "Off".

Set Password

1. Press ▲/▼ key to select "Set Password" option.
2. Enter your 4-digit password to enter "Set Password" submenu. Choose any 4-digits for your new password and enter them. As soon as the 4 digits are entered, the cursor skipped to "Confirm Password" item, re-enter the same 4 digits, and your new password has been memorized.

When the programs is locked, you can also press the menu key, Info key and so on. Then you can press ◀/▶ key to call back the input-password window.

USA TV

 
 
1. Press ▲/▼ key to select "USA TV" option.
2. Press ENTER or ► key to open USA TV menu.

USA MPAA

1. Press ▲/▼ key to select "USA MPAA" option.
2. Press ENTER or ► key to open USA MPAA menu.

Canada English

1. Press ▲/▼ key to select "Canada English" option.
2. Press ENTER or ► key to open Canada English menu.

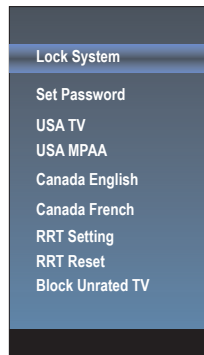

TV SETUP

Canada French

1. Press ▲/▼ key to select "Canada French " option.
2. Press ENTER or ►key to open Canada French menu.

RRT Setting

 
1. Press ▲/▼ key to select "RRT Setting " option.
2. Press ENTER or ►key to open RRT Setting menu.

RRT Reset

1. Press ▲/▼ key to select "RRT Reset " option.
2. Press ENTER or ►key to open RRT Reset menu.

Block Unrated TV

1. Press ▲/▼ key to select "Block Unrated TV" option.
2. Press ENTER or ►key to open Block Unrated TV menu.

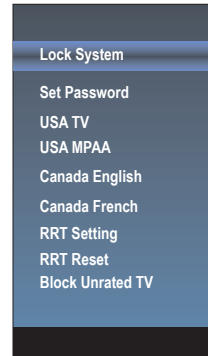

TV SETUP

Channel

Before your television can begin memorizing the available channels, you must specify the type of signal source that is connected to the TV (i.e. an antenna or a cable system).

1. Press MENU key to display the main menu on the screen.
2. Press ▲/▼ key to select "Channel" option.
3. Press ENTER or ► key to enter "Channel" submenu.

Antenna Mode

1. Press ▲/▼ key to select "Antenna Mode" option.
2. Press ► or "ENTER" key to enter submenu.
3. Press ▲/▼ key to select "Antenna" or "CABLE"

Auto Search

1. Press ▲/▼ key to select "Auto Search" option.
2. Press ► or ENTER key to enter submenu. then a notice window will be displayed on the screen. Select "Start" to start search or "Cancel" to cancel it. When searching, press EXIT key to exit tuning at any moment. Press MENU key to skip DTV tuning when searching DTV, skip ATV tuning when searching ATV.
3. After all the available channels are stored, the searching menu will exit.

Program Edit

After the program is searched, select "Program Edit" in the "Channel" menu, press "ENTER" button, program can be edited such as delete or skip according to the user's habit.

Skip (Blue) Button

 
 
This function can help shield certain program. Program skips when selecting program by the "▲/▼" button on the TV or remote control.

1. Select the program to be shielded in the "Program Edit".
2. Press "Skip" (Blue) button, the skip mark is displayed at the left side of the program and this program is shielded.
3. To cancel the Skip function, enter the channel edit menu, select the shielded program and press "Skip" (Blue) button, the skip mark at the left side of the program disappears then program is recovered.

Delete (Red) Button

This function can help delete program.

1. Select the program to be deleted in the "Program Edit".
2. Press "Delete"(Red) button, the program will be deleted.

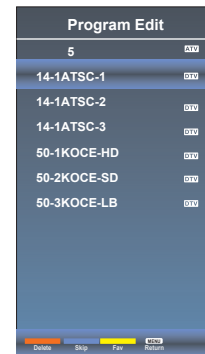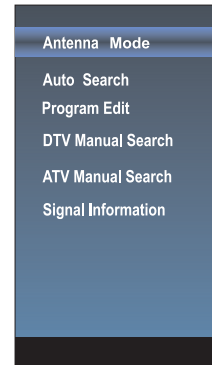

TV SETUP

 
Favorite(Yellow) button

This function can help store the favorite program then these programs can be quickly selected.

1. Select the program which is favorite.
2. Press "Fav"(Yellow) Button, the favorite mark is displayed at the left side of the Program Edit is store into the Favorites.
3. To cancel the Favorite function, enter the program edit menu, select the program and press "Fav"(Yellow) button, the favorite mark at the left side of the program disappears.

DTV Manual Search

Enter digital number and press "ENTER" to select DTV Channel.

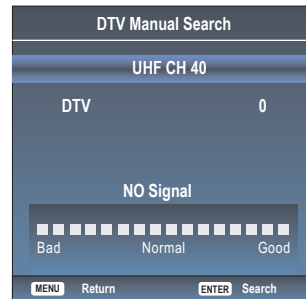

ATV Manual Search

 
1. Press ▲/▼ key to select "ATV Manual Search" option.
2. Press ► or ENTER key to enter submenu.

Current CH

1. Press ▲/▼ key to select the Current CH.
2. Press ◀/▶ key to select current channel.

Fine-Tune

1. Press ▲/▼ key to select the Fine-Tune.
2. Press ◀/▶ key to select a better frequency for current channel.

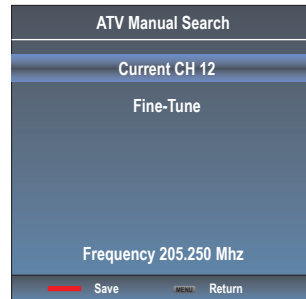


Signal Information(Used only in DTV)

1. Press ▲/▼ key to select "Signal Information" option.
2. Press "ENTER" or ► key ,you can see the information of the DTV channel.



Network Setting

 1. Press the "Menu" to enter, then pitch on the "Option", and press "ENTER" or click the right button to enter the submenu.

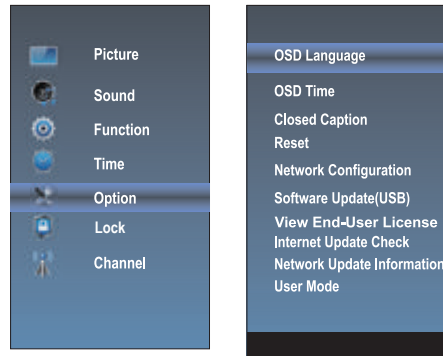


2. Pitch on the "Network Configuration", and press "ENTER" or click right button to enter the "Network Configuration".




3. When the wired network is used, if select dynamic IP address setting, pitch on the "DHCP" in the "Network Configuration", then click the "Setting", and press the "ENTER" button to enter.

If select static IP address setting, pitch on the "Static" in the "Network configuration", then setting up the IP, Netmask, Gateway and DNS in sequence. When the setting complete, pitch on the "setting" and press the "Enter".

 
Network Setting

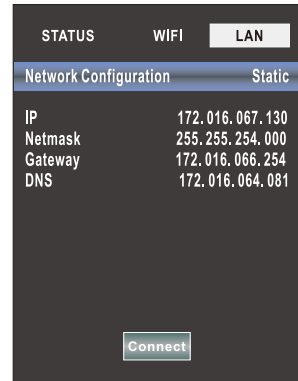

 4. If shows "Success", the "WLAN" on the bottom right corner will turn to green from red, and it means the network connect successfully; If shows "Not Connected", it means the network can not connect, please check whether the net wire and router connect successfully or not.

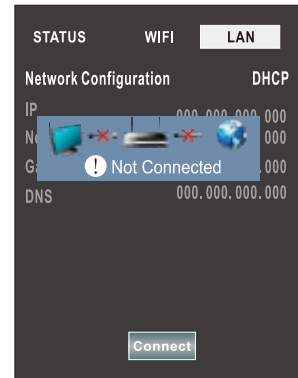

 5. Select the "WIFI" in the Network Configuration before using WIFI connecting.

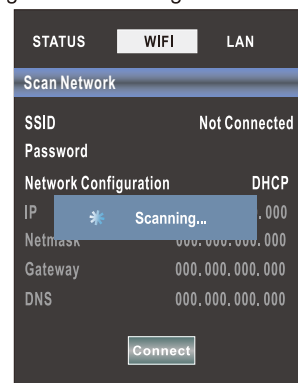


Network Setting

Pitch on the "Setting", press the "ENTER" to confirm. If shows "Success", the "WIFI" on the bottom right corner will turn to green from red, and it means the network connect successfully; If shows "Not Connected", it means the network can not connect, please check whether the wireless router connects successfully or not.




Internet

 Press “” key to enter internet interface (VUDU and Pandora USA only).

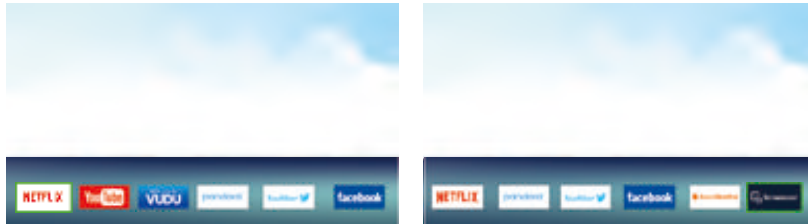


1. NETFLIX

 
- 1 Use arrow key to Select  button, then press “ENTER” key to enter NETFLIX.

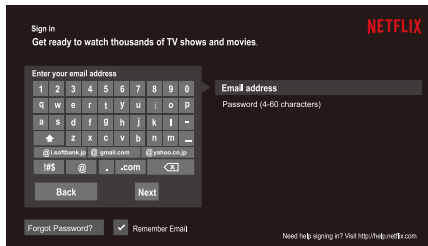


- 2 Use arrow button to select one video and press “ENTER” key to play.
Press “MENU” key to exit playing.
- 3 Use arrow key to browse the pages. press “MENU” key to return to main menu and press “EXIT” key to exit.

2. Youtube

 
- 1 Use arrow key to Select  button, then press “ENTER” key to enter Youtube.

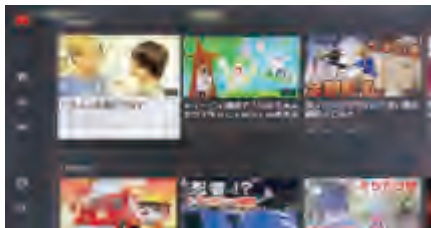

- 2 Use arrow button to select one video and press “ENTER” key to play.
Press “MENU” key to exit playing.
- 3 Press  key to open or close control menu when playing.


Internet

3.VUDU

- ① Use arrow key to Select  button, then press "ENTER" key to enter VUDU.




4.pandora

- ① Use arrow key to Select  button, then press "ENTER" key to enter pandora.



 
5.Twitter

- ① Use arrow key to Select  button, then press "ENTER" key to enter Twitter.



Internet

- Input the right Email and password, then select "Authorize app" button and press "ENTER" key to log in.

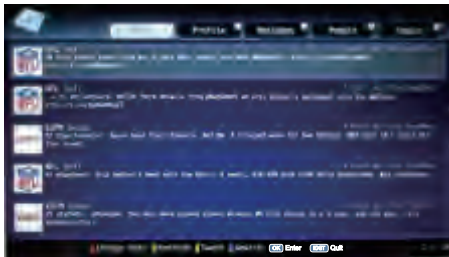


- Use arrow key to browse the pages. press "MENU" key to return to main menu and press "EXIT" key to exit twitter.

Red key: log in or log out twitter.
Green key: refresh current page.
Yellow key: write new tweet.
Blue key: Search tweet.

6. Facebook

 - Use arrow key to Select **facebook** button, then press "ENTER" key to enter Facebook.

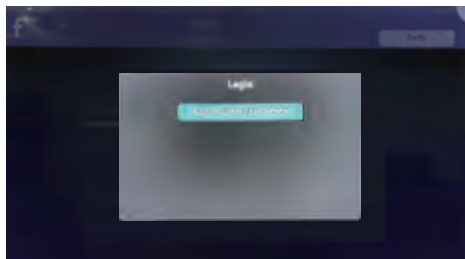

- Input the right Email and password, select "log In" button, then press "ENTER" key to log in.



Internet

- ③ Press arrow key to browse the pages and press "ENTER" key to view.
Press "MENU" key to return the main menu.
Press "EXIT" key to exit Facebook.

Red key: log in or log out Facebook.

Green key: refresh current page.

Yellow key: sign "like" or "unlike" for current content.

Blue key: view comments and add comments.

7. Accuweather

- ① Use arrow key to Select  button, then press "ENTER" key to enter Accuweather.

 


- ② Input a city or zip code press select to get the weather information.

8. Screencast

Use arrow key to Select  button, then press "ENTER" key to enter Screencast.

This function depends on the devices. Please search "Screencast" on the devices to connect to the TV.

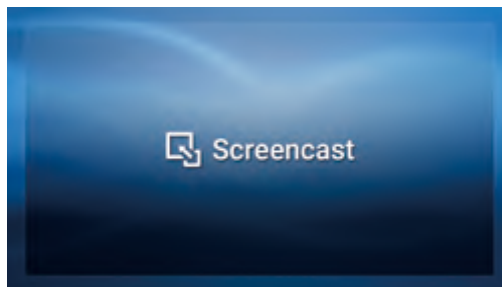

Digital Media Player

This TV is embedded with one USB port digital media player. It can find the devices support USB1.1/2.0, including flash disk, USB hard disk and digital camera. It supports functions as: Display pictures, Play music files, Play video files, Display text files.

Notice:


1. In order to avoid affecting the user's viewing experience, please use the better quality and shorter USB cable.
2. Play, preview some of the non-standard files may appear abnormal, please understand.

Explain:

1. Under the USB channel, you can use only the remote control.
2. Play Control menu to enter the playing surface to press the menu button pop-up menu

| Data | Support Format |
|---------|------------------------|
| Picture | JPG\BMP\PNG |
| Movie | DAT\MKV\MP4\AVI\TS\FLV |
| Music | MP3\M4A |

 Remote Control Button

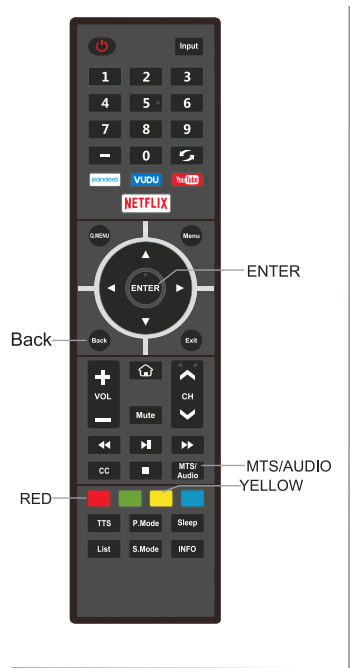

Description of Buttons:

| Buttons | Function |
|-----------|------------------------------|
| MTS/AUDIO | Track switch (video) |
| Back | Show/Hide movie info (video) |
| YELLOW | AB Loop (Video) |
| RED | Goto Time (Video) |
| ▶/■ | Play/Pause |
| ■ | Stop |
| ◀◀ | Backward |
| ▶▶ | Forward |

DISPLAY MODE

VIDEO FORMATS

| SUPPORTED COMPONENT/ HDMI INPUT MODE | | | |
|--------------------------------------|---------------------------------------|----------------------------------|--------|
| Resolution | Horizontal Scanning Frequency (kHz) | Vertical Scanning Frequency (Hz) | Format |
| 720 x 480 | 31.47 | 59.94 | 480 i |
| 720 x 480 | 15.734 | 59.94 | 480 p |
| 1280 x 720 | 37.5 | 50 | 720 p |
| 1280 x 720 | 45 | 60 | 720 p |
| 1920 x 1080 | 31.25 | 50 | 1080 i |
| 1920 x 1080 | 33.75 | 60 | 1080 i |
| 1920 x 1080 | 27 | 24 | 1080 p |
| 1920 x 1080 | 56.25 | 50 | 1080 p |
| 1920 x 1080 | 67.50 | 60 | 1080 p |
| 3840 x 2160 | 67.50 | 60 | 2160p |

NOTE:

The above listed formats are also related to the AV devices you are about to connect. Before you connect this unit with others please read all instructions carefully and make sure all necessary cables are connected.

This unit may be incompatible with some other formats which are not meet the above conditions.

SPECIFICATION

| ModelDescription | | 55" LED TV |
|----------------------|-------------------------|--|
| Panel | Panel Type | LED Panel |
| | Diagonal Size | 55 inches |
| | Screen Format | 16:9 |
| | Resolution | 3840x2160 |
| | Brightness | 250 nits |
| | Contrast | 3000:1 |
| | View Angle | 178(H)/178(V) |
| | Response Time | 8 ms |
| | Maximum Color | 16. 7M colors |
| | Refresh Rate | 60Hz |
| Systems | Color System | ATSC/NTSC |
| | Sound System | M |
| | Audio System | MTS |
| | Sound Output | L/RSpeaker: 10W+10W |
| Input / Output Jacks | RF Input | 75 ohm external terminal |
| | HDMI Input | Video: 480i,480p,576i,576p,720p,1080i,1080p,2160p Audio: Two channel linear PCM32, 44.1 and 48kHz , 16, 20 and 24bits |
| | Composite Video Input | 1.0 Vp-p, 75 ohms 3.5mm jack |
| | Component / YPbPr Input | 3.5mm jack Y: 1.0 Vp-p, 75 ohms, 0.3V negative sync Pb: 0.7Vp-p, 75 ohms Pr: 0.7Vp-p, 75 ohms |
| | Sound Input | Component AUDIO: For Component Audioinput AV AUDIO: For CVBS Audioinput 500mV rms, Impedance: 20k ohms |
| | Digital Audio Out | Optical |
| | USB | Media Player |
| Power | Power Requirement | 100-240V~ 50/60Hz |
| | Rated power consumption | 145W |

This manual is only for your reference.
Specifications are subject to update without prior notice.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body

TROUBLESHOOTING GUIDE

| SYMPTOM | CAUSE (AND REMEDY) |
|--|---|
| TV | |
| Bad Picture (snow, multiple images distortion, blurry) | <ul style="list-style-type: none"> • Check the location of the antenna and adjust it if necessary. • Make sure the antenna cable is firmly connected. • Make sure all input cables are firmly connected. |
| No sound. | <ul style="list-style-type: none"> • Increase the volume. • Check whether the mute function has been activated on the Remote Control. |
| Black and White picture. | <ul style="list-style-type: none"> • Check the PICTURE setting within the PICTURE menu. • Check to make sure the program you are watching is broadcast in Color and not Black & White. |
| No picture or sound. | <ul style="list-style-type: none"> • Make sure the unit is plugged in and turned on. • Make sure that the ATV mode is selected. • Try a new channel to check for possible station trouble. • Make sure the antenna is connected properly. • Increase the volume. • Make sure the antenna or audio/video source device is working properly. • Make sure all cables are firmly connected. • Check for local interference. |
| Colored patches of picture. | <ul style="list-style-type: none"> • Make sure there are no unshielded electrical devices nearby that are causing interference. • Turn the TV off for 30 minutes, then try it again. |
| Panel function key does not respond correctly. | <ul style="list-style-type: none"> • Under the influence of electrostatic phenomenon, the product may malfunction and require user to power reset. • Unplug and re-plug the AC power cord. |
| The display monitor's panel goes hot. | <ul style="list-style-type: none"> • LED TV takes inside light phosphor. It may increase the temperature of the screen in some occasions. It's not a defect. |
| Unusual dots | <ul style="list-style-type: none"> • Black dots and Bright points may appear on the LED screen. This is a structural property of the LED panel and is not a defect. |
| Stripes on screen | <ul style="list-style-type: none"> • Adjust the impulse phase may decrease stripes. (RGB in) |
| The top of the monitor gets hot . | <ul style="list-style-type: none"> • It may occur during long-time working. It's not a defect. |
| Unable to select a certain channel. | <ul style="list-style-type: none"> • The channel may be skipped. Choose this channel by directly selecting the buttons from the remote control. |
| Disorder display at power on. | <ul style="list-style-type: none"> • This may be caused because of a very short interval between POWER OFF and ON. • Unplug the power and restart. |



MANUEL D'INSTRUCTIONS

Avant d'utiliser le téléviseur, veuillez lire attentivement ce manuel et gardez-le pour référence future.



Model: RNSMU5536-C

Ce produit est fabriqué et vendu par Curtis International Ltd. RCA, le logo de la RCA, le logo de deux chiens (Nipper et Chipper), sont des marques déposées ou des marques déposées de marque RCA Gestion et sont utilisés sous licence par Curtis International Ltd.

Tout autre produit, service, entreprise, commerce ou produit nom et le logo mentionnés aux présentes ne sont ni approuvés ni sponsorisés par Gestion de marque RCA ou de ses filiales.

Contenu

| | | |
|---|-----------------------------------|--|
| 1 | CONSIGNES DE SÉCURITÉ IMPORTANTES | 1 |
| 2 | ACCESSOIRES | 2 |
| 3 | DÉMARRAGE | 2 |
| 4 | GUIDE DE RÉFÉRENCE DE CONTRÔLE | Télécommande 3 Vue de face 4 Vue arrière 4 |
| 5 | CONNEXIONS | Connexion d'antenne 6 Connexion AV 6 Connexion de Y Pb Pr 7 Connexion HDMI 7 Connexion casque 8 Connexion du cordon d'alimentation 8 Connexion audio numérique 9 |
| 6 | INSTALLATION DU MONTAGE MURAL | 10 |
| 7 | CONFIGURATION INITIALE | 11 |
| 8 | CONFIGURATION DE TÉLÉVISEUR | Menu de Image 15 Menu de Son 16 Menu de Fonction 17 Menu de horaire 19 Menu de option 20 Menu de Verrouillage 21 Menu de Chaîne 23 |